 
 
 
 
 
 
 


 
 
 
 
DRIVE SHAFT / PROPELLER SHAFT

PREPARATION

 
 
023DV-01

SST

	09214-76011	Crankshaft Pulley Replacer	FRONT AXLE HUB SUB-ASSY LH REAR AXLE HUB & BEARING ASSY LH
	09316-60011	Transmission & Transfer Bearing Replacer	PROPELLER W/CENTER BEARING SHAFT ASSY
	(09316-00011)	Replacer Pipe	PROPELLER W/CENTER BEARING SHAFT ASSY
	09330-50010	Worm Bearing Adjusting Screw Wrench	PROPELLER W/CENTER BEARING SHAFT ASSY
	09370-50010	Drive Line Angle Gauge	PROPELLER W/CENTER BEARING SHAFT ASSY
	09506-35010	Differential Drive Pinion Rear Bearing Replacer	PROPELLER W/CENTER BEARING SHAFT ASSY
	09520-00031	Rear Axle Shaft Puller	FRONT AXLE HUB SUB-ASSY LH
	09520-01010	Drive Shaft Remover Attachment	REAR DRIVE SHAFT
	09520-24010	Differential Side Gear Shaft Puller	REAR DRIVE SHAFT
	(09520-32040)	Shocker Set	REAR DRIVE SHAFT
	09608-00071	Drive Pinion Rear Bearing Cone Replacer	PROPELLER W/CENTER BEARING SHAFT ASSY
	09608-06041	Front Hub Inner Bearing Cone Replacer	PROPELLER W/CENTER BEARING SHAFT ASSY

	09628-00011	Ball Joint Puller	REAR DRIVE SHAFT REAR AXLE HUB & BEARING ASSY LH
	09628-10011	Ball Joint Puller	FRONT AXLE LH HUB BOLT REAR AXLE LH HUB BOLT
	09628-62011	Ball Joint Puller	STEERING KNUCKLE LH
	09922-10010	Variable Open Wrench	PROPELLER W/CENTER BEARING SHAFT ASSY
	09950-00020	Bearing Remover	PROPELLER W/CENTER BEARING SHAFT ASSY FRONT AXLE HUB SUB-ASSY LH

Recommended Tools

	(09043-20060)	Socket Hexagon Wrench 6	REAR DRIVE SHAFT
	(09043-20100)	Socket Hexagon Wrench 10	REAR DRIVE SHAFT
	09044-00020	Torx Socket E10	REAR DRIVE SHAFT REAR AXLE HUB & BEARING ASSY LH
	09905-00012	Snap Ring No.1 Expander	PROPELLER W/CENTER BEARING SHAFT ASSY

Equipment

Torque wrench	
Dial indicator with magnetic base	
Alignment tester	
Toe-in gauge	
Angle gauge	