 
 
 
 
 
 
 
 
 


PREPARATION

SST

	09308-00010 Oil Seal Puller	AUTOMATIC TRANSMISSION EXTENSION HOUSING OIL SEAL
	09309-37010 Transmission Bearing Replacer	AUTOMATIC TRANSMISSION EXTENSION HOUSING OIL SEAL
	09350-32014 TOYOTA Automatic Transmission Tool Set	AUTOMATIC TRANSMISSION ASSY TORQUE CONVERTER CLUTCH ASSY
	(09351-32010) One-way Clutch Test Tool	AUTOMATIC TRANSMISSION ASSY TORQUE CONVERTER CLUTCH ASSY
	(09351-32020) Stator Stopper	AUTOMATIC TRANSMISSION ASSY TORQUE CONVERTER CLUTCH ASSY
	09843-18040 Diagnosis Check Wire No.2	AUTOMATIC TRANSMISSION FLUID
	09922-10010 Variable Open Wrench	PARK/NEUTRAL POSITION SWITCH ASSY AUTOMATIC TRANSMISSION EXTENSION HOUSING OIL SEAL AUTOMATIC TRANSMISSION ASSY
	09930-00010 Drive Shaft Nut Chisel	AUTOMATIC TRANSMISSION EXTENSION HOUSING OIL SEAL
	09950-60010 Replacer Set	AUTOMATIC TRANSMISSION EXTENSION HOUSING OIL SEAL
	(09951-00350) Replacer 35	AUTOMATIC TRANSMISSION EXTENSION HOUSING OIL SEAL
	09950-70010 Handle Set	AUTOMATIC TRANSMISSION EXTENSION HOUSING OIL SEAL
	(09951-07100) Handle 100	AUTOMATIC TRANSMISSION EXTENSION HOUSING OIL SEAL

Recommended Tools

	09017-12301 Deep Socket Wrench 30 mm .	AUTOMATIC TRANSMISSION EXTENSION HOUSING OIL SEAL
	(09043-20060) Socket Hexagon Wrench 6	AUTOMATIC TRANSMISSION FLUID

Equipment

Straight edge	Torque converter
Vernier calipers	Torque converter
Dial indicator or dial indicator with magnetic base	Drive plate
Punch	
Torque wrench	

Lubricant

Automatic transmission fluid Dry fill Drain and refill	10.9 liter (11.5 US qts, 9.6 Imp.qts) 3.0 liter (3.2 US qts, 2.6 Imp.qts)	ATF WS
--	--	--------