


## REPLACEMENT

### 1. DISCONNECT REAR DRIVE SHAFT RH (See page 30-24)

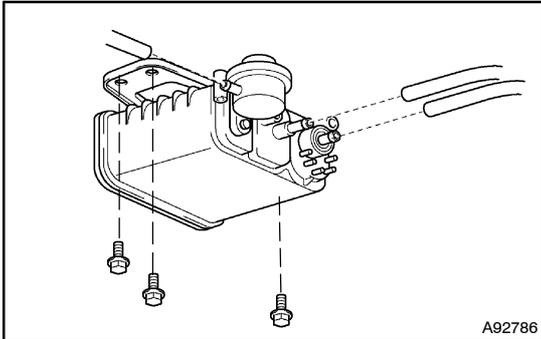

### 2. REMOVE CHARCOAL CANISTER ASSY

- (a) Disconnect the purge line hose, EVAP line hose and air inlet line hose from the charcoal canister.
- (b) Remove the 3 bolts and charcoal canister.

### 3. INSTALL CHARCOAL CANISTER ASSY

- (a) Install the charcoal canister with the 3 bolts.

**Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)**

- (b) Connect the purge line hose, EVAP line hose and air inlet line hose to the charcoal canister.

### 4. CONNECT REAR DRIVE SHAFT RH (See page 30-24)