


# CIRCUIT INSPECTION

## Power Source Circuit

### CIRCUIT DESCRIPTION

This circuit provides power to operate the rear RH seat ECU.

### WIRING DIAGRAM

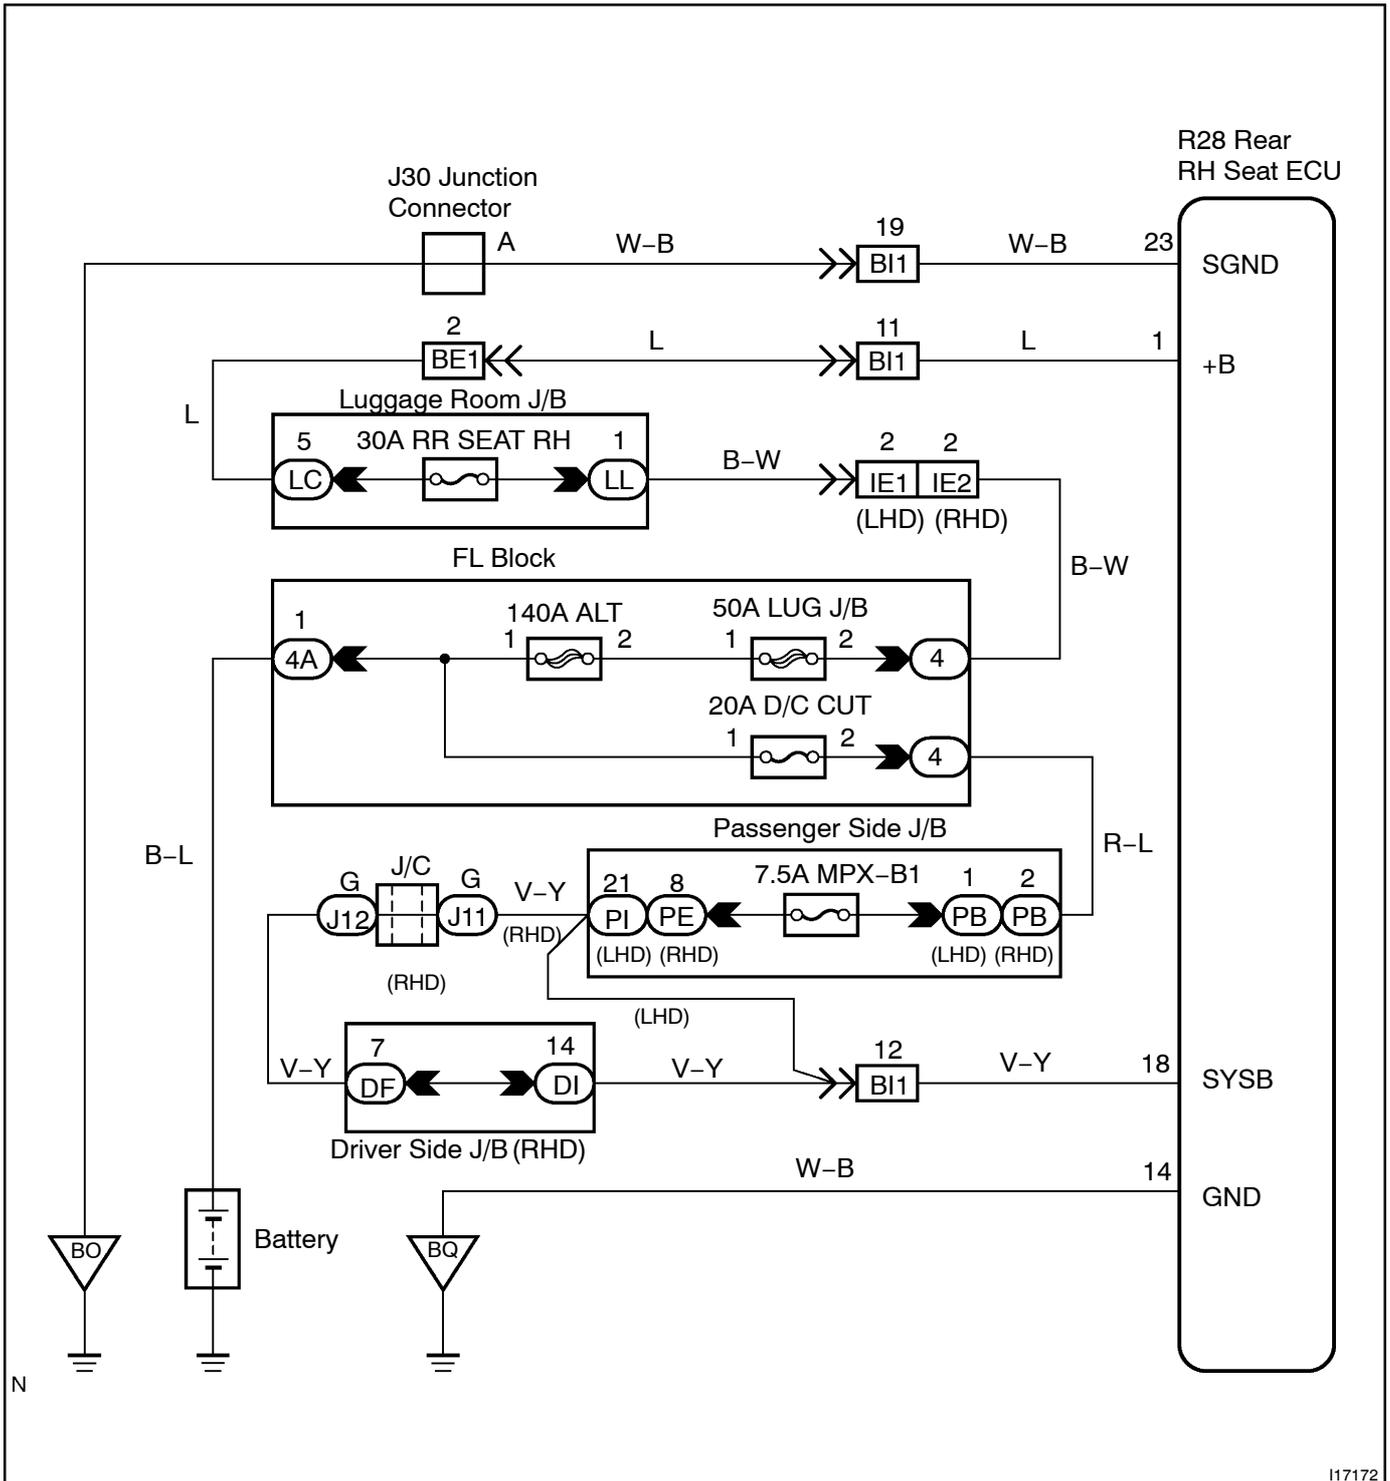

**INSPECTION PROCEDURE**

1 Check RR SEAT RH and MPX-B1 fuse.

**CHECK:**

Check continuity of RR SEAT RH and MPX-B1 fuse.

**OK:**

Continuity

NG

Replace the failure fuse.

OK

2 Check voltage between terminals +B, SYSB and GND of rear RH seat ECU connector.

**PREPARATION:**

- (a) Turn the ignition switch OFF.
- (b) Disconnect the rear RH seat ECU connector.

**CHECK:**

Measure voltage between terminals +B, SYSB and GND.

**OK:**

Voltage: 10 - 14 V

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-765).

NG

3 Check harness and connector between rear RH seat ECU and body ground (See page IN-35).

OK

Repair or replace harness or connector.

NG

Proceed to next circuit inspection shown on problem symptom table (See page DI-765).