


## Cellular Phone Communication Circuit

### CIRCUIT DESCRIPTION

This circuit detects the state of the steering pad switch and sends it to the cellular phone.

### WIRING DIAGRAM

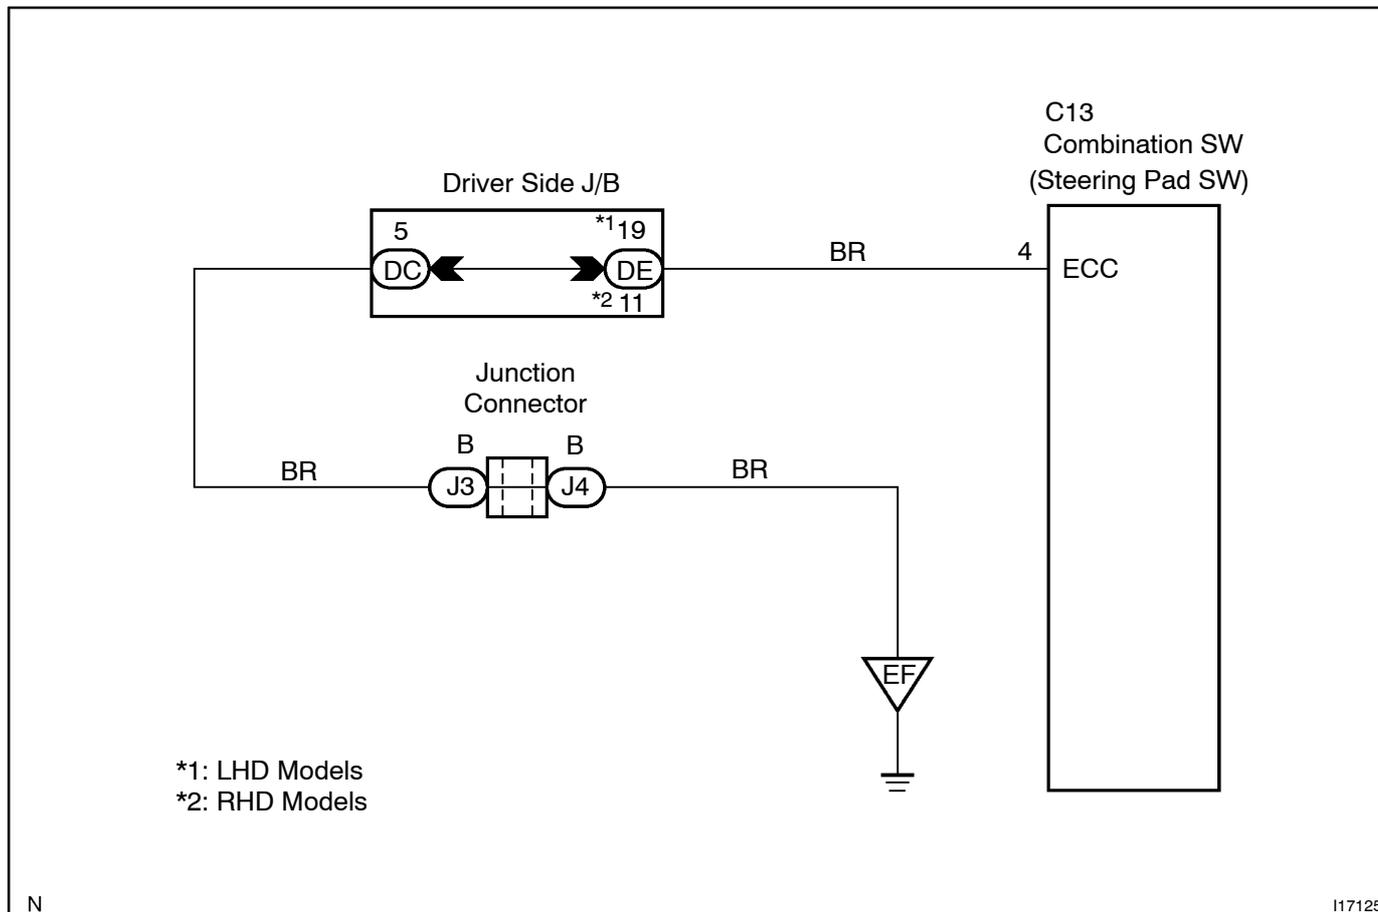

**INSPECTION PROCEDURE**

1 Check TEL ECU (See page DI-1533).

NG

Replace TEL ECU.

OK

2 Check wireharness and connector between TEL ECU and steering pad switch ECU (See page IN-35).

NG

Repair or replace wireharness connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-974).