


Power window switch circuit

CIRCUIT DESCRIPTION

Each terminal sends the following information to rear door LH ECU.

Terminal name	Switch name
AUTO, MUP, MDN	Rear left door power window switch

WIRING DIAGRAM

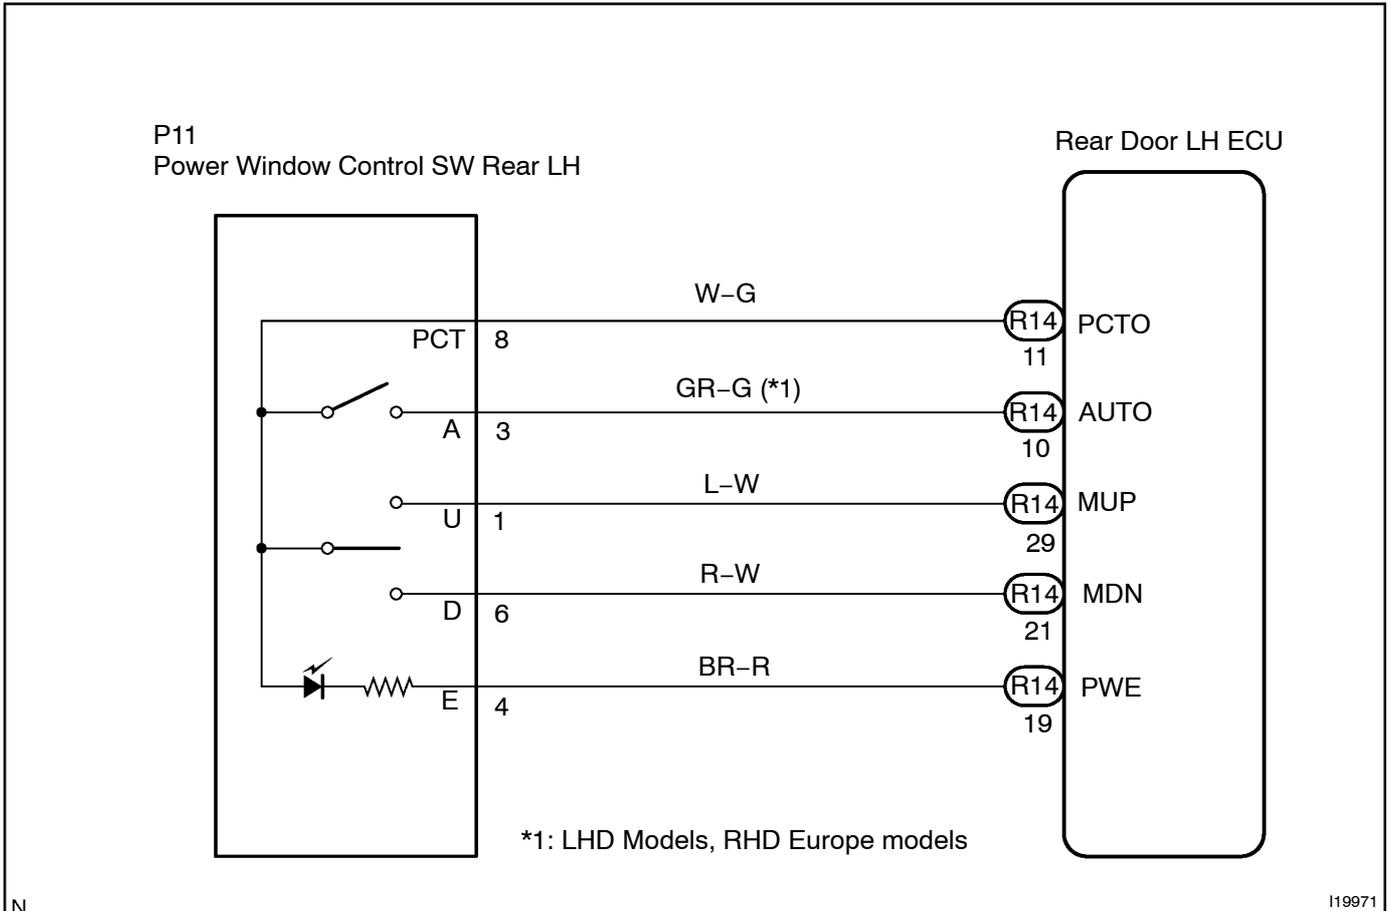

INSPECTION PROCEDURE

1 Check power window switch circuit using DTC check (See page DI-1340).

OK

Proceed to next circuit inspection shown on problem symptoms tables. (See page DI-1339)

NG

2 Check power window switch (See page BE-85).

NG

Replace power window switch.

OK

3 Check wireharness and connector between power window switch and rear door LH ECU. (See page IN-35)

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1339).