


Position of Parts in Engine Compartment <LHD 1VD-FTV>

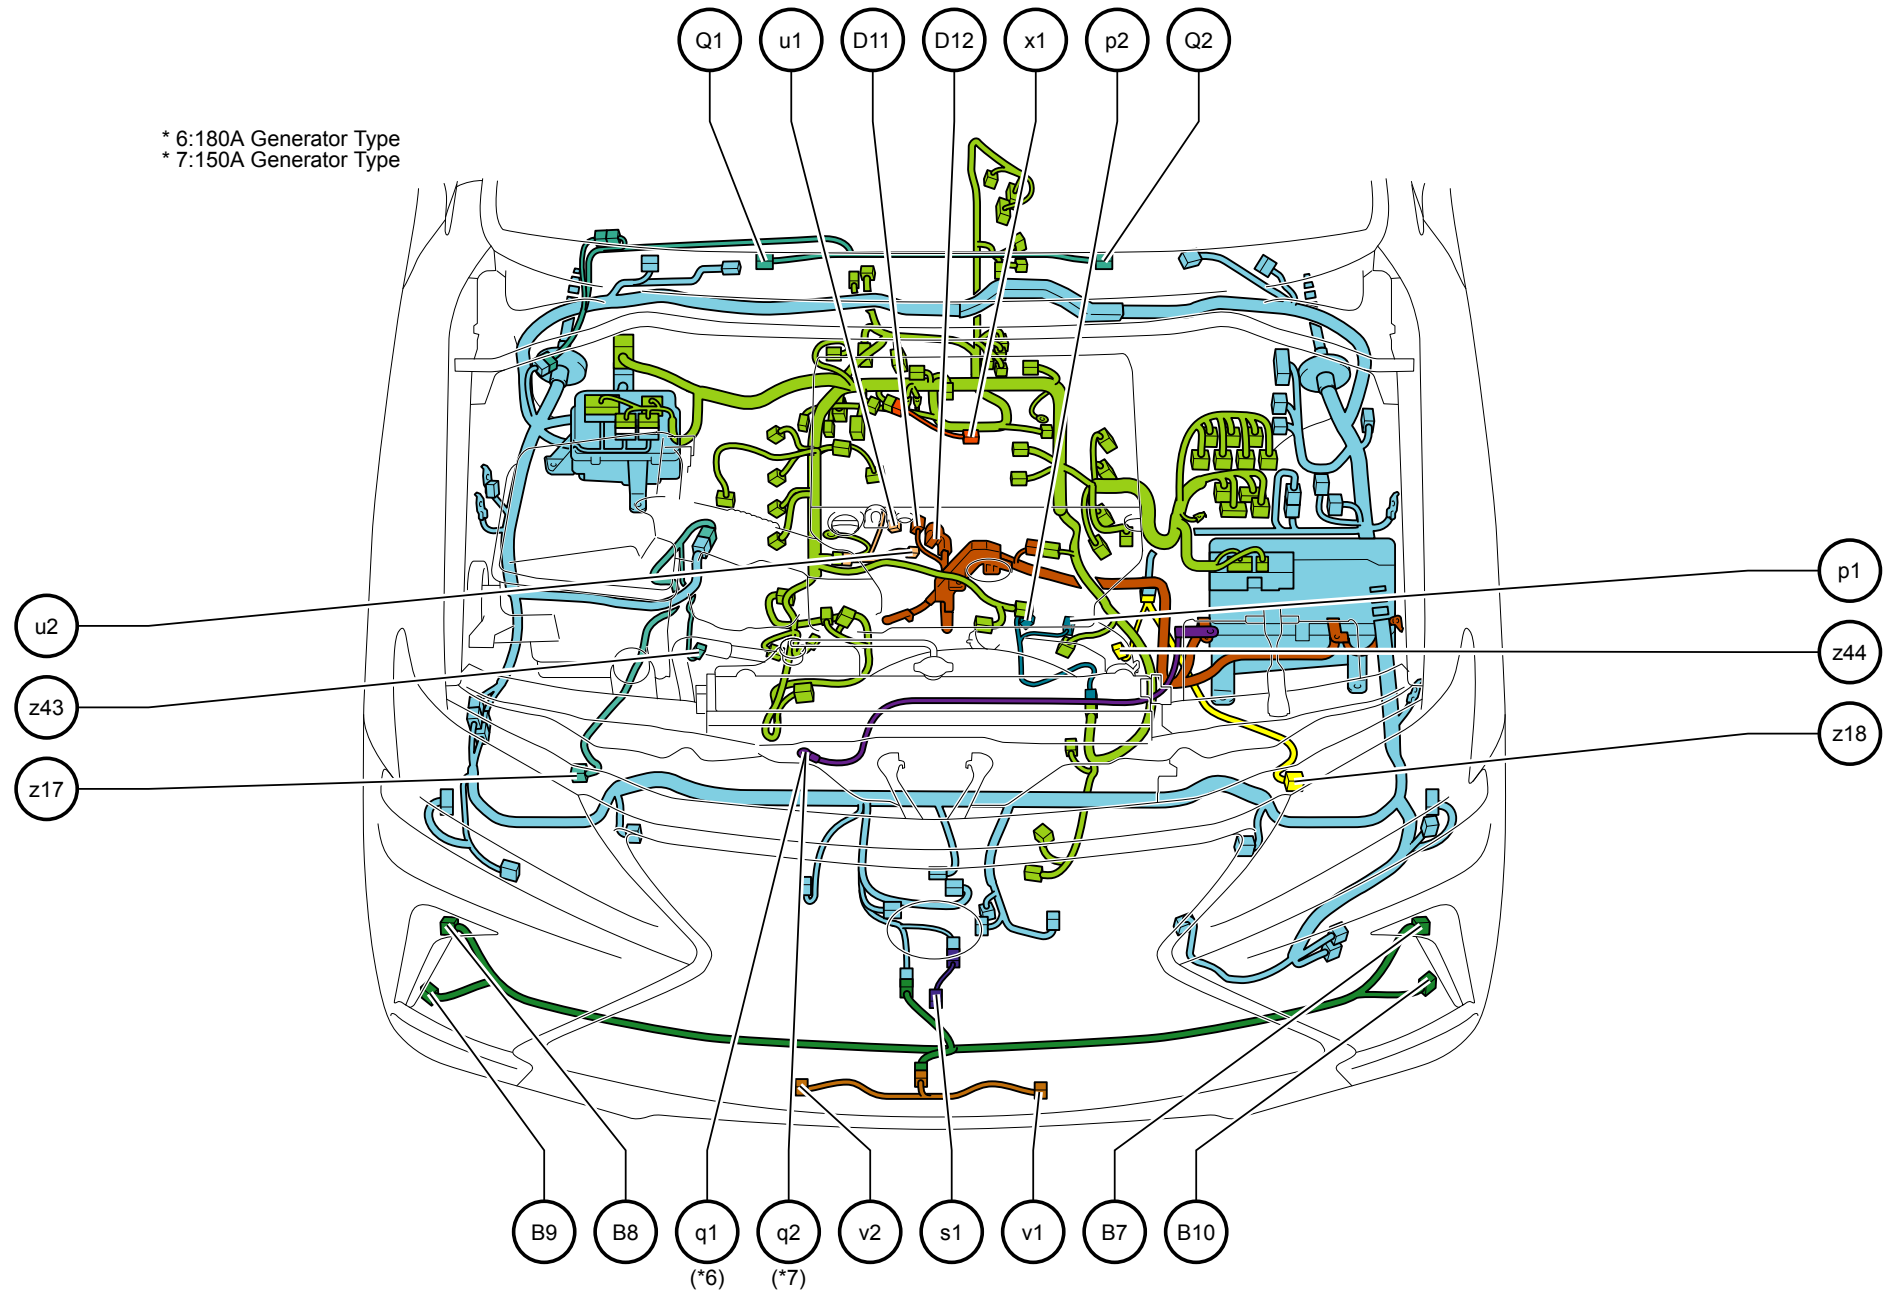

- B 7 Fog Light Assembly LH
- B 8 Fog Light Assembly RH
- B 9 No. 1 Ultrasonic Sensor RH
- B 10 No. 1 Ultrasonic Sensor LH

- D 11 Starter Assembly
- D 12 Starter Assembly

- Q 1 Washer Nozzle Sub-Assembly RH
- Q 2 Washer Nozzle Sub-Assembly LH

- p 1 DC Motor and Nozzle Vane Position Sensor LH
- p 2 DC Motor and Nozzle Vane Position Sensor LH

- q 1 Generator Assembly
- q 2 Generator Assembly

- s 1 Front Television Camera Assembly

- u 1 Suction Control Valve (Injection or Supply Pump Assembly)
- u 2 Fuel Temperature Sensor (Injection or Supply Pump Assembly)

- v 1 Front No. 2 Ultrasonic Sensor LH
- v 2 Front No. 2 Ultrasonic Sensor RH

- x 1 Pressure Discharge Valve

- z 17 Front Speed Sensor RH
- z 18 Front Speed Sensor LH
- z 43 Front Height Control Sensor Sub-Assembly RH
- z 44 Front Height Control Sensor Sub-Assembly LH

