

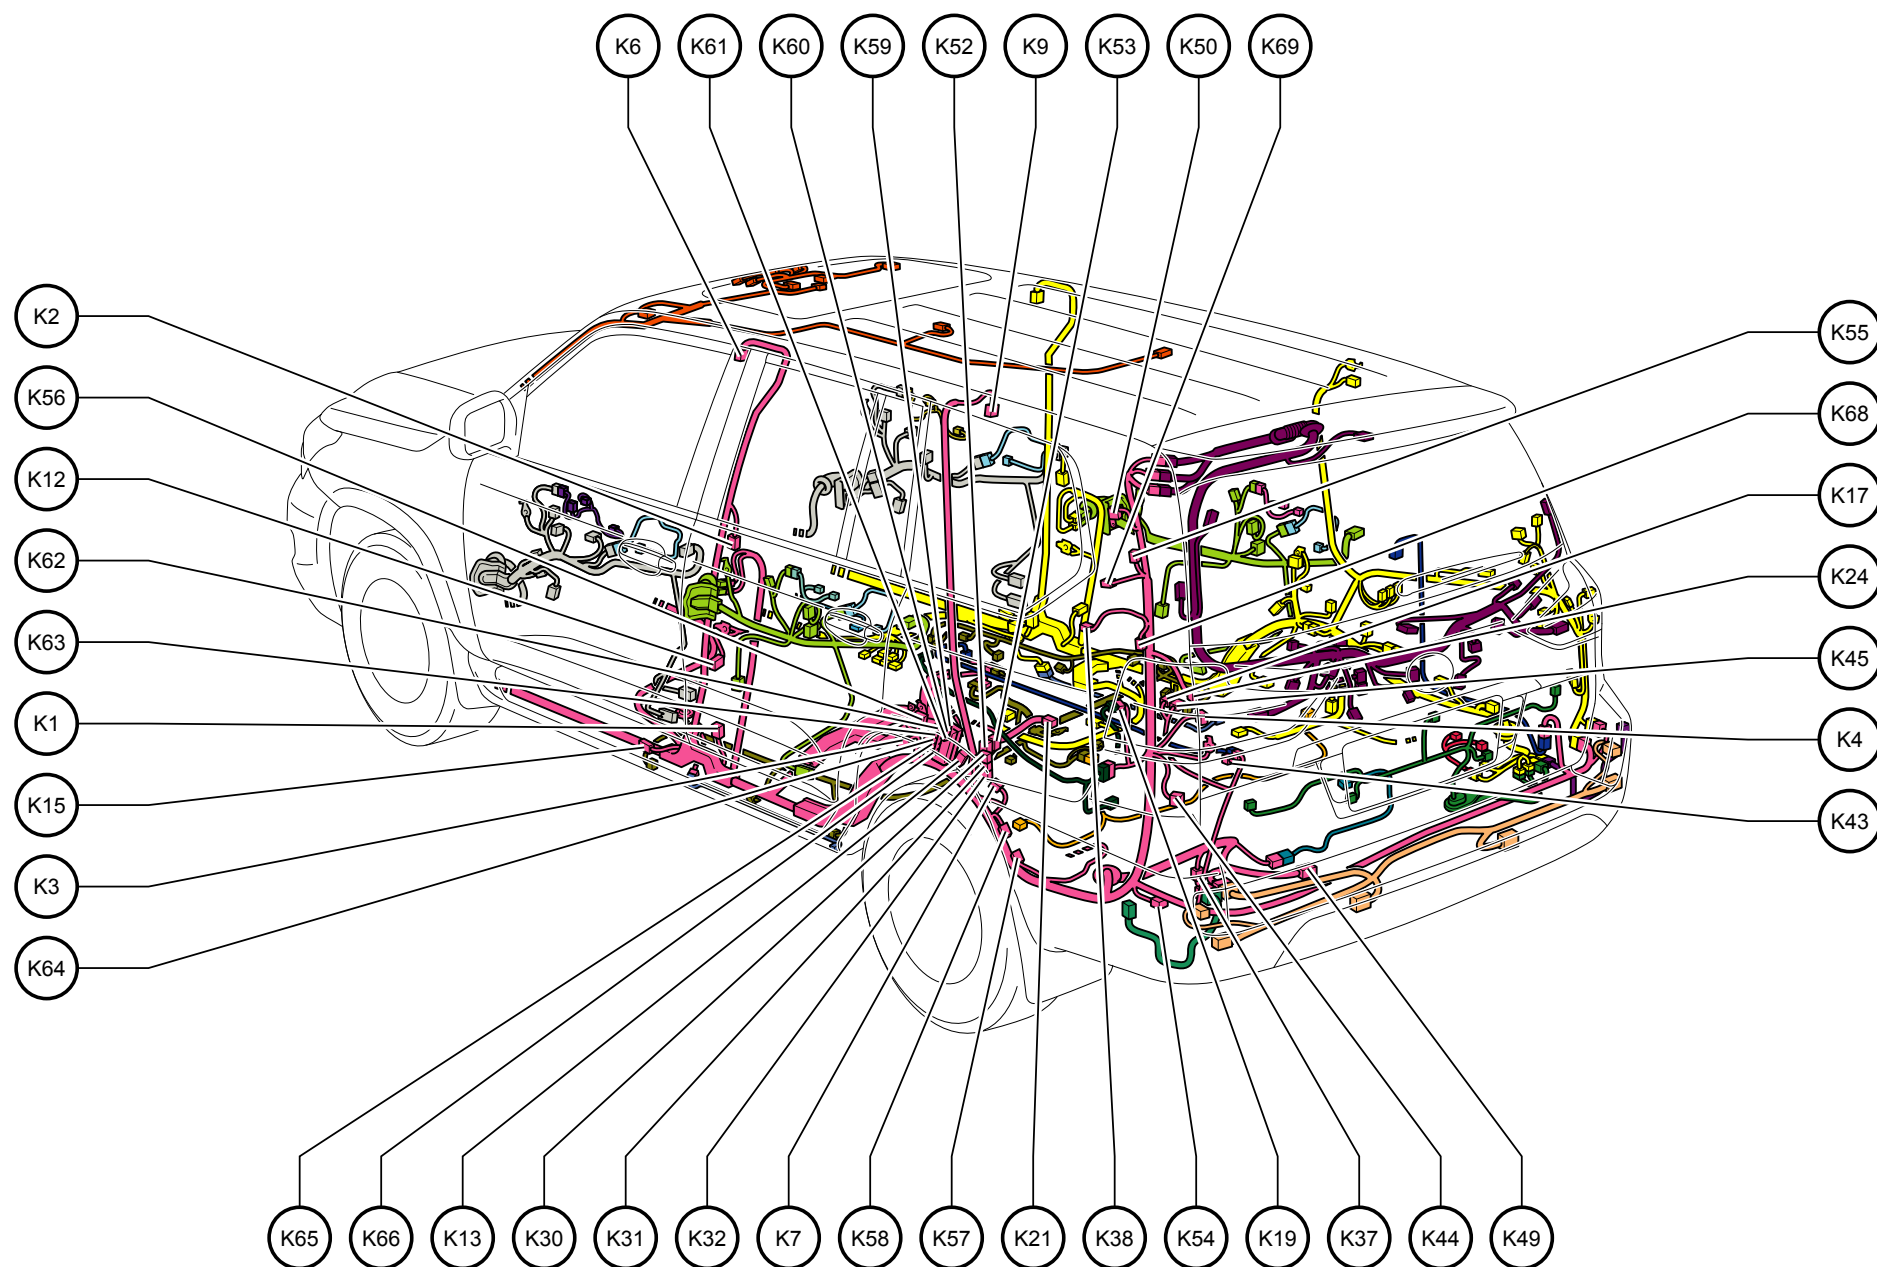
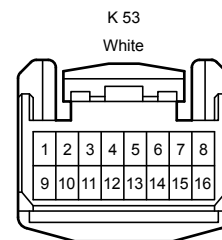
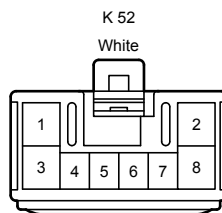
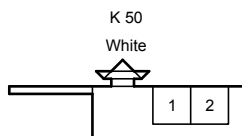
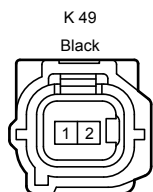
 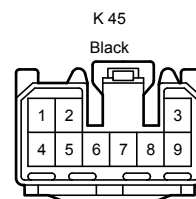
 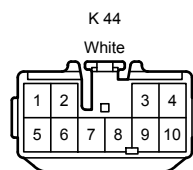
 


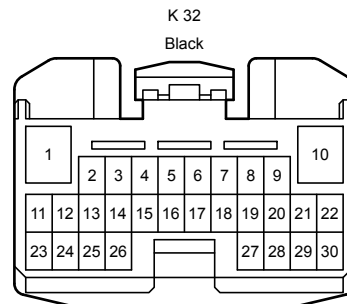
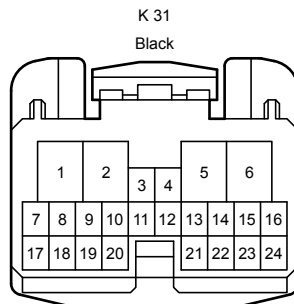
 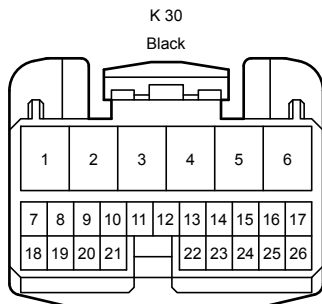
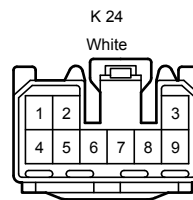

 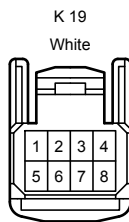
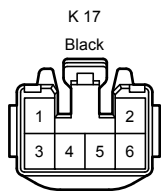
 
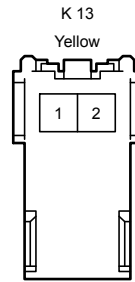

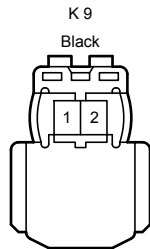
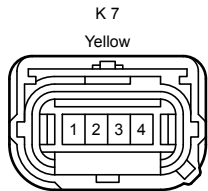
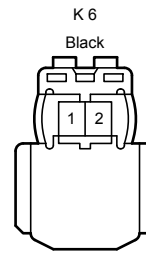


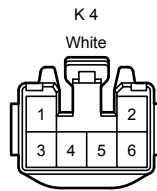

K	1	Front Pretensioner LH
K	2	Front Door Courtesy Light Switch Assembly LH
K	3	Rear Door Courtesy Light Switch Assembly LH
K	4	Rear Combination Light Assembly LH
K	6	Curtain Shield Airbag Assembly LH
K	7	Rear Side Airbag Sensor Assembly LH
K	9	Curtain Shield Airbag Assembly LH
K	12	Front Tension Reducer LH
K	13	Rear Pretensioner LH
K	15	No.2 Interior Illumination Light Assembly
K	17	Power Outlet Socket Assembly
K	19	Rear A/C Blower Assembly
K	21	Cooler Thermistor LH
K	24	Towing Converter
K	30	Suspension Control ECU
K	31	Suspension Control ECU
K	32	Suspension Control ECU
K	37	Power Back Door Buzzer
K	38	Rear No.2 Seat Closer Motor LH
K	43	Rear Power Outlet Socket Assembly
K	44	Voltage Inverter Assembly
K	45	Power Outlet Socket Assembly
K	49	Outside Luggage Electrical Key Antenna
K	50	Noise Filter (Rear Window Defogger and Stop)
K	52	Parking Brake ECU Assembly
K	53	Parking Brake ECU Assembly
K	54	Diode
K	55	Diode (Stop Light)
K	56	Junction Connector
K	57	Junction Terminal
K	58	Junction Terminal
K	59	Junction Connector
K	60	Junction Connector
K	61	Junction Connector
K	62	Junction Connector
K	63	Junction Connector
K	64	Junction Connector
K	65	Junction Connector
K	66	Junction Connector
K	68	Towing Converter
K	69	Theft Warning Sensor Cord Sub-Assembly LH

Position of Parts in Body <LHD From Sep. 2015 Production>

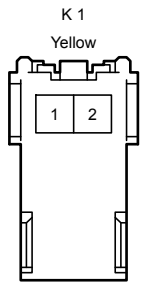

Position of Parts in Body <LHD From Sep. 2015 Production>

