


Position of Parts in Seat <RHD Front Seat From Sep. 2015 Production>

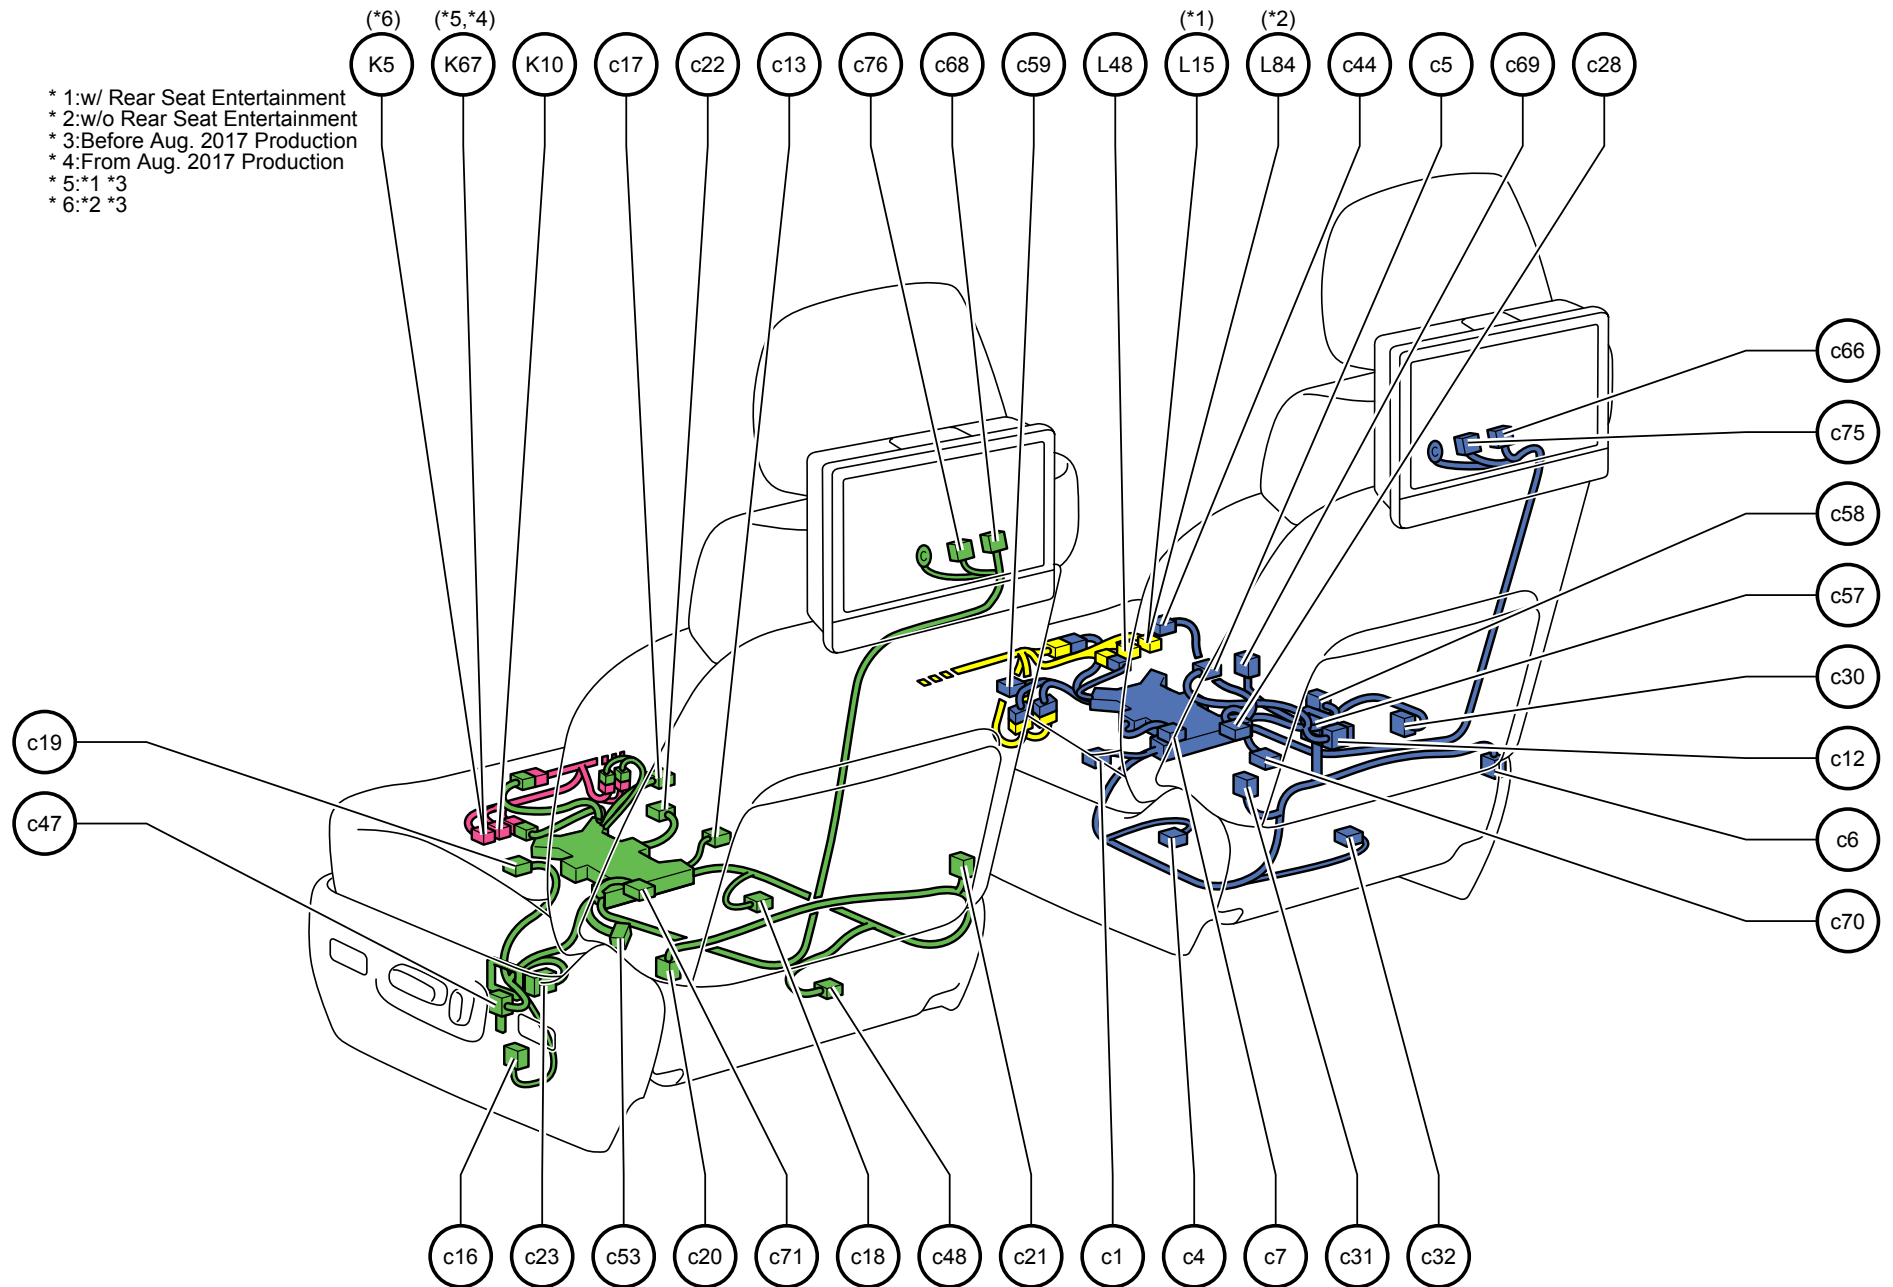

K	5	Front Side Airbag Squib Circuit LH
K	10	Front Seat Inner Belt Assembly LH
K	67	Front Side Airbag Squib Circuit LH
L	15	Front Side Airbag Squib Circuit RH
L	48	Front Seat Inner Belt Assembly RH
L	84	Front Side Airbag Squib Circuit RH
c	1	Front Seat Heater Assembly RH
c	4	Front Power Seat Lift Position Motor Assembly RH
c	5	Front Power Seat Vertical Position Motor Assembly RH
c	6	Front Power Seat Reclining Position Motor Assembly RH
c	7	Front Seat Inner Belt Assembly RH
c	12	Junction Connector
c	13	Front Seat Heater Assembly LH
c	16	Front Power Seat Switch Assembly LH
c	17	Front Power Seat Slide Position Motor Assembly LH
c	18	Front Power Seat Lift Position Motor Assembly LH
c	19	Front Power Seat Vertical Position Motor Assembly LH
c	20	Front Power Seat Reclining Position Motor Assembly LH
c	21	Front Lumbar Support Forward and Back Motor Assembly LH
c	22	Front Seat Inner Belt Assembly LH
c	23	Junction Connector
c	28	Front Seat Climate Control Blower RH
c	30	Front Power Seat Switch Assembly RH
c	31	Front Lumbar Support Forward and Back Motor Assembly RH
c	32	Rear Foot Light RH (No.1 Interior Illumination Light Assembly)
c	44	Front Power Seat Cushion Control Motor Assembly RH
c	47	Front Power Seat Switch Assembly LH
c	48	Rear Foot Light LH (No.1 Interior Illumination Light Assembly)
c	53	Front Seat Inner Belt Assembly LH
c	57	Front Power Seat Control ECU and Switch RH
c	58	Front Power Seat Control ECU and Switch RH
c	59	Front Power Seat Slide Position Motor Assembly RH
c	66	Television Display Assembly RH
c	68	Television Display Assembly LH
c	69	Seat Variable Cushion Switch
c	70	Front Seat Inner Belt Assembly RH
c	71	Front Seat Climate Control Blower LH
c	75	Television Display Assembly RH
c	76	Television Display Assembly LH

Position of Parts in Seat <RHD Front Seat From Sep. 2015 Production>

