



Position of Parts in Engine Compartment <RHD 1UR-FE>

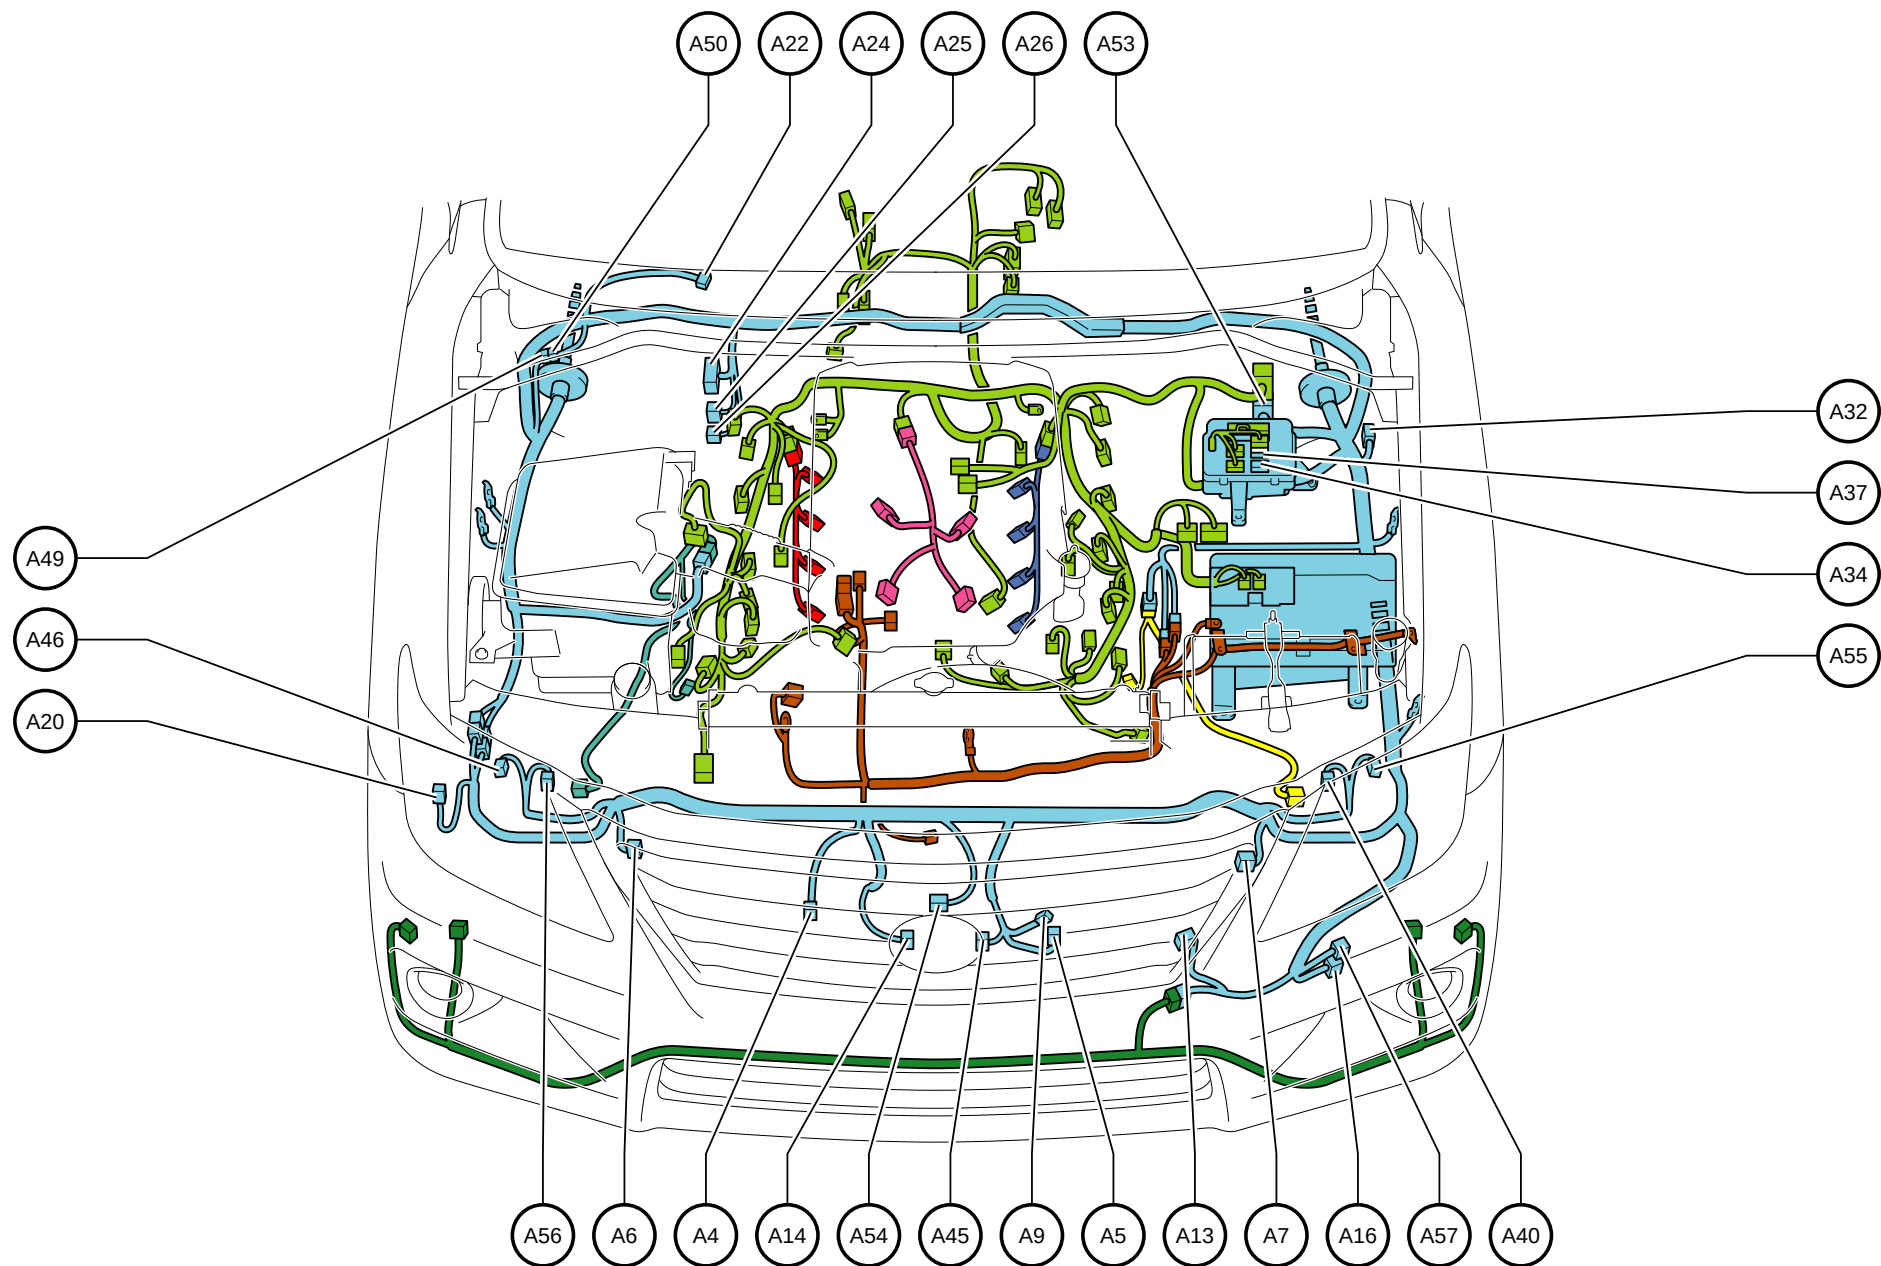

- A 4 High Pitched Horn Assembly
- A 5 Low Pitched Horn Assembly
- A 6 Front Airbag Sensor RH
- A 7 Front Airbag Sensor LH
- A 9 Condenser Blower Motor Assembly
- A 13 A/C Pressure Sensor
- A 14 Ambient Temperature Sensor
- A 16 Windshield Washer Motor and Pump Assembly
- A 20 Wireless Door Lock Buzzer
- A 22 Windshield Wiper Motor Assembly
- A 24 Skid Control ECU with Actuator Assembly
- A 25 Skid Control ECU with Actuator Assembly
- A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 32 Noise Filter
- A 34 Junction Connector
- A 37 Junction Connector
- A 40 Headlight Assembly LH
- A 45 Exhaust Gas Sensor
- A 46 Headlight Assembly RH
- A 49 Short Connector
- A 50 Short Connector
- A 53 ECM
- A 54 Engine Hood Courtesy Switch
- A 55 Headlight Assembly LH
- A 56 Headlight Assembly RH
- A 57 Headlight Cleaner Control Relay and Motor

Position of Parts in Engine Compartment <RHD 1UR-FE>

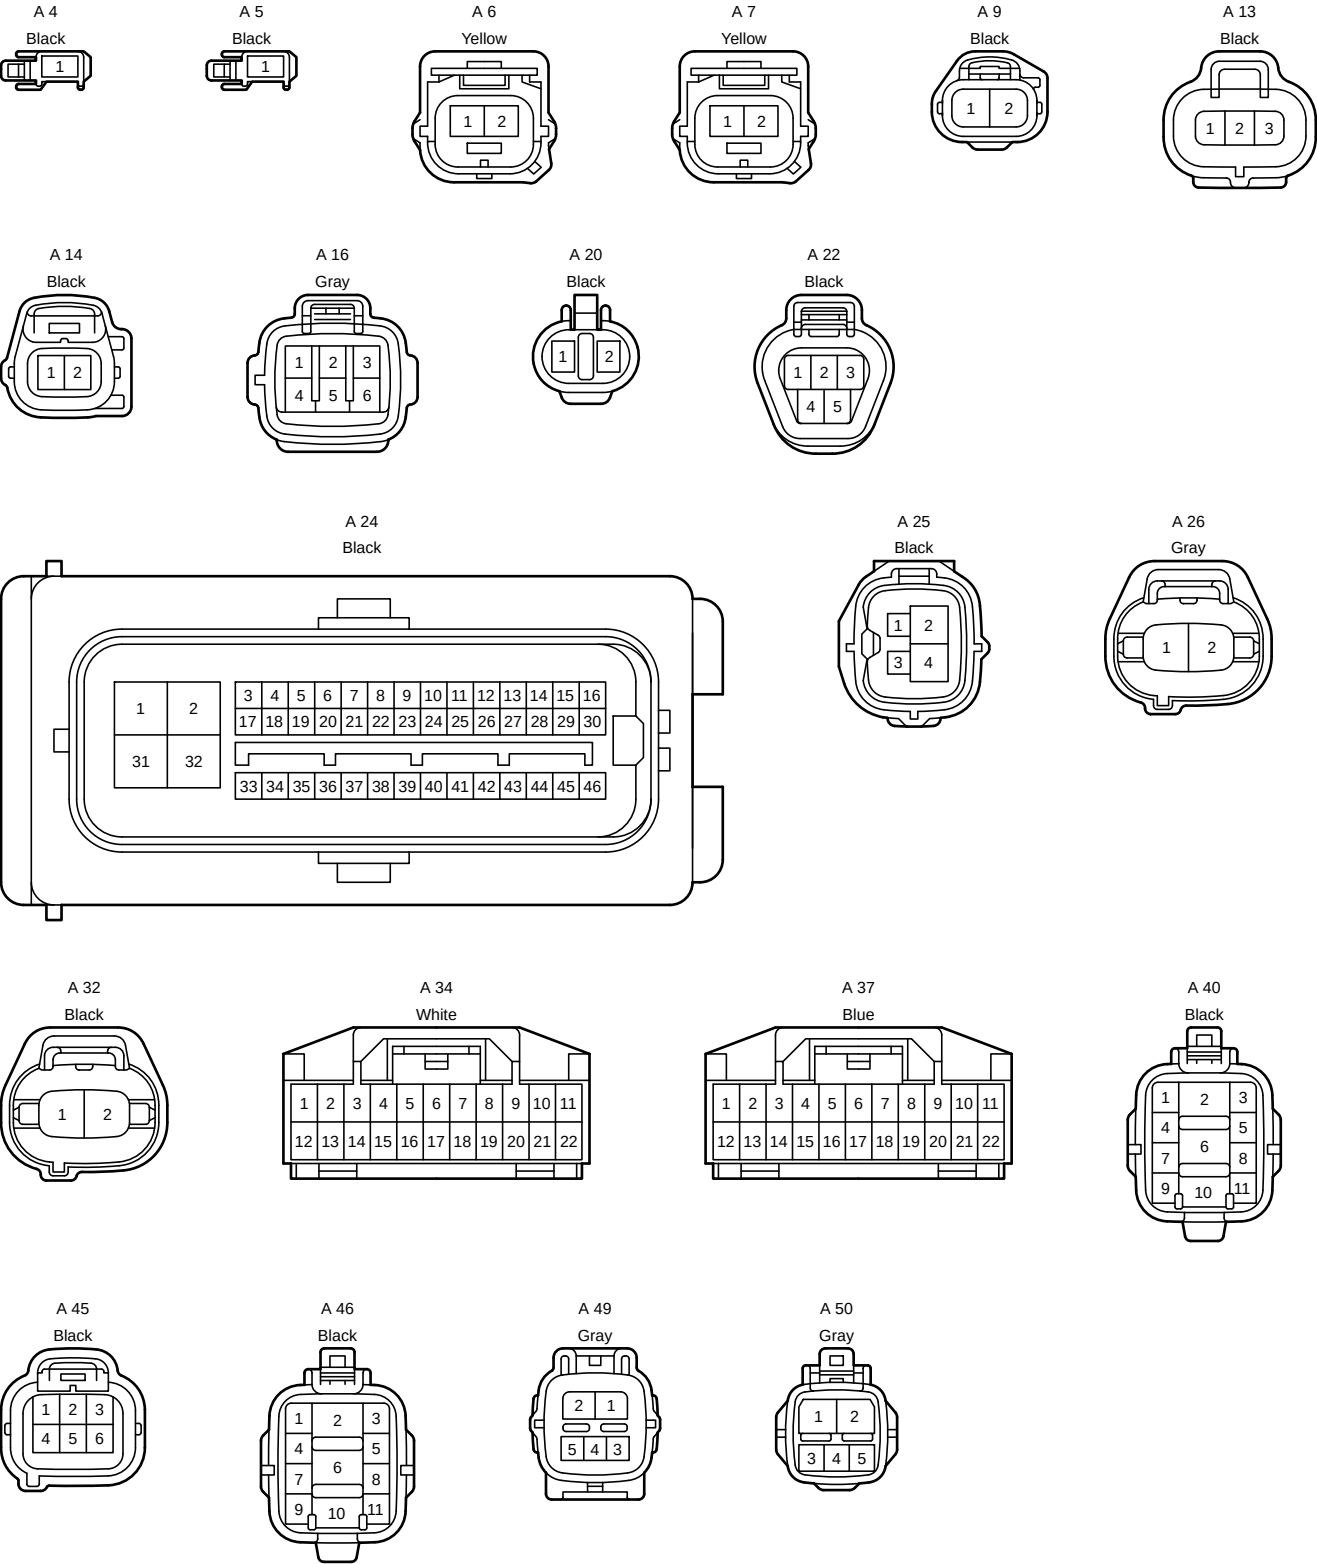

Position of Parts in Engine Compartment <RHD 1UR-FE>

