

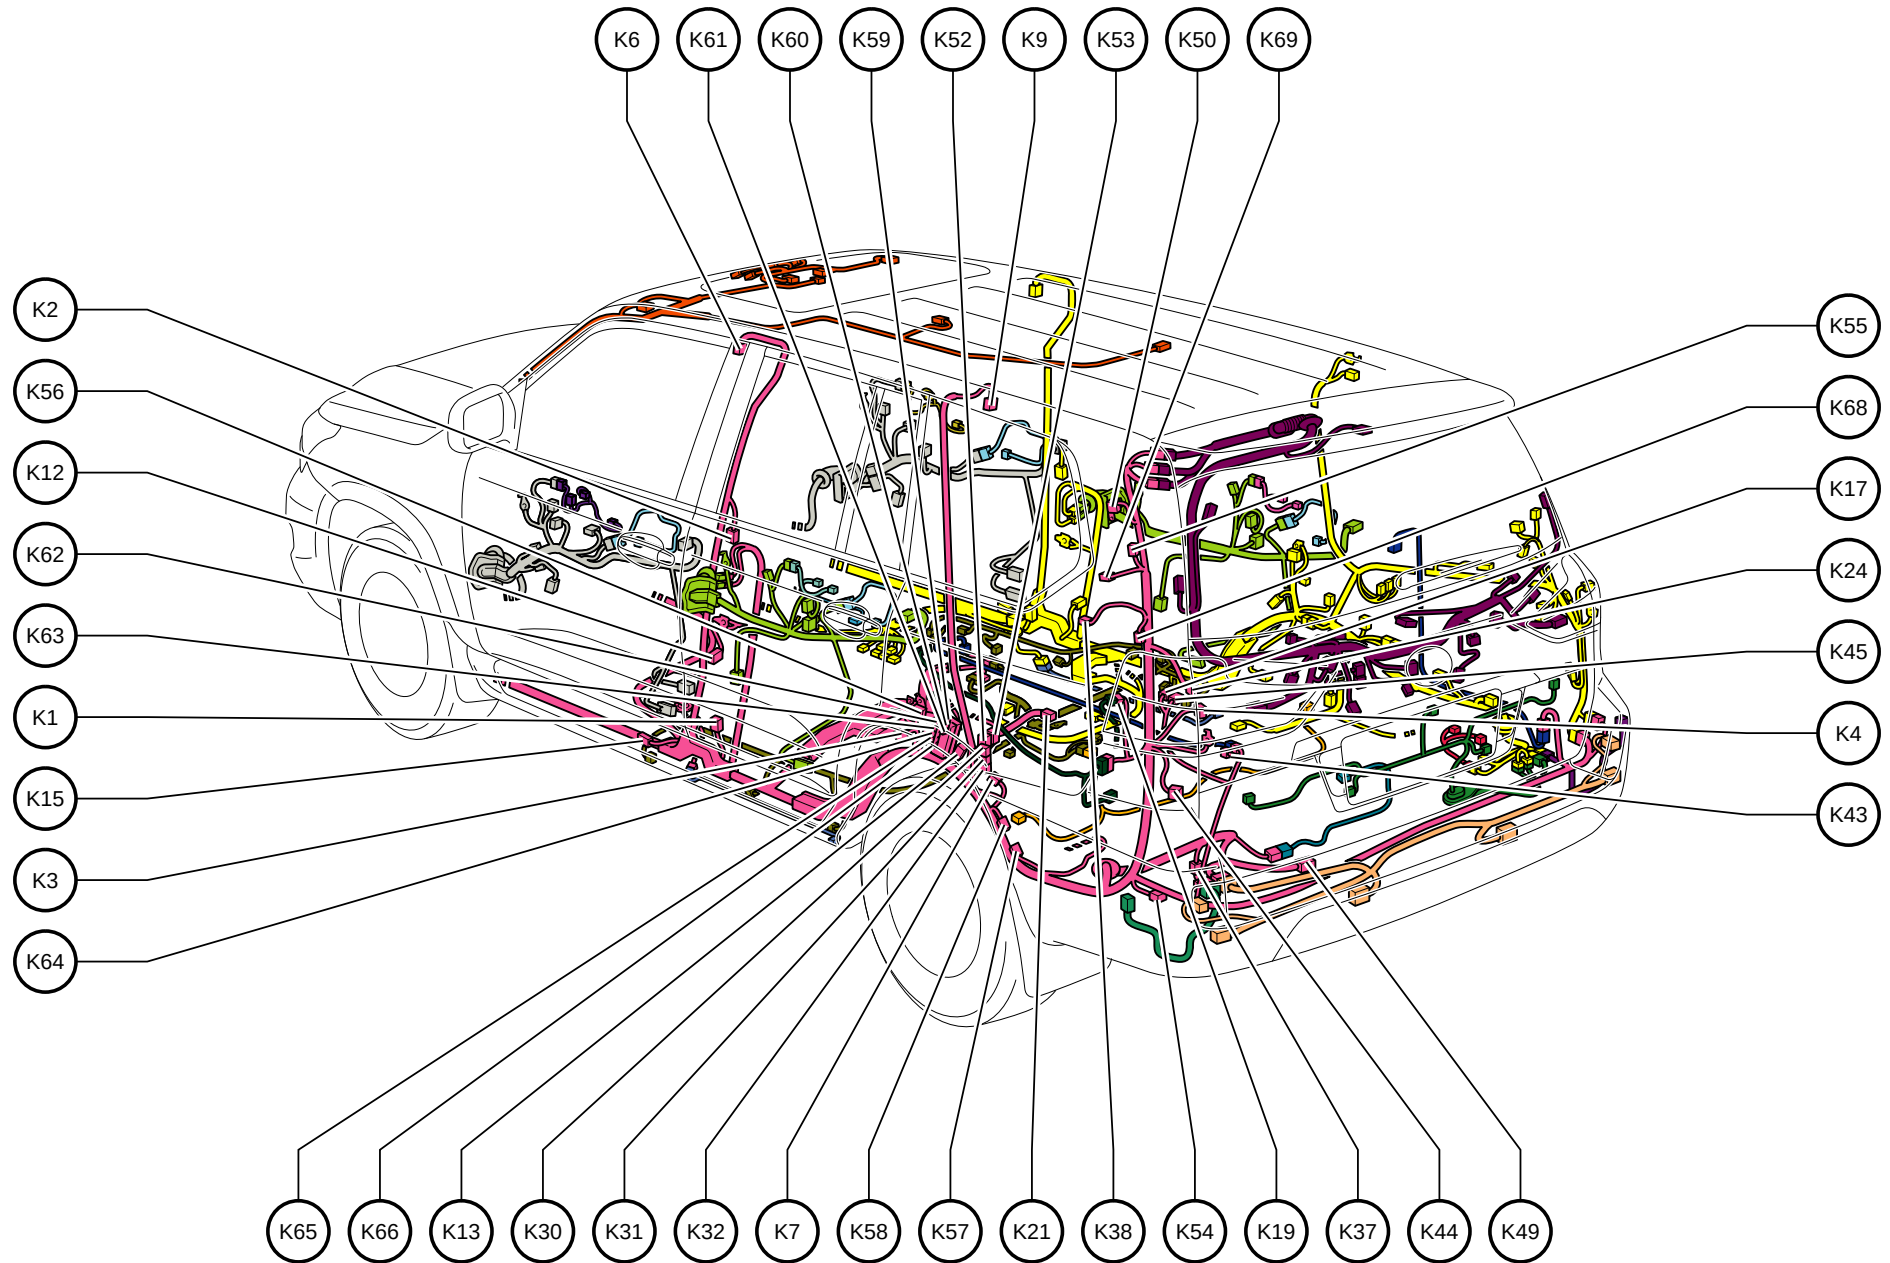
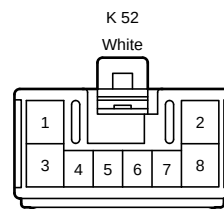
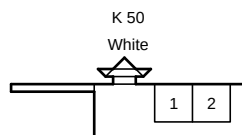
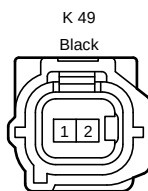
 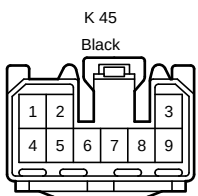
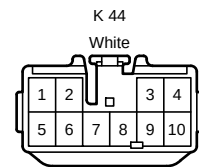

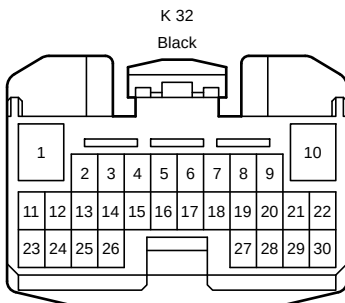
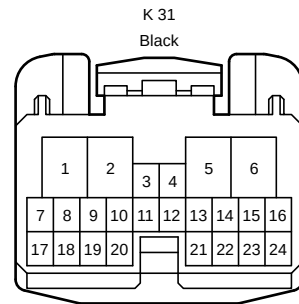
 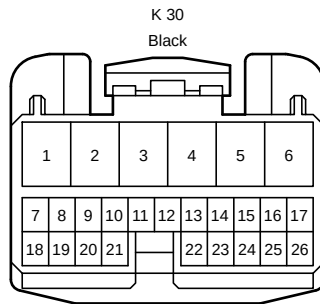
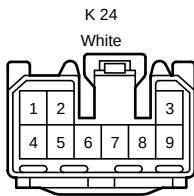

 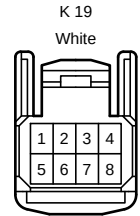
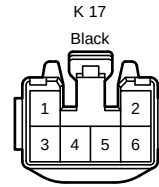
 
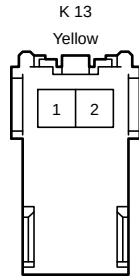

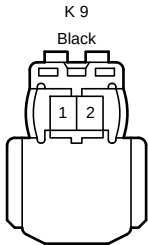
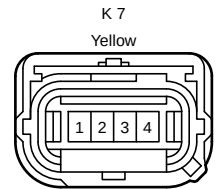
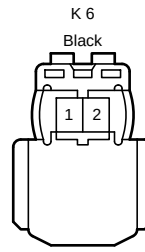


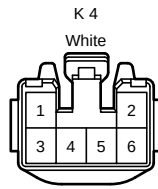

K 1 Front Pretensioner LH
K 2 Front Door Courtesy Light Switch Assembly LH
K 3 Rear Door Courtesy Light Switch Assembly LH
K 4 Rear Combination Light Assembly LH
K 6 Curtain Shield Airbag Assembly LH
K 7 Rear Side Airbag Sensor Assembly LH
K 9 Curtain Shield Airbag Assembly LH
K 12 Front Tension Reducer LH
K 13 Rear Pretensioner LH
K 15 No.2 Interior Illumination Light Assembly
K 17 Power Outlet Socket Assembly
K 19 Rear A/C Blower Assembly
K 21 Cooler Thermistor LH
K 24 Towing Converter
K 30 Suspension Control ECU
K 31 Suspension Control ECU
K 32 Suspension Control ECU
K 37 Power Back Door Buzzer
K 38 Rear No.2 Seat Closer Motor LH
K 43 Rear Power Outlet Socket Assembly
K 44 Voltage Inverter Assembly
K 45 Power Outlet Socket Assembly
K 49 Outside Luggage Electrical Key Antenna
K 50 Noise Filter (Rear Window Defogger and Stop)
K 52 Parking Brake ECU Assembly
K 53 Parking Brake ECU Assembly
K 54 Diode
K 55 Diode (Stop Light)
K 56 Junction Connector
K 57 Junction Terminal
K 58 Junction Terminal
K 59 Junction Connector
K 60 Junction Connector
K 61 Junction Connector
K 62 Junction Connector
K 63 Junction Connector
K 64 Junction Connector
K 65 Junction Connector
K 66 Junction Connector
K 68 Towing Converter
K 69 Theft Warning Sensor Cord Sub-Assembly LH

Position of Parts in Body <LHD From Sep. 2015 Production>

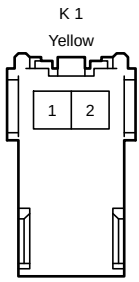

Position of Parts in Body <LHD From Sep. 2015 Production>

