



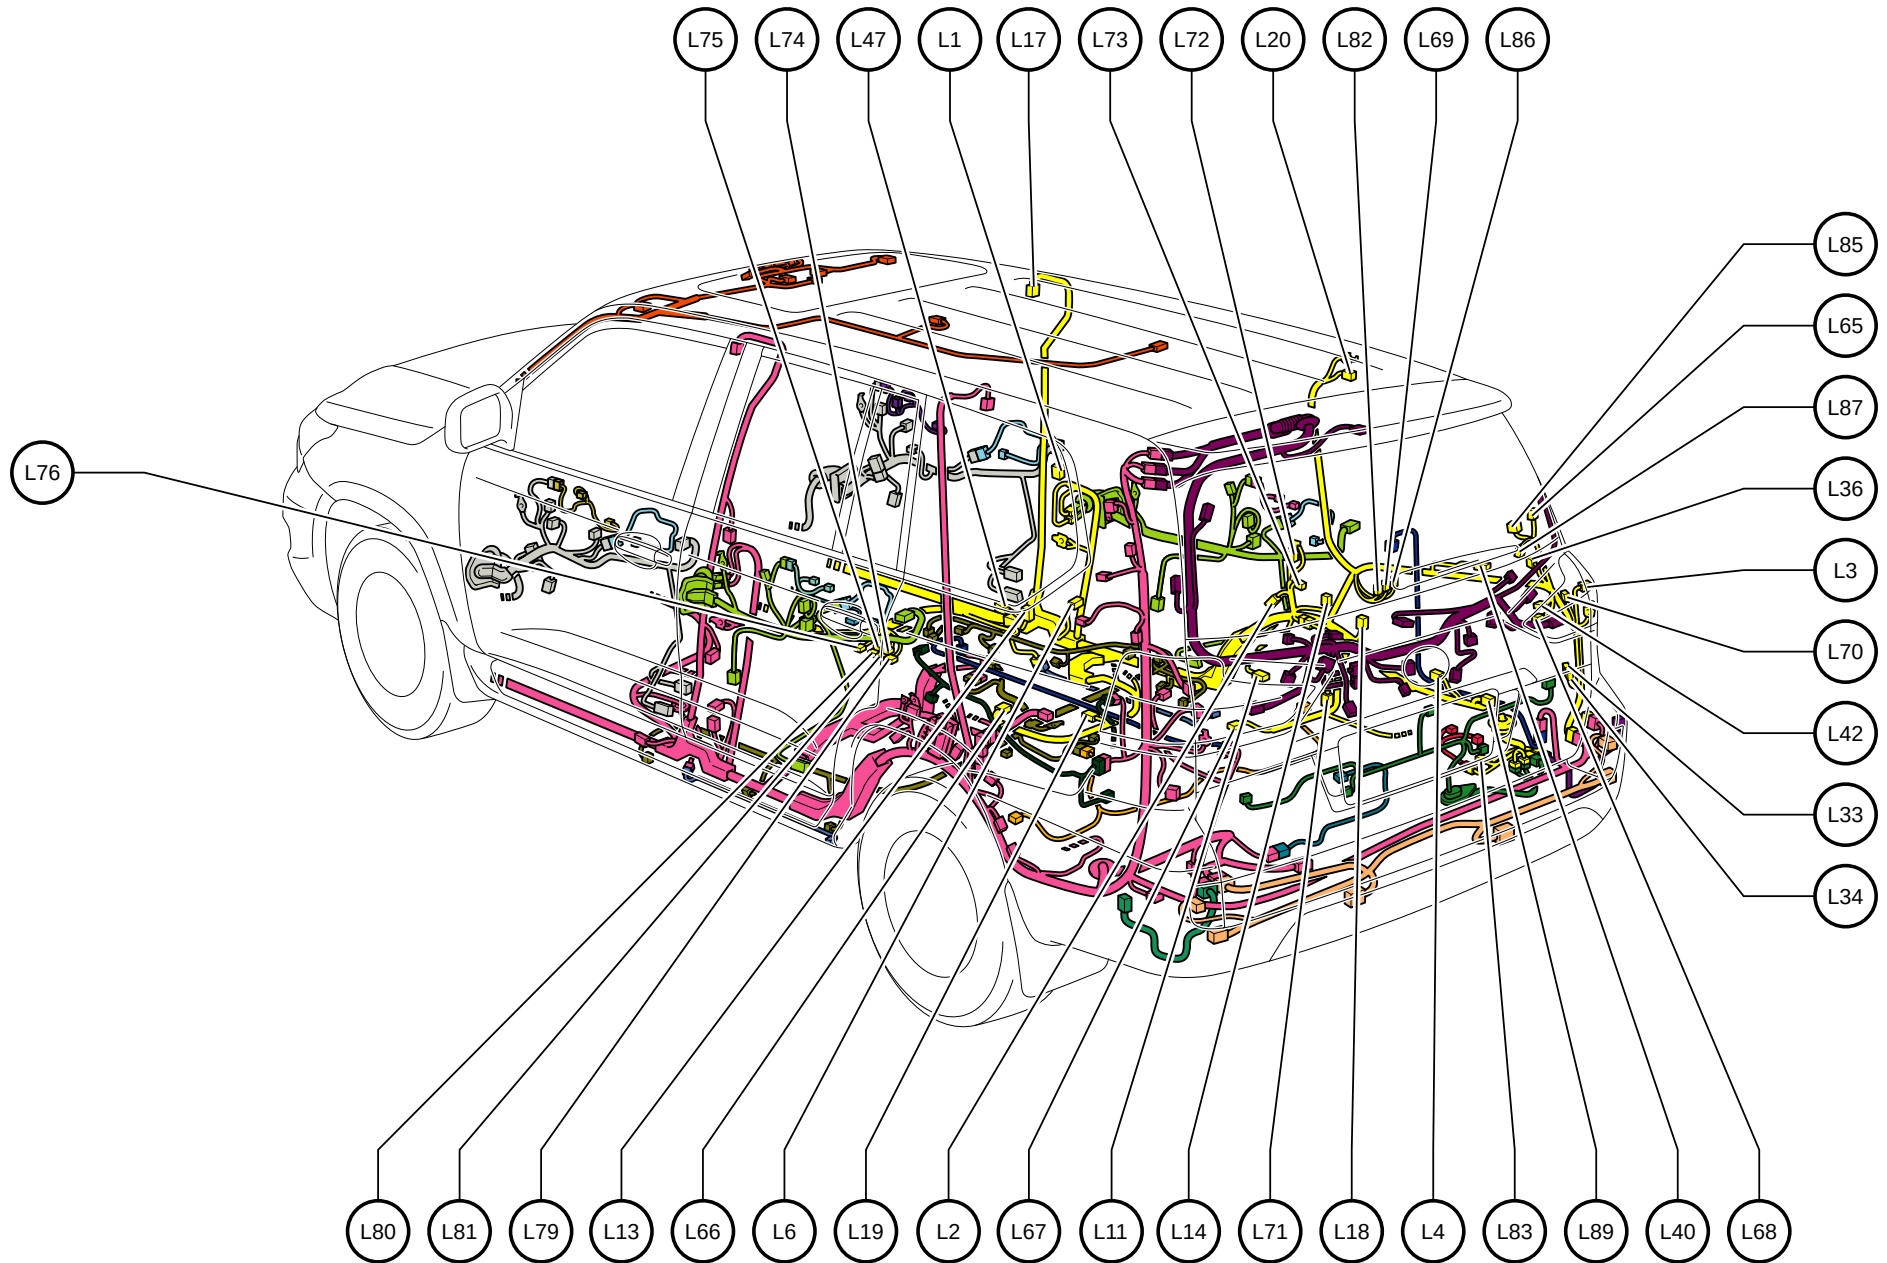

- L 1 Front Door Courtesy Light Switch Assembly RH
- L 2 Rear Door Courtesy Light Switch Assembly RH
- L 3 Rear Combination Light Assembly RH
- L 4 No.1 with Box Speaker Assembly
- L 6 Front Tension Reducer RH
- L 11 Cooler Thermistor RH
- L 13 Front Pretensioner RH
- L 14 Rear Pretensioner RH
- L 17 Curtain Shield Airbag Assembly RH
- L 18 Rear Side Airbag Sensor Assembly RH
- L 19 Rear Floor Side Airbag Sensor
- L 20 Curtain Shield Airbag Assembly RH
- L 33 No.2 Multiplex Network Body ECU
- L 34 No.2 Multiplex Network Body ECU
- L 36 Power Back Door Unit Assembly
- L 40 Rear No.2 Seat Closer Motor RH
- L 42 Fold Seat Switch Assembly
- L 47 No.1 Interior Illumination Light Assembly
- L 65 Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
- L 66 No. 2 Indoor Electrical Key Antenna Assembly
- L 67 No. 3 Indoor Electrical Key Antenna Assembly
- L 68 No. 1 Luggage Compartment Light Assembly
- L 69 Tire Pressure Warning ECU and Receiver (Electrical Key & Tire Pressure Warning System Receiver Assembly)
- L 70 Diode
- L 71 Junction Terminal
- L 72 Junction Connector
- L 73 Junction Connector
- L 74 Multi-Display Controller Sub-Assembly
- L 75 Multi-Display Controller Sub-Assembly
- L 76 Multi-Display Controller Sub-Assembly
- L 79 Multi-Display Controller Sub-Assembly
- L 80 Multi-Display Controller Sub-Assembly
- L 81 Multi-Display Controller Sub-Assembly
- L 82 Tire Pressure Warning ECU and Receiver (Tire Pressure Warning Receiver Assembly)
- L 83 Height Control Pump and Motor Assembly
- L 85 Door Control Receiver
- L 86 Tire Pressure Warning ECU and Receiver (Tire Pressure Warning Receiver Assembly)
- L 87 Theft Warning Sensor Cord Sub-Assembly RH
- L 89 Option Connector

Position of Parts in Body <RHD From Sep. 2015 Production>

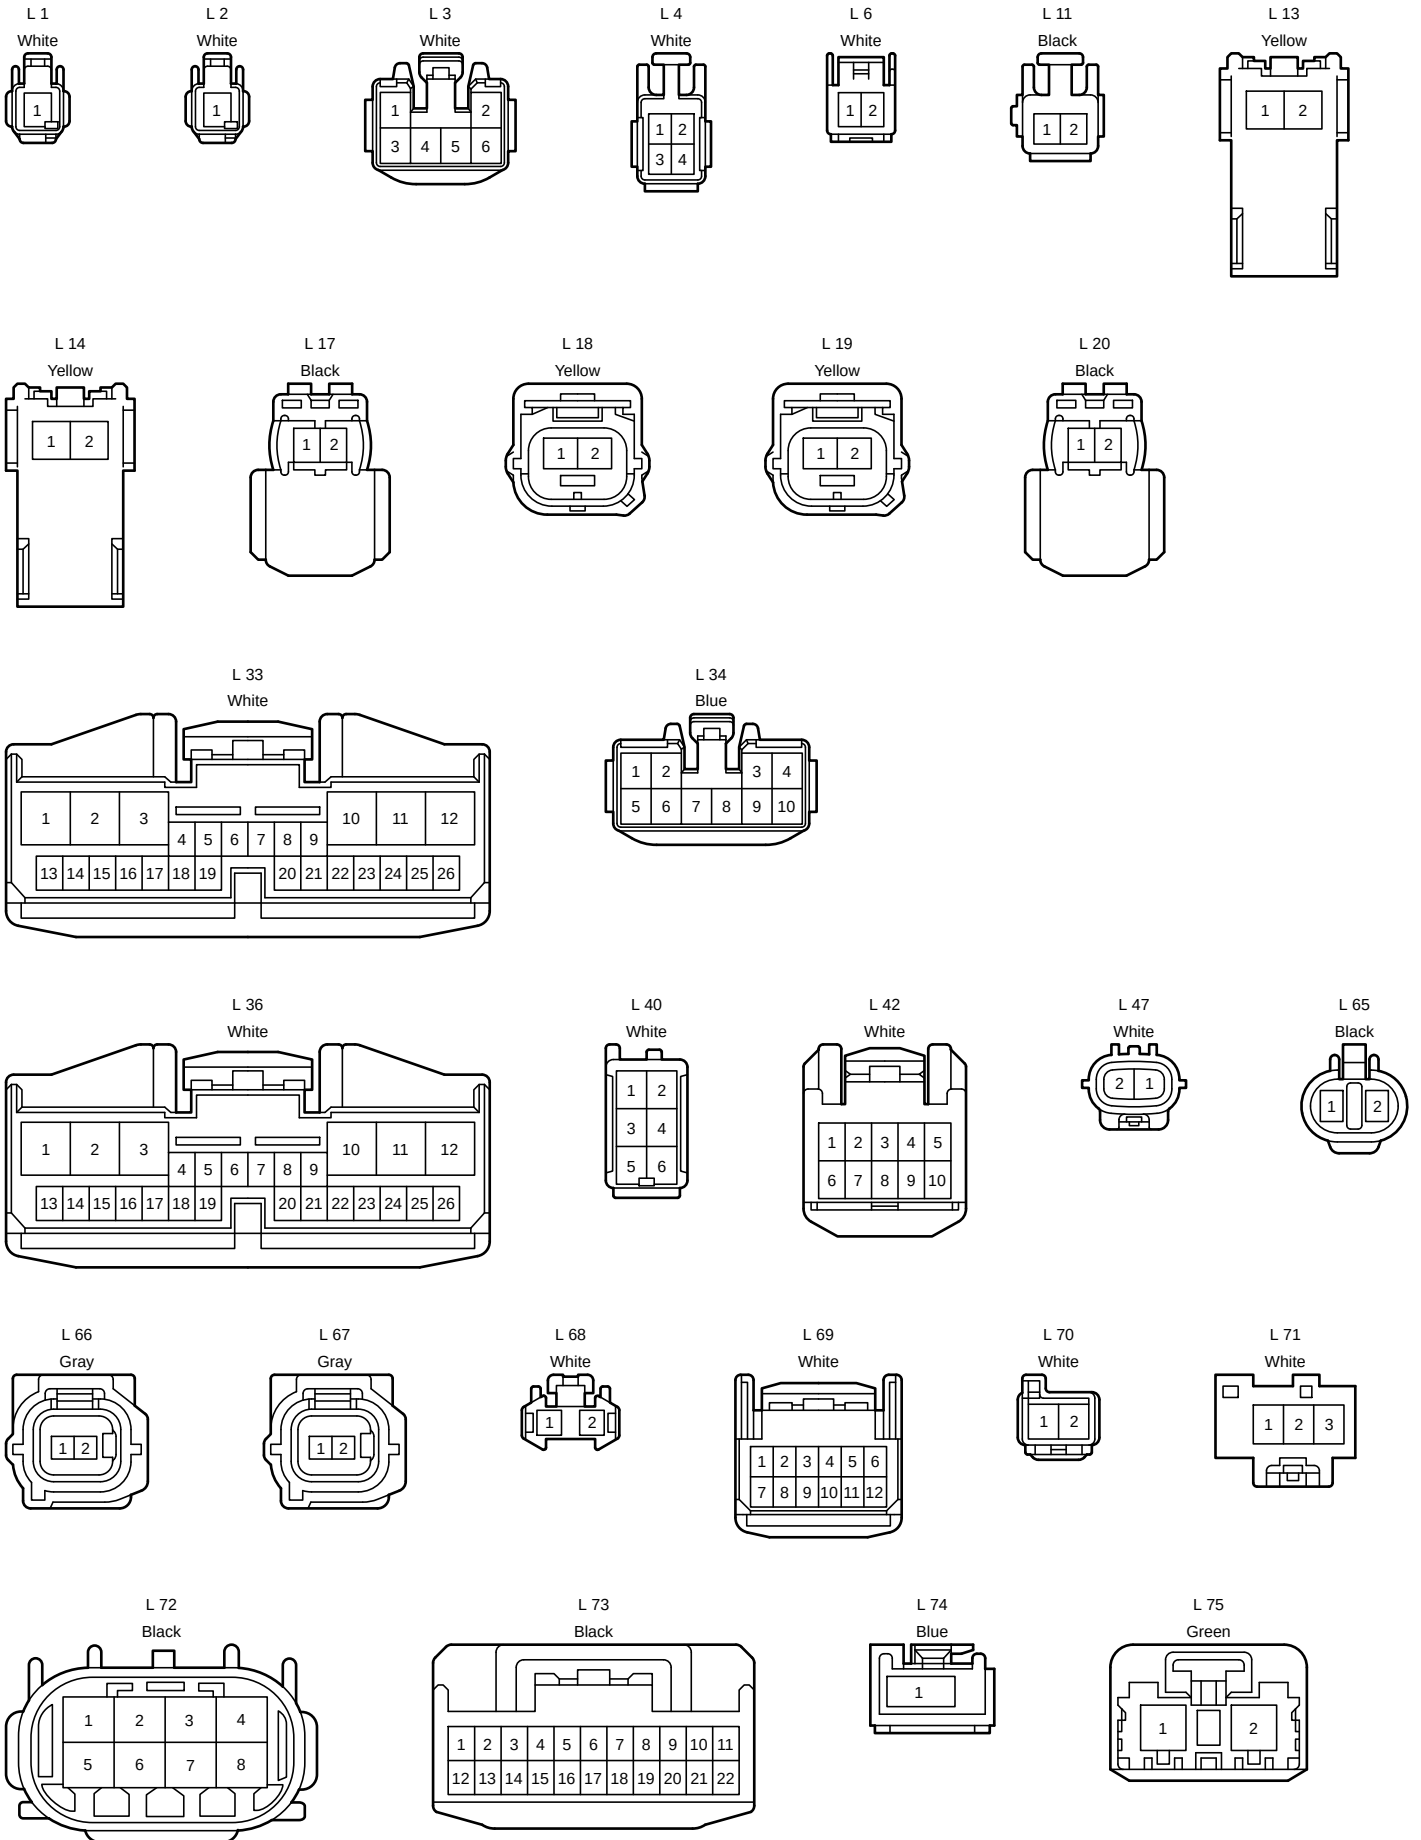

Position of Parts in Body <RHD From Sep. 2015 Production>

