

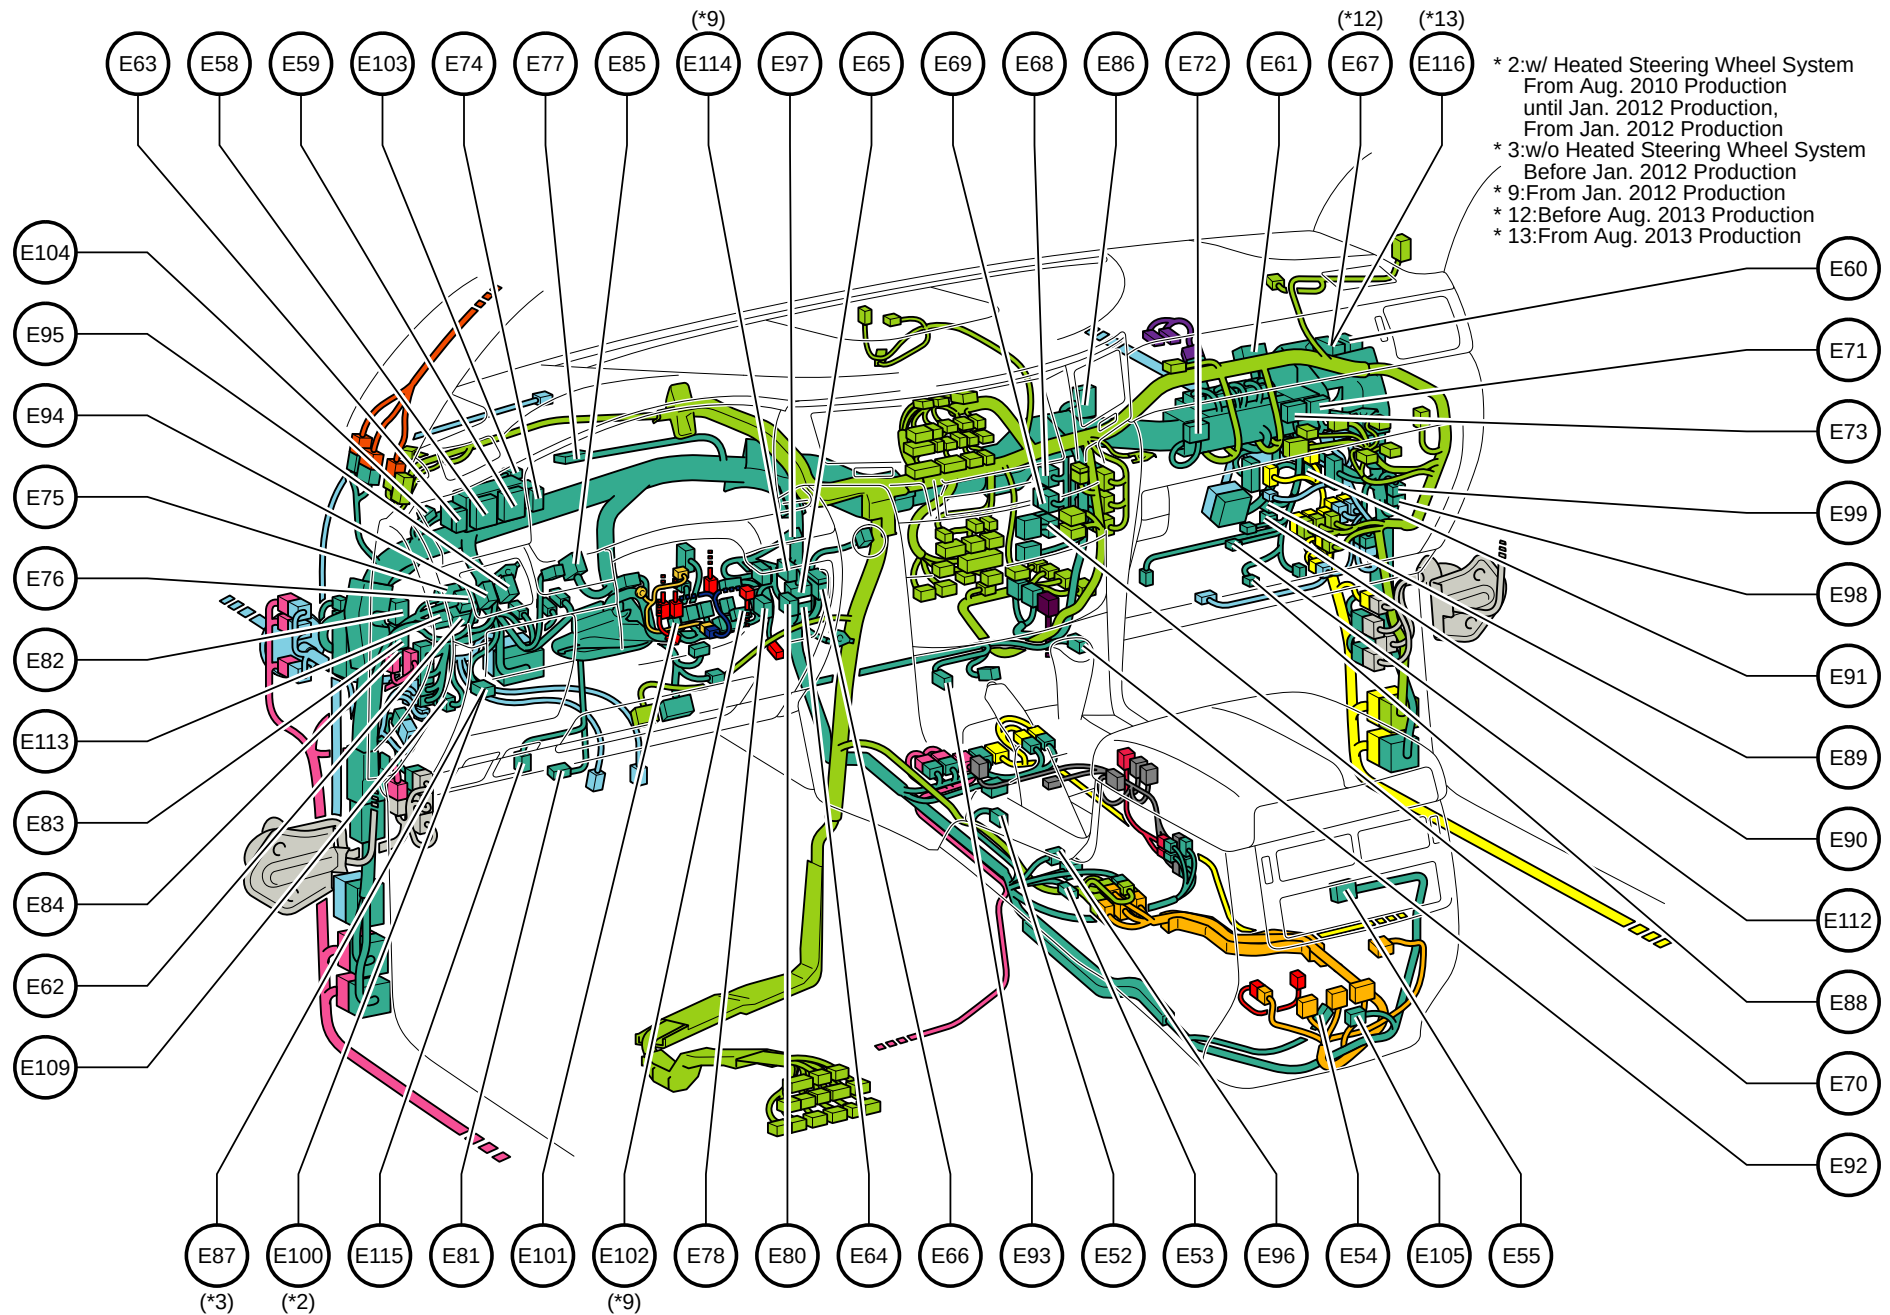
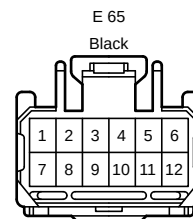
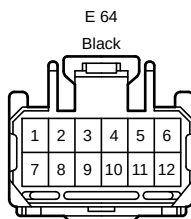
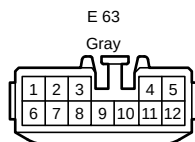
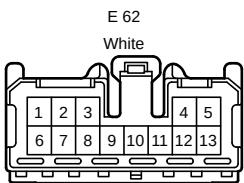
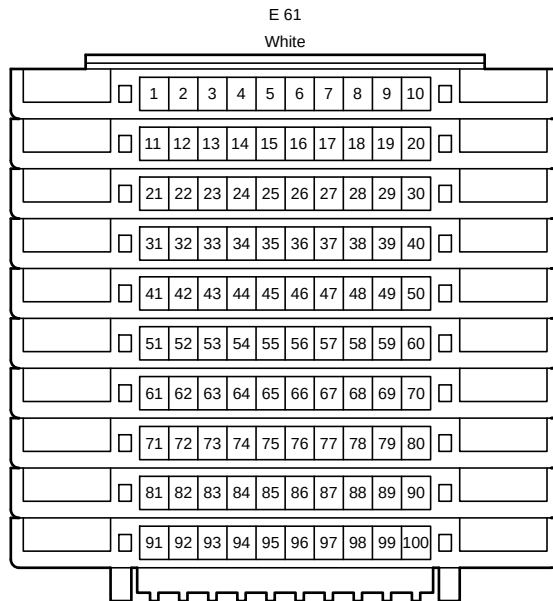
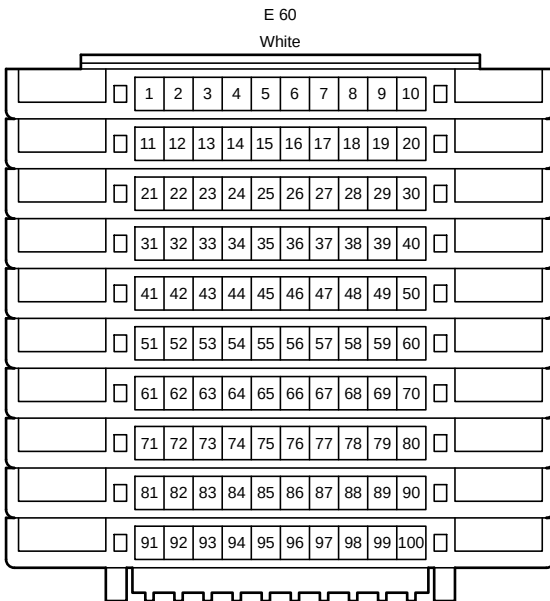
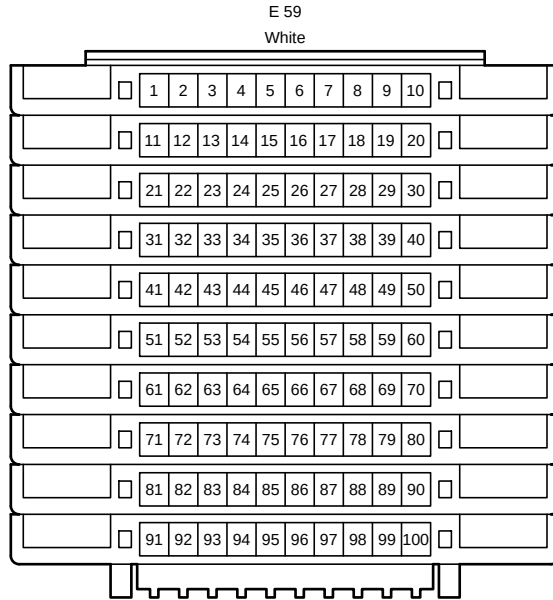
 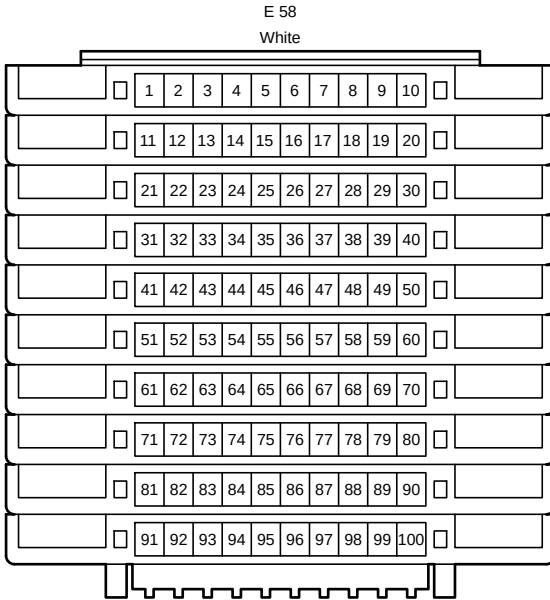
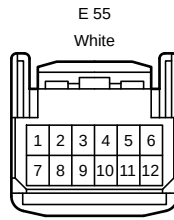


Position of Parts in Instrument Panel <LHD Before Sep. 2015 Production>




















E 52	Transmission Control Switch
E 53	Parking Brake Switch Assembly
E 54	Cooling Box Assembly
E 55	No.2 A/C Control Assembly
E 58	Junction Connector
E 59	Junction Connector
E 60	Junction Connector
E 61	Junction Connector
E 62	Junction Connector
E 63	Junction Connector
E 64	Junction Connector
E 65	Junction Connector
E 66	Junction Connector
E 67	Junction Connector
E 68	Junction Connector
E 69	Junction Connector
E 70	Junction Connector
E 71	Junction Connector
E 72	Junction Connector
E 73	Junction Connector
E 74	Junction Connector
E 75	Junction Connector
E 76	Junction Connector
E 77	Combination Meter Assembly
E 78	Curtain Airbag Cutoff Switch
E 80	Power Slide Door Main Switch
E 81	Front Foot Light LH (No.1 Interior Illumination Light Assembly)
E 82	Steering Control ECU
E 83	Steering Control ECU
E 84	Steering Control ECU
E 85	Steering Actuator Assembly
E 86	Distance Control ECU Assembly
E 87	Combination Switch Assembly
E 88	Front Foot Light RH (No.1 Interior Illumination Light Assembly)
E 89	Windshield Wiper ECU
E 90	Windshield Wiper ECU
E 91	Headlight Swivel ECU Assembly
E 92	Seat Heater Switch RH
E 93	Seat Heater Switch LH
E 94	Outer Mirror Switch Assembly
E 95	Outer Mirror Switch Assembly
E 96	Front Indoor Electrical Key Oscillator
E 97	Main Switch Assembly
E 98	Short Connector
E 99	Short Connector
E 100	Combination Switch Assembly
E 101	Spiral Cable Sub-Assembly
E 102	Spiral Cable Sub-Assembly
E 103	Diode (Turn Signal Light RH)
E 104	Diode (Turn Signal Light LH)
E 105	Rear Power Outlet Socket Assembly
E 109	Junction Connector
E 112	Option Connector (Remote Engine Starter)
E 113	Option Connector (Floor Illumination)
E 114	Absorber Control Switch
E 115	Tire Pressure Warning Reset Switch
E 116	Junction Connector
























Position of Parts in Instrument Panel <LHD Before Sep. 2015 Production>

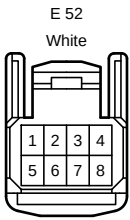

Position of Parts in Instrument Panel <LHD Before Sep. 2015 Production>

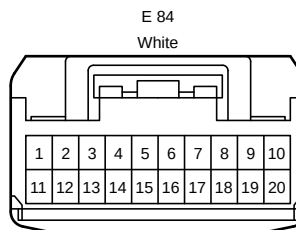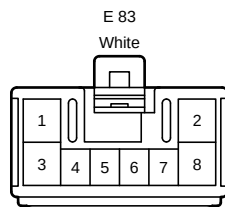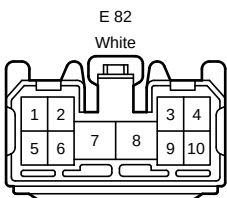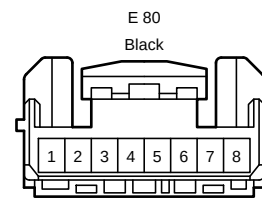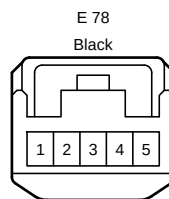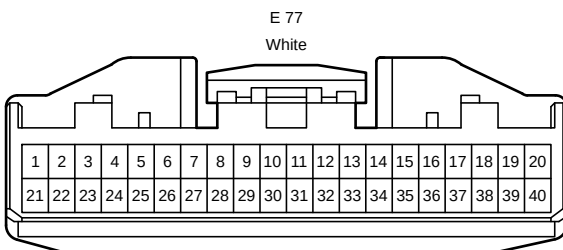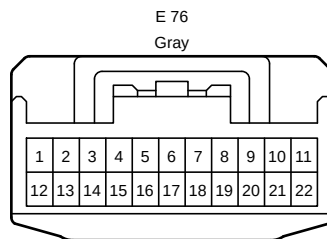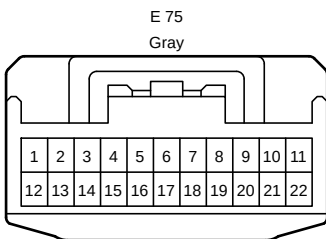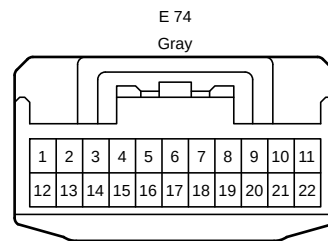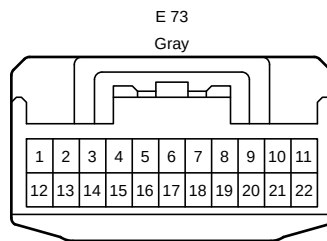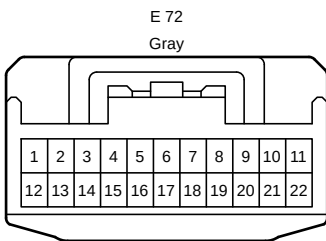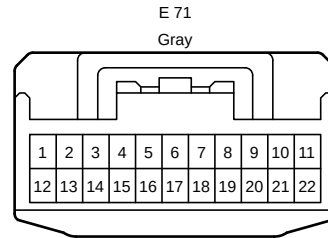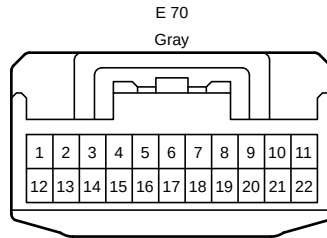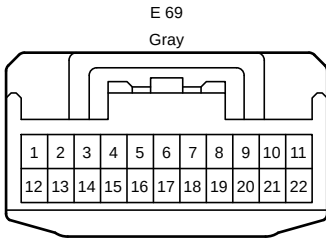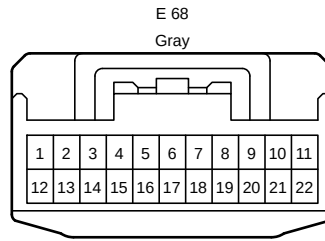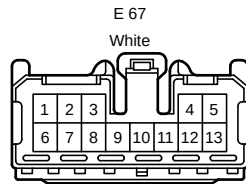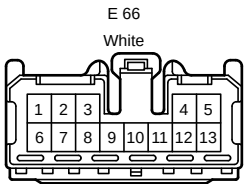


   Position of Parts in Instrument Panel <LHD Before Sep. 2015 Production>

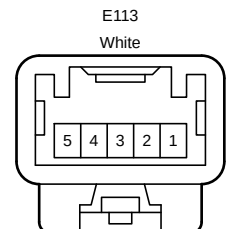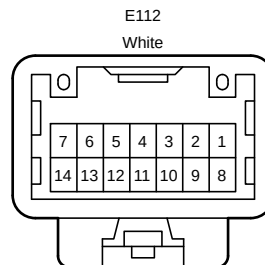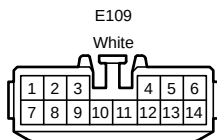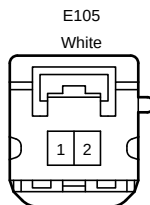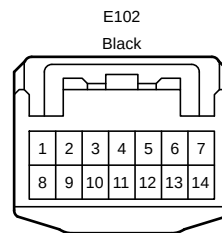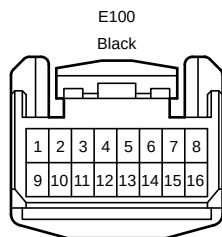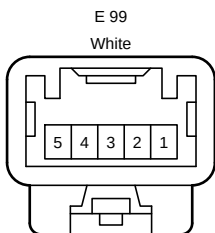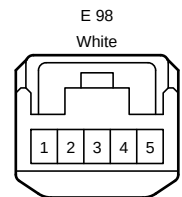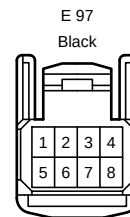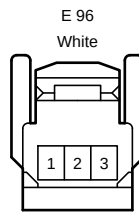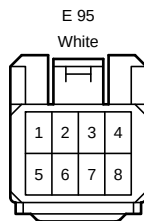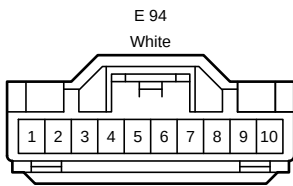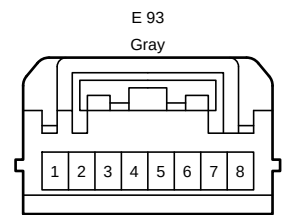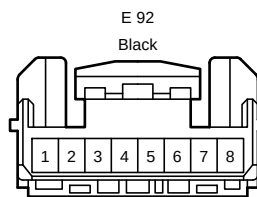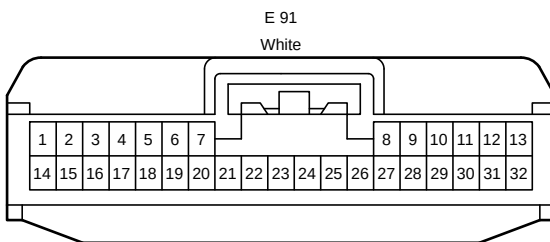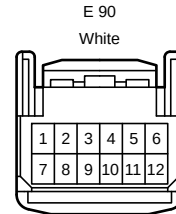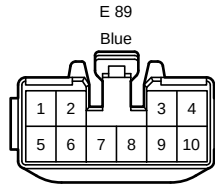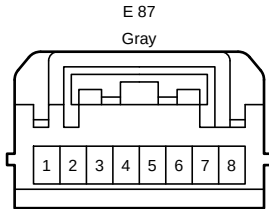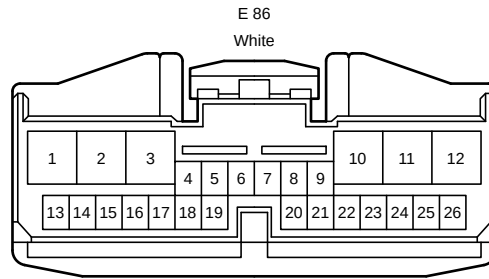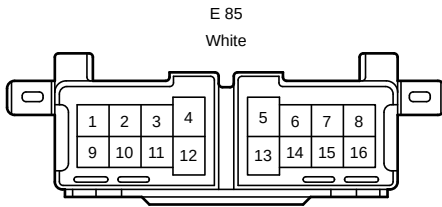


Position of Parts in Instrument Panel <LHD Before Sep. 2015 Production>

E114
Black

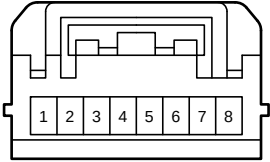

E115
Black

 

E116
White

