


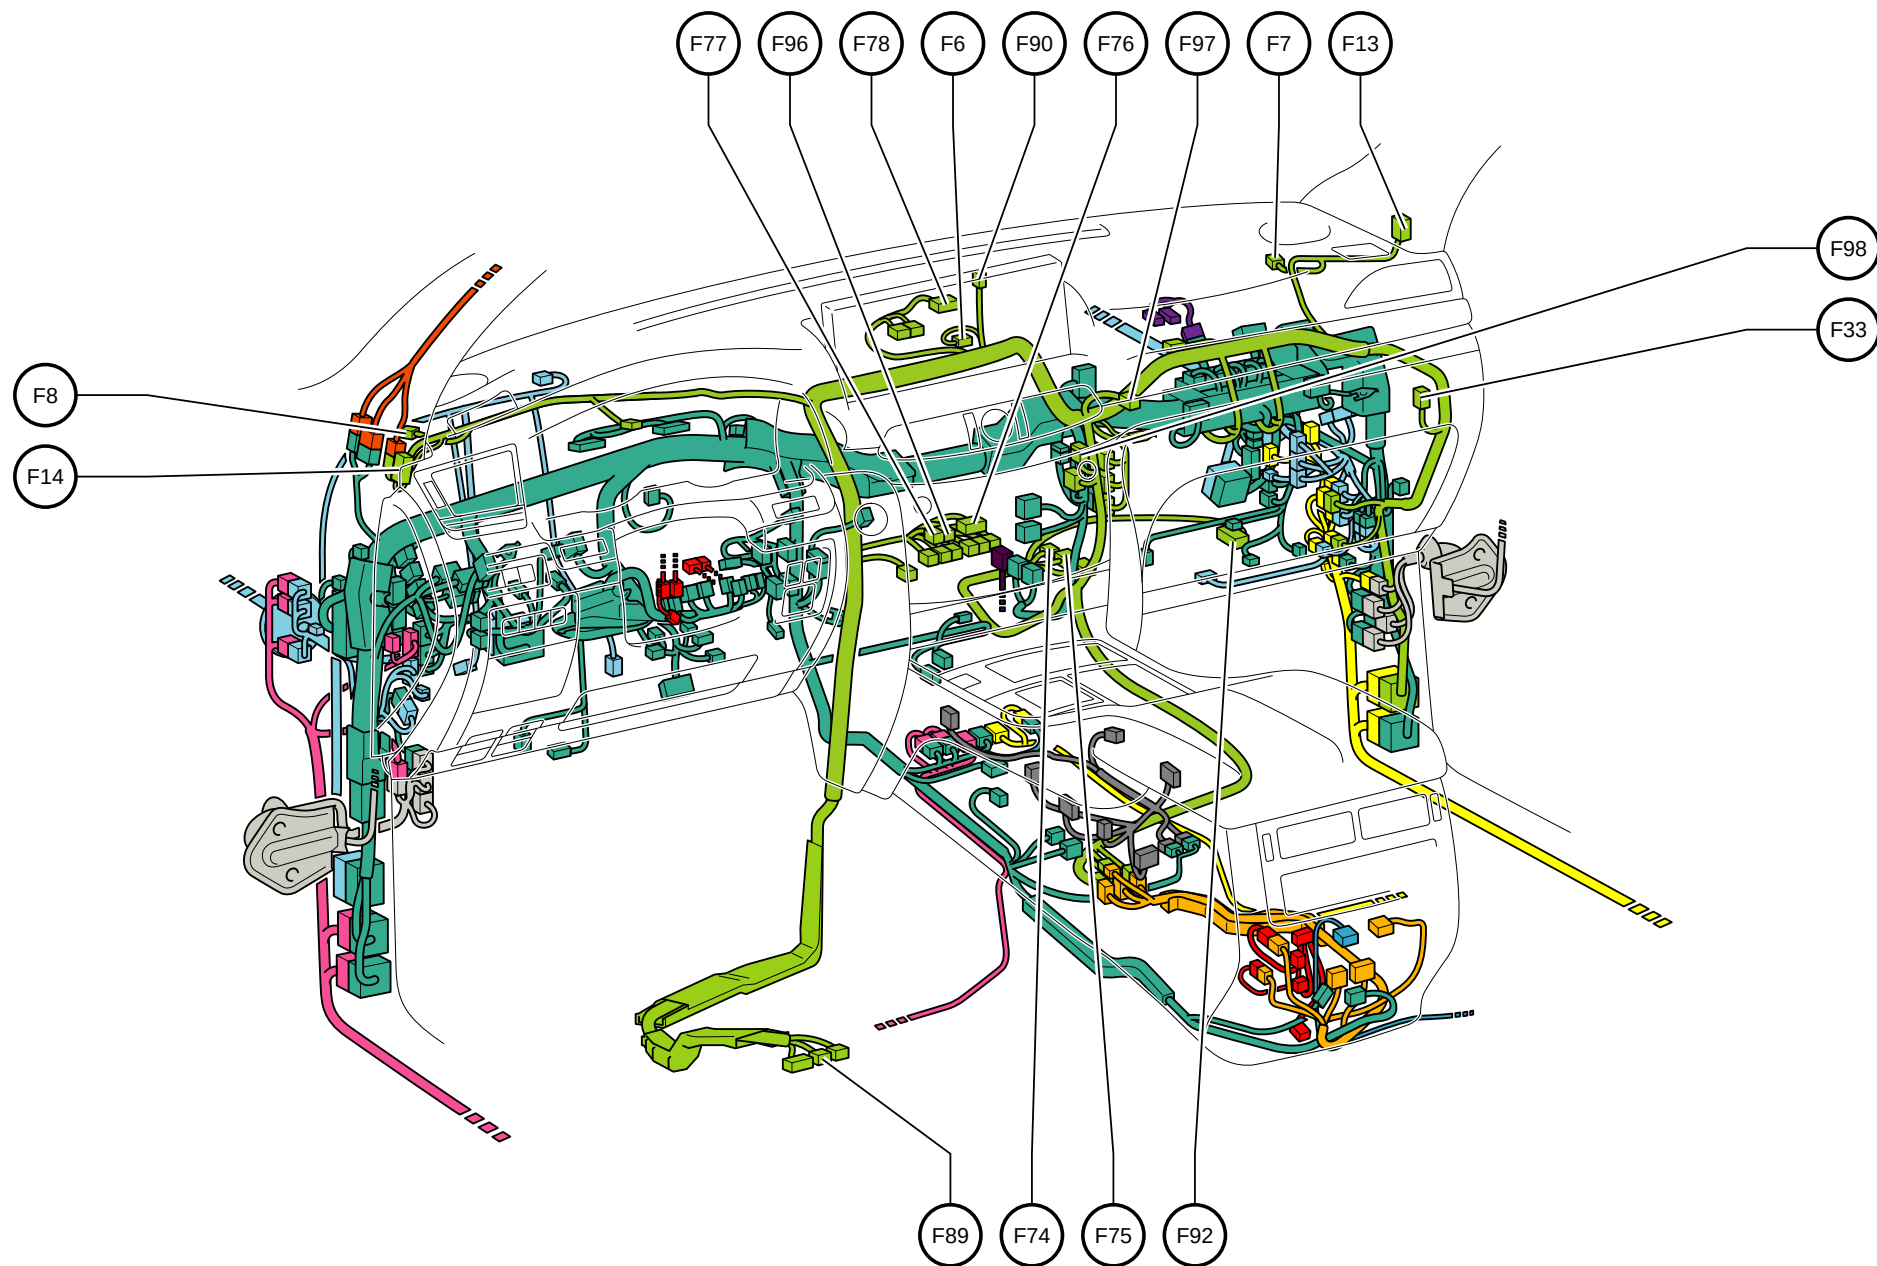

- F 6 Front No.4 Speaker Assembly
- F 7 Front No.2 Speaker Assembly RH
- F 8 Front No.2 Speaker Assembly LH
- F 13 Front No.3 Speaker Assembly RH
- F 14 Front No.3 Speaker Assembly LH
- F 33 Airbag Cut Off Switch Cylinder Sub-Assembly
- F 74 Parking Assist ECU
- F 75 Parking Assist ECU
- F 76 Multi-Media Module Receiver Assembly
- F 77 Multi-Media Module Receiver Assembly
- F 78 Multi-Display Assembly
- F 89 Stereo Component Amplifier Assembly
- F 90 Automatic Light Control Sensor
- F 92 Clearance Warning ECU Assembly
- F 96 Multi-Media Module Receiver Assembly
- F 97 Clock Assembly
- F 98 Junction Connector

Position of Parts in Instrument Panel <LHD From Sep. 2015 Production>

