

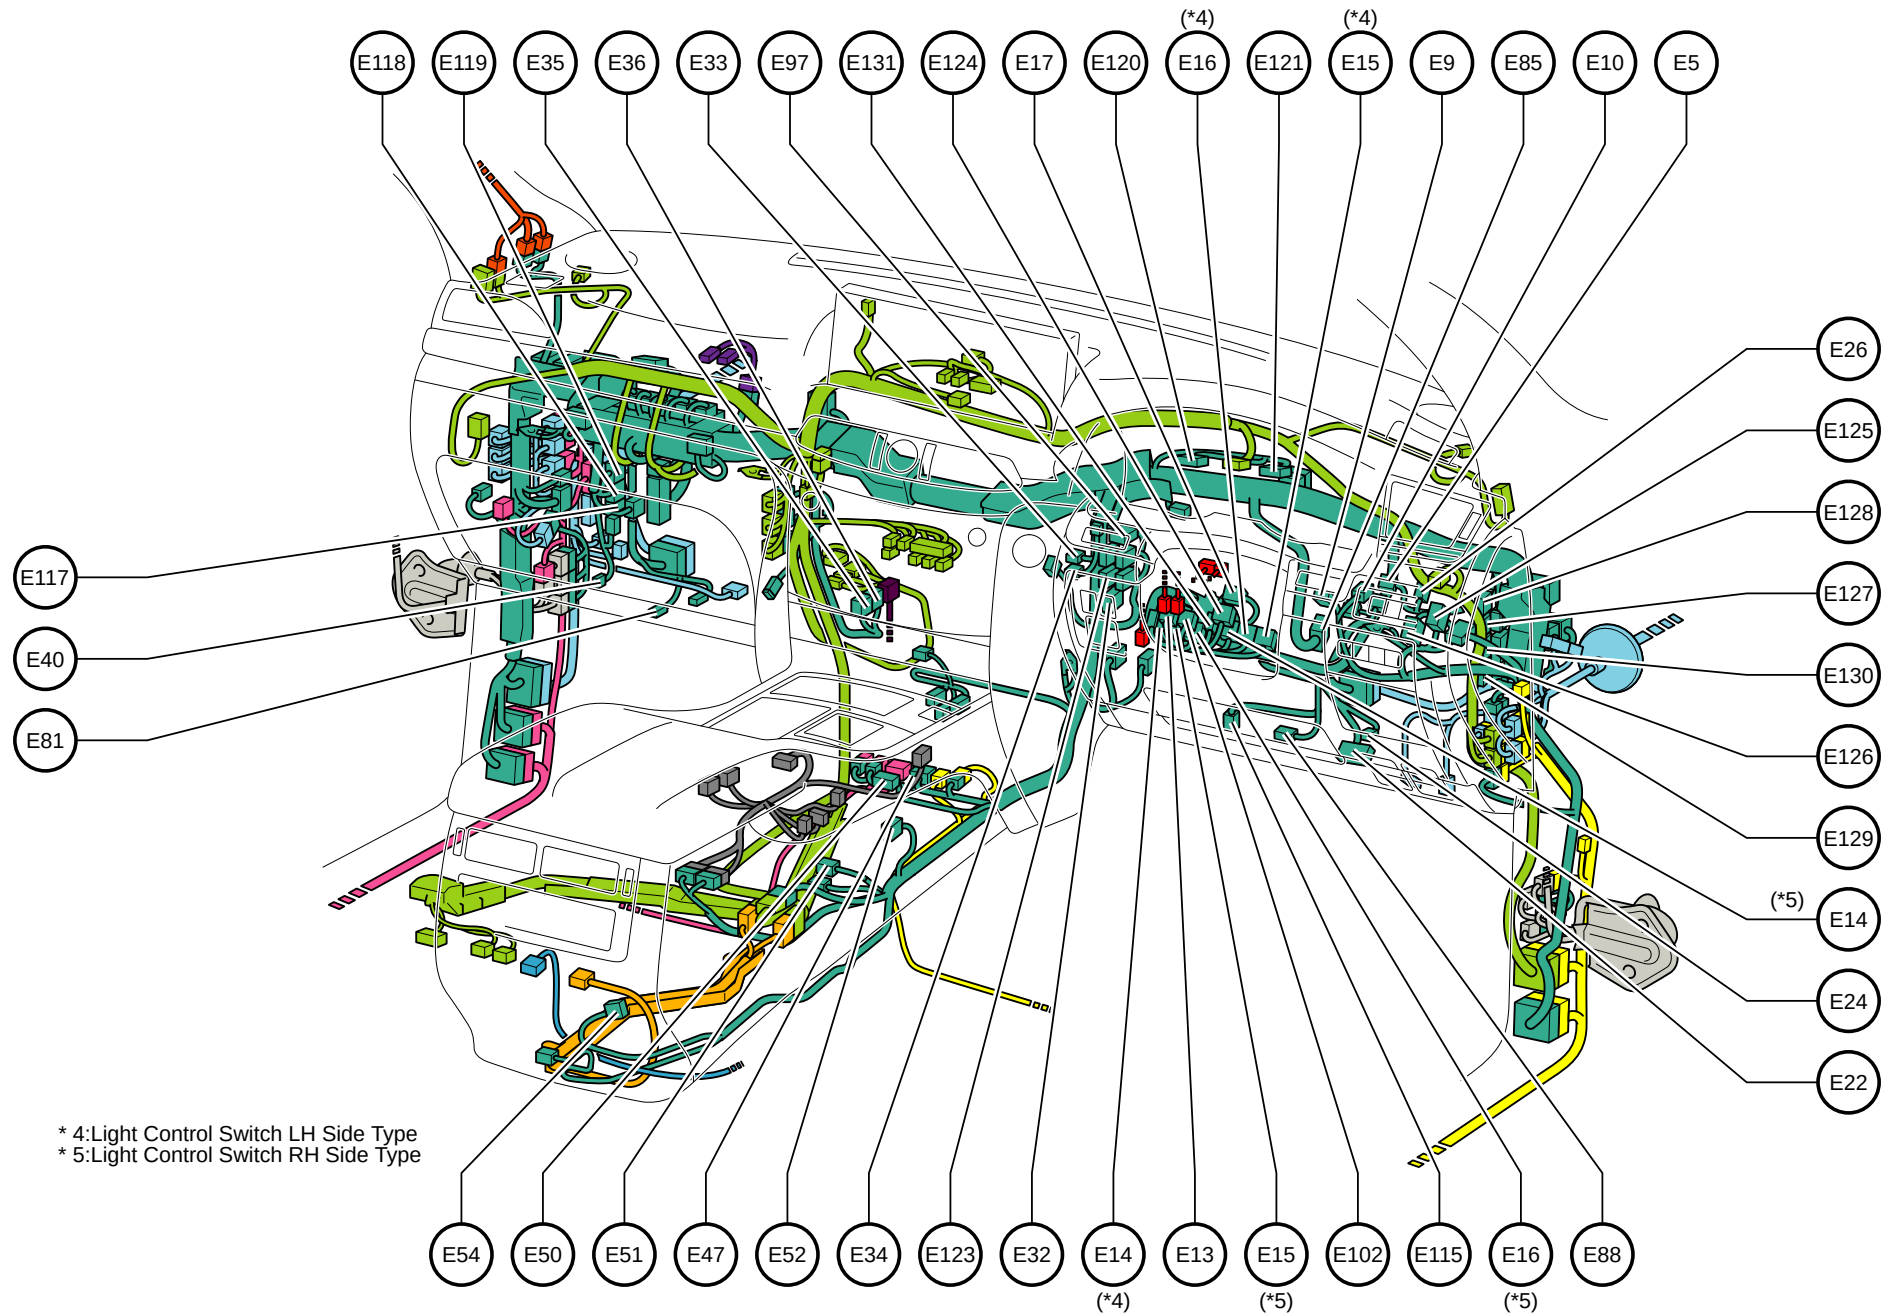
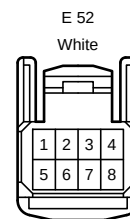
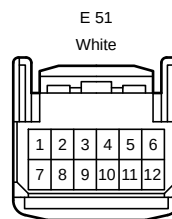
 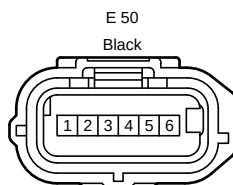
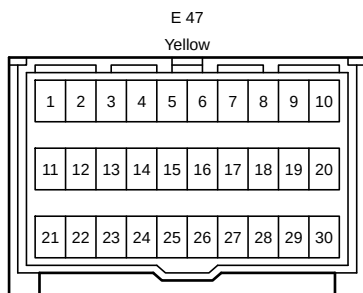

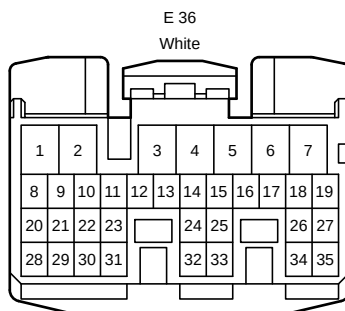
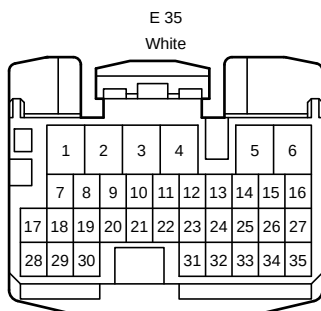
 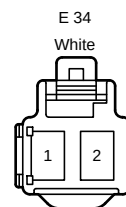
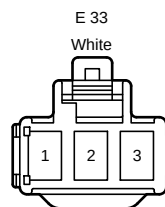
 
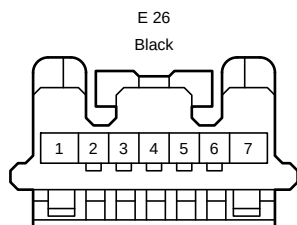

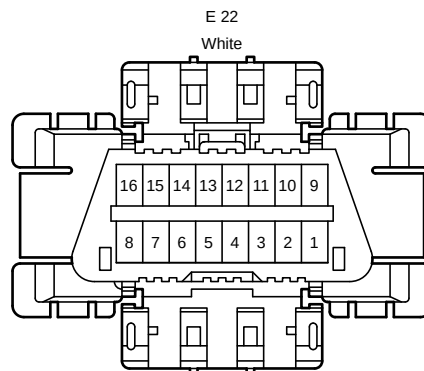
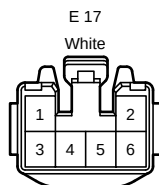
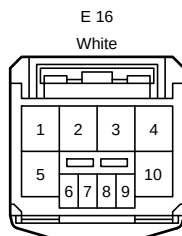
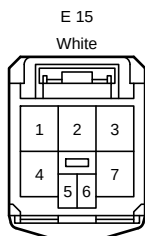
 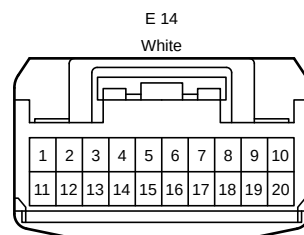
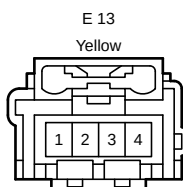
 


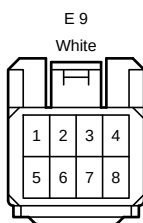

E 5 Skid Control Buzzer Assembly
E 9 Light Control Rheostat
E 10 No.1 Clearance Warning Buzzer
E 13 Spiral Cable Sub-Assembly
E 14 Headlight Dimmer Switch Assembly
E 15 Windshield Wiper Switch Assembly
E 16 Windshield Wiper Switch Assembly
E 17 Power Tilt Motor
E 22 DLC3
E 24 Lower No.1 Instrument Panel Airbag Assembly
E 26 Steering Lock Actuator Assembly
E 32 Room Temperature Sensor
E 33 Quick Heater Assembly
E 34 Quick Heater Assembly
E 35 A/C Amplifier Assembly
E 36 A/C Amplifier Assembly
E 40 Lower No.2 Instrument Panel Airbag Assembly
E 47 Center Airbag Sensor Assembly
E 50 Theft Warning Tilt Sensor
E 51 Shift Lock Control ECU Sub-Assembly
E 52 Transmission Control Switch
E 54 Cooling Box Assembly
E 81 Front Foot Light LH (No.1 Interior Illumination Light Assembly)
E 85 Steering Actuator Assembly
E 88 Front Foot Light RH (No.1 Interior Illumination Light Assembly)
E 97 Main Switch Assembly
E 102 Spiral Cable Sub-Assembly
E 115 Tire Pressure Warning Reset Switch
E 117 Main Body ECU
E 118 Main Body ECU
E 119 Main Body ECU
E 120 Combination Meter Assembly
E 121 Combination Meter Assembly
E 123 Back Door Control Switch
E 124 Spiral Cable Sub-Assembly
E 125 Combination Switch Assembly
E 126 No. 2 Combination Switch Assembly
E 127 Steering Control ECU
E 128 Steering Control ECU
E 129 Steering Control ECU
E 130 Steering Control ECU
E 131 Steering Sensor

Position of Parts in Instrument Panel <RHD From Sep. 2015 Production>



Position of Parts in Instrument Panel <RHD From Sep. 2015 Production>

