 
 


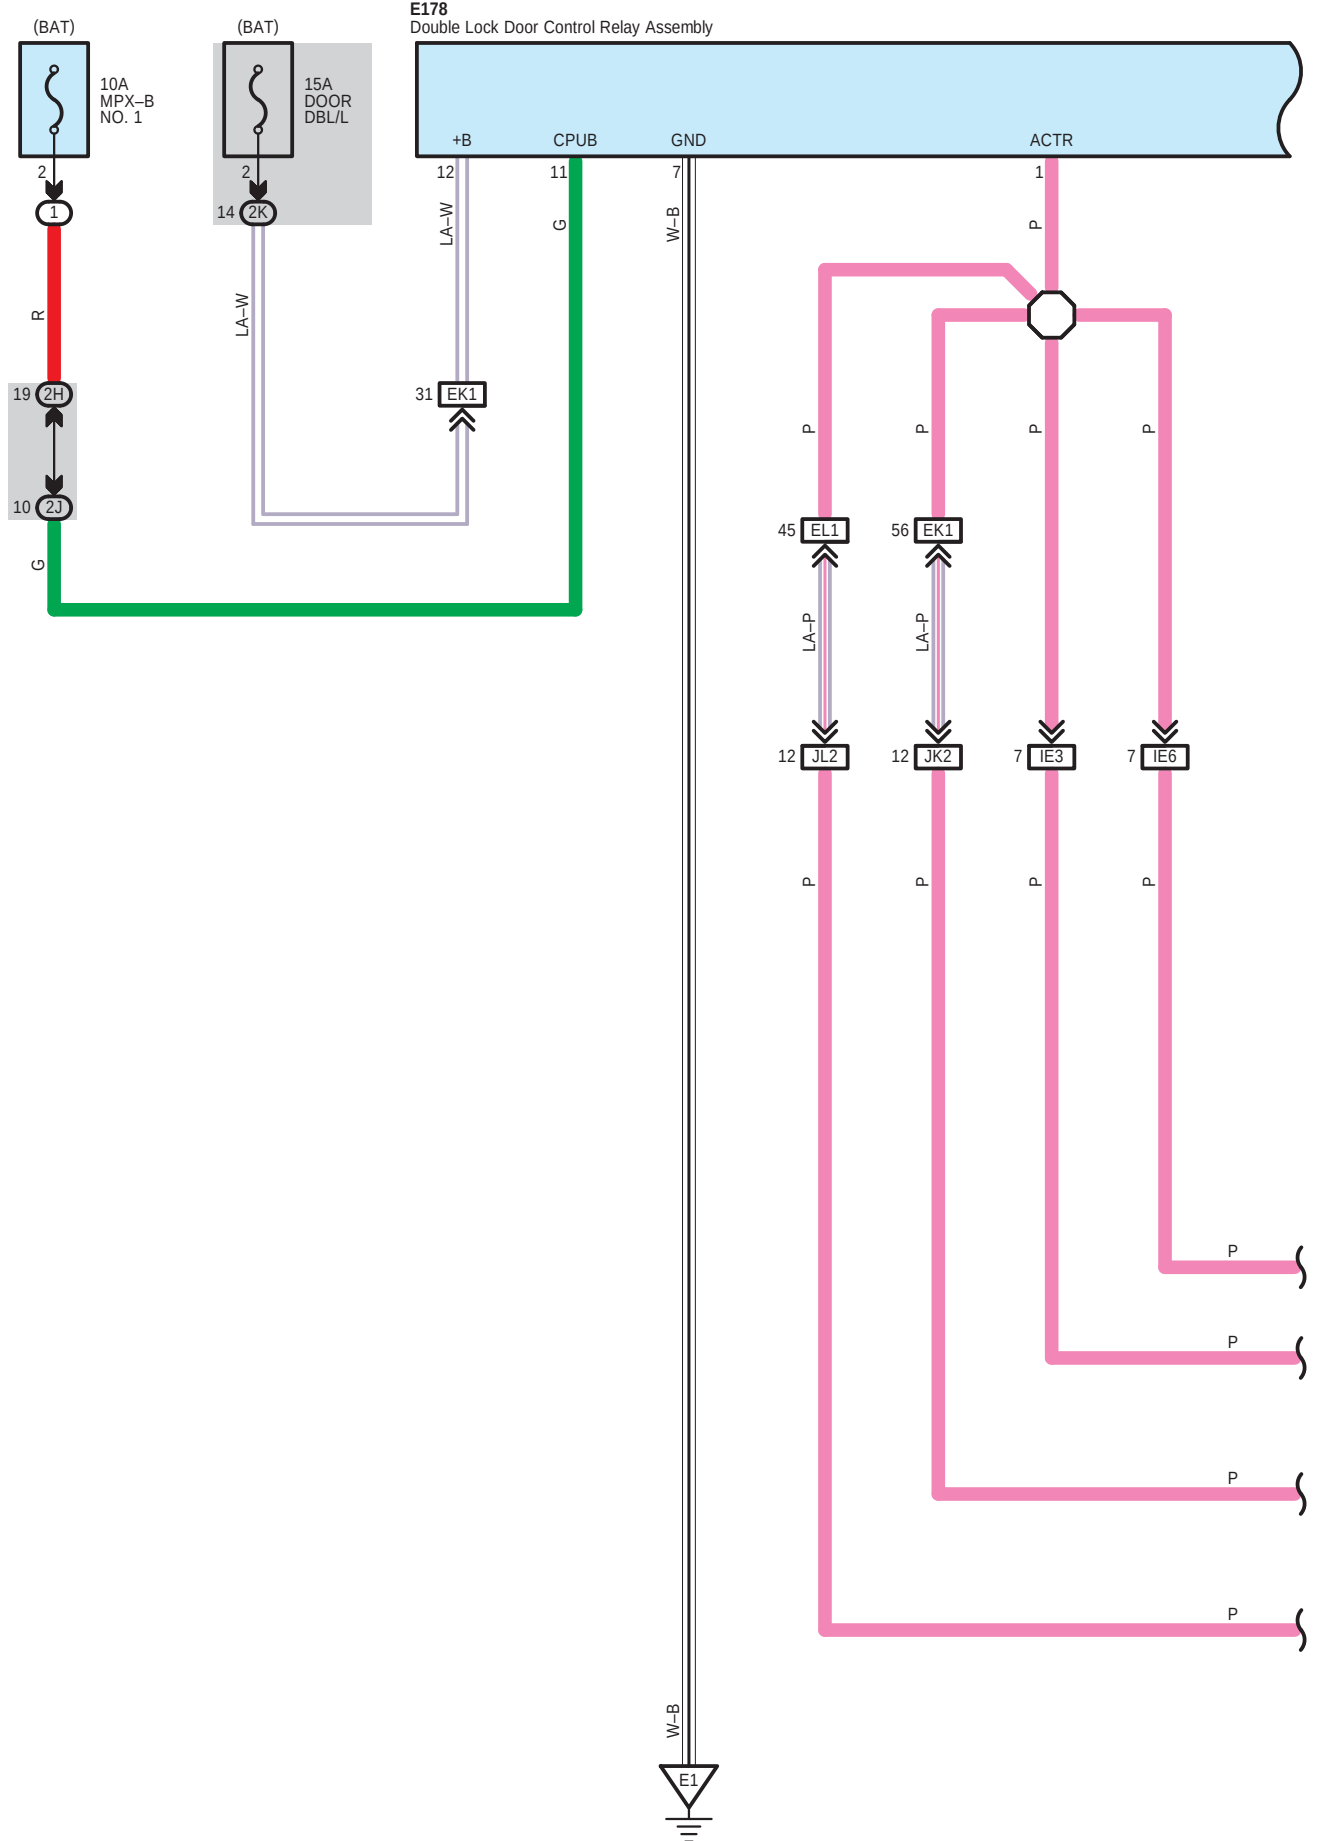


Double Locking

E178
Double Lock Door Control Relay Assembly

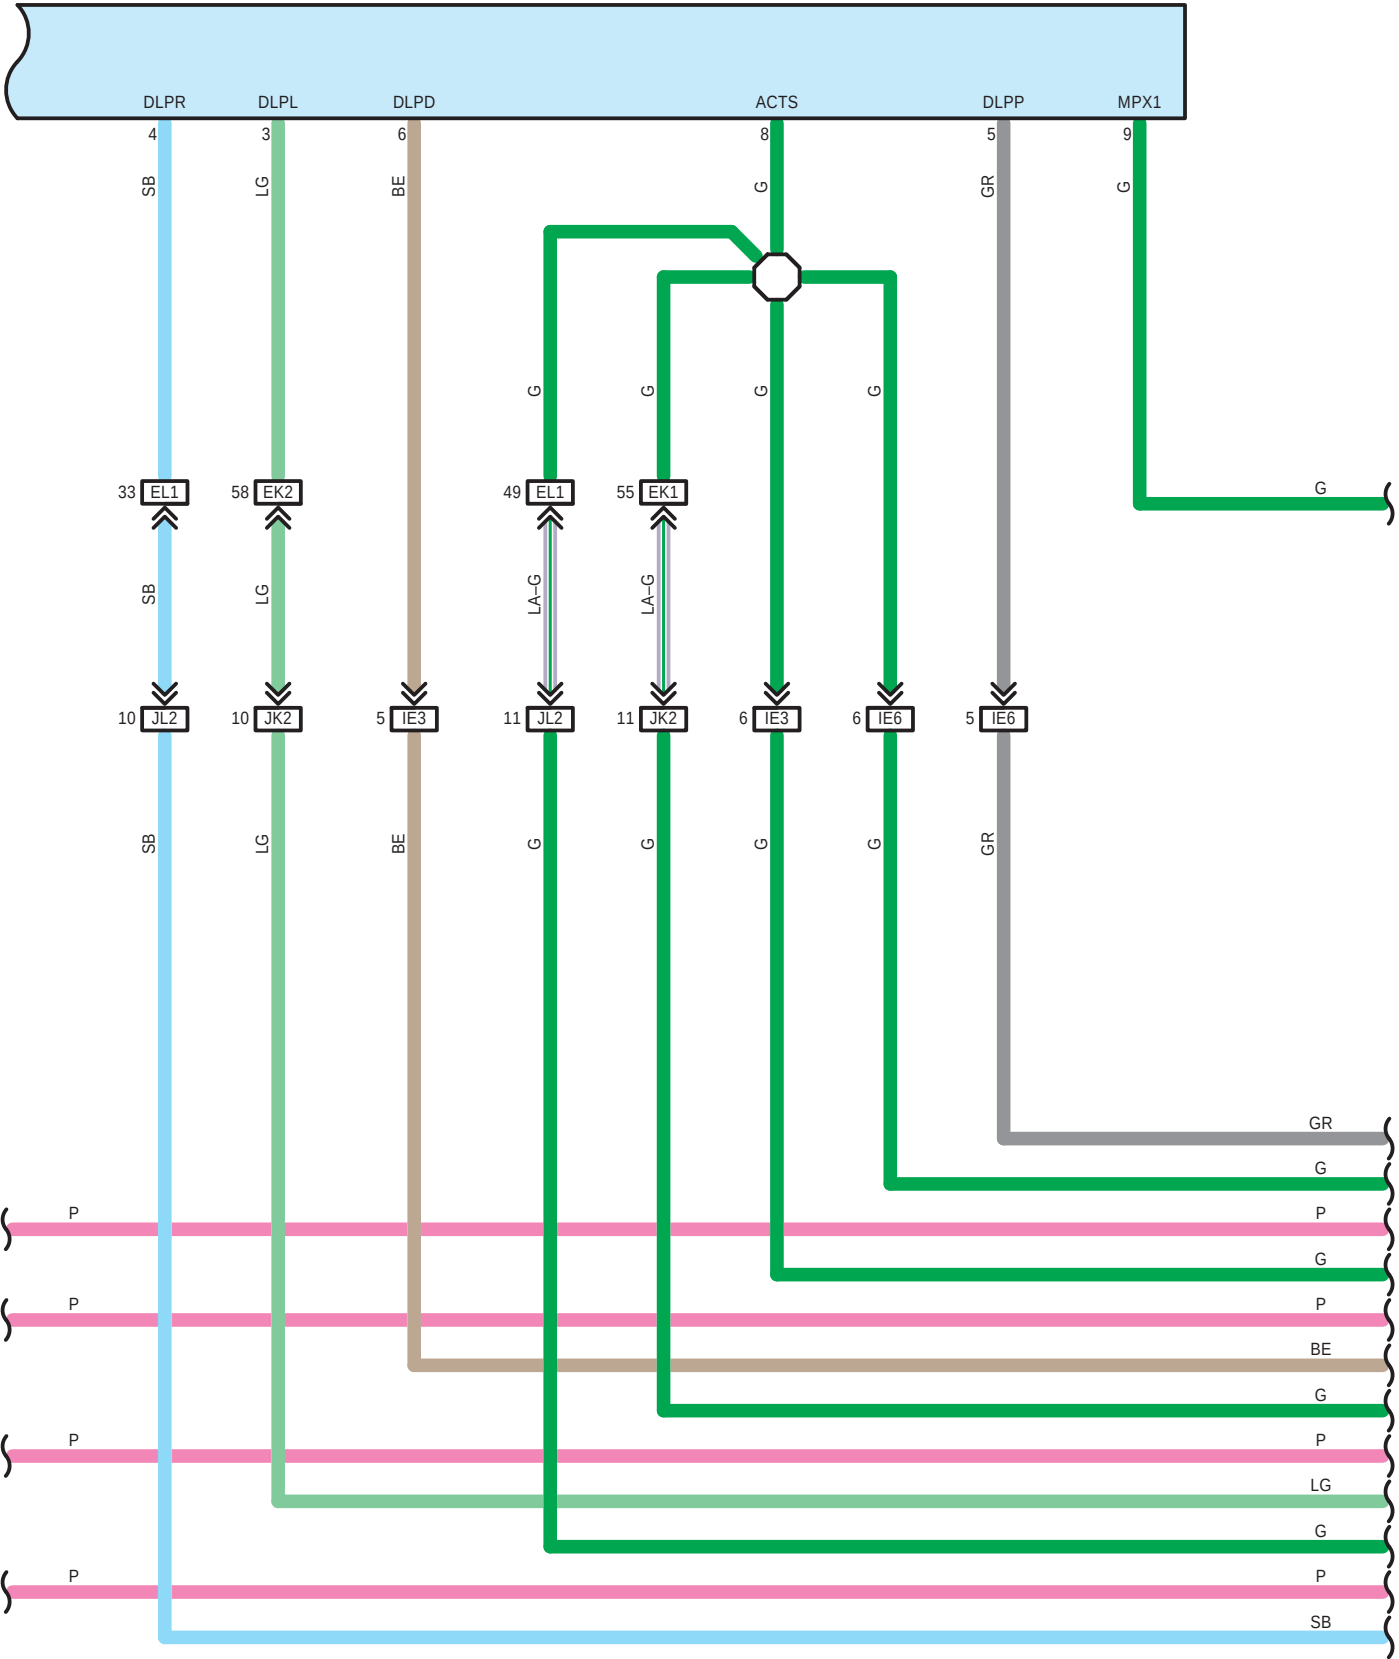


 Double Locking

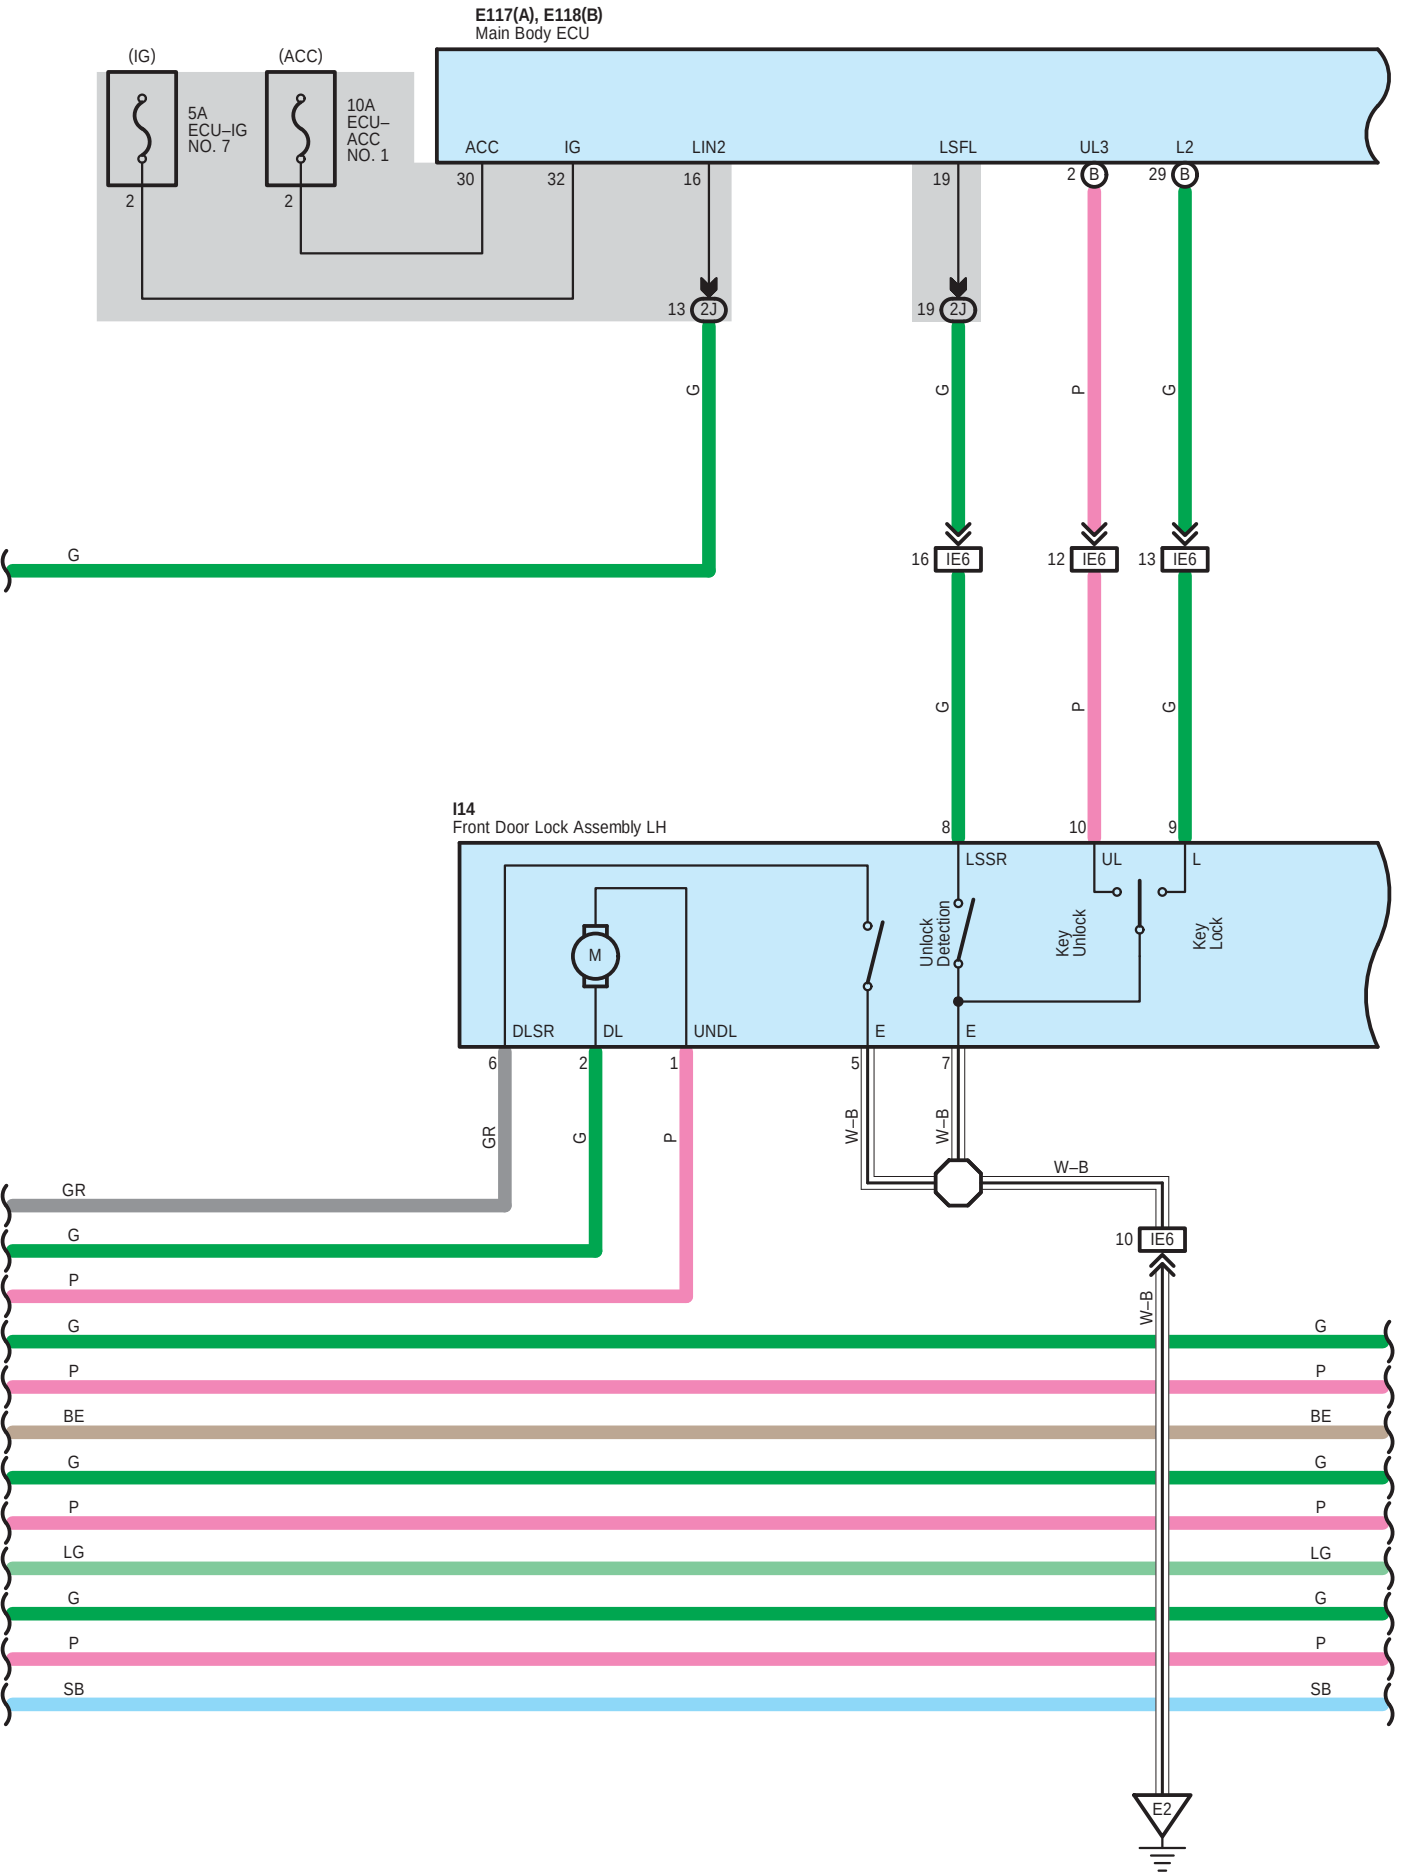


Double Locking

 E117(A), E118(B)
Main Body ECU

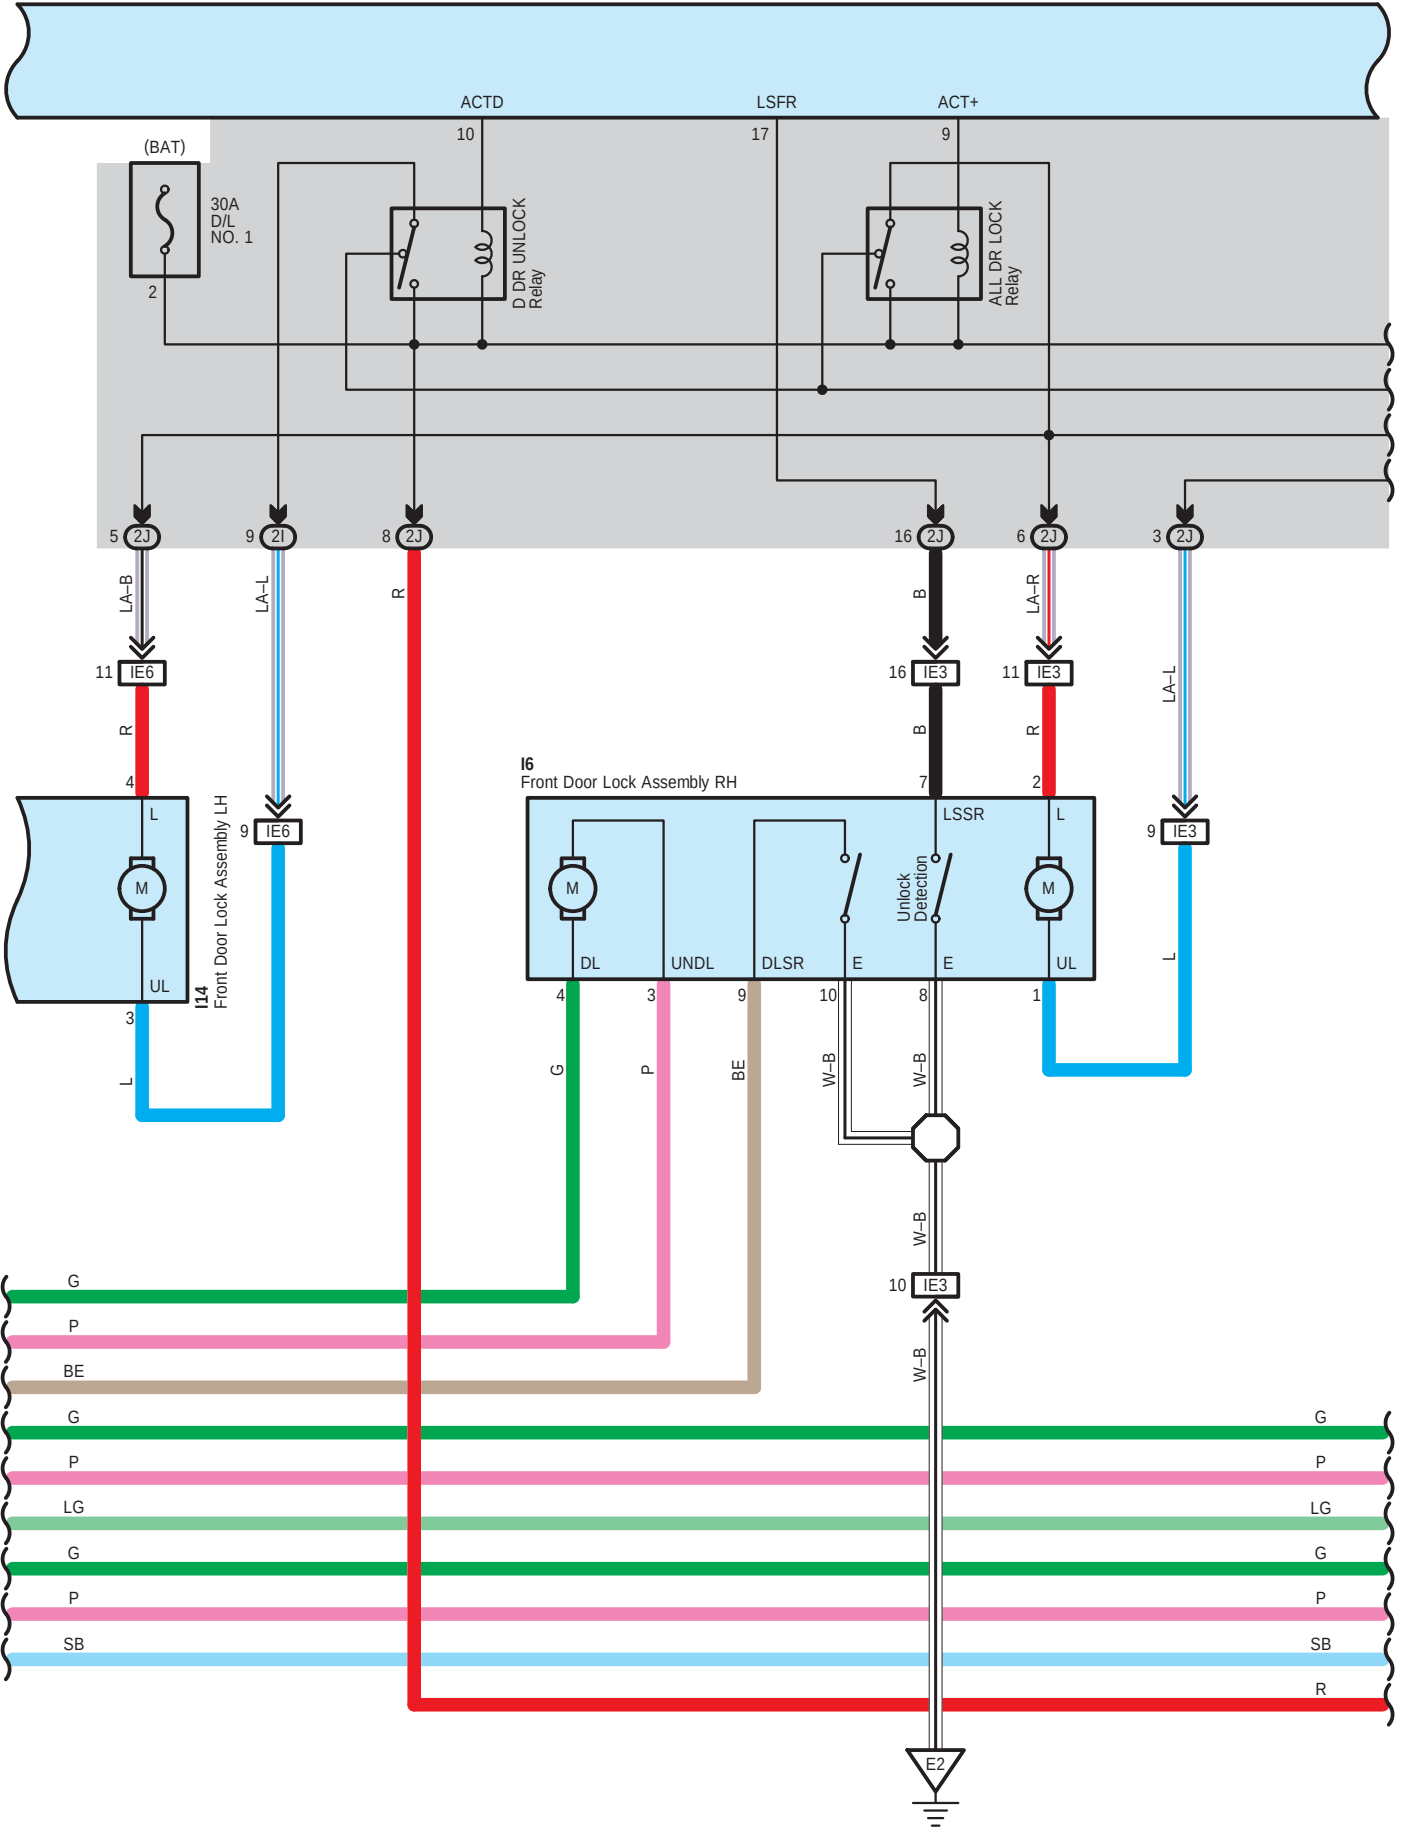


Double Locking

 E117(A), E118(B)
Main Body ECU

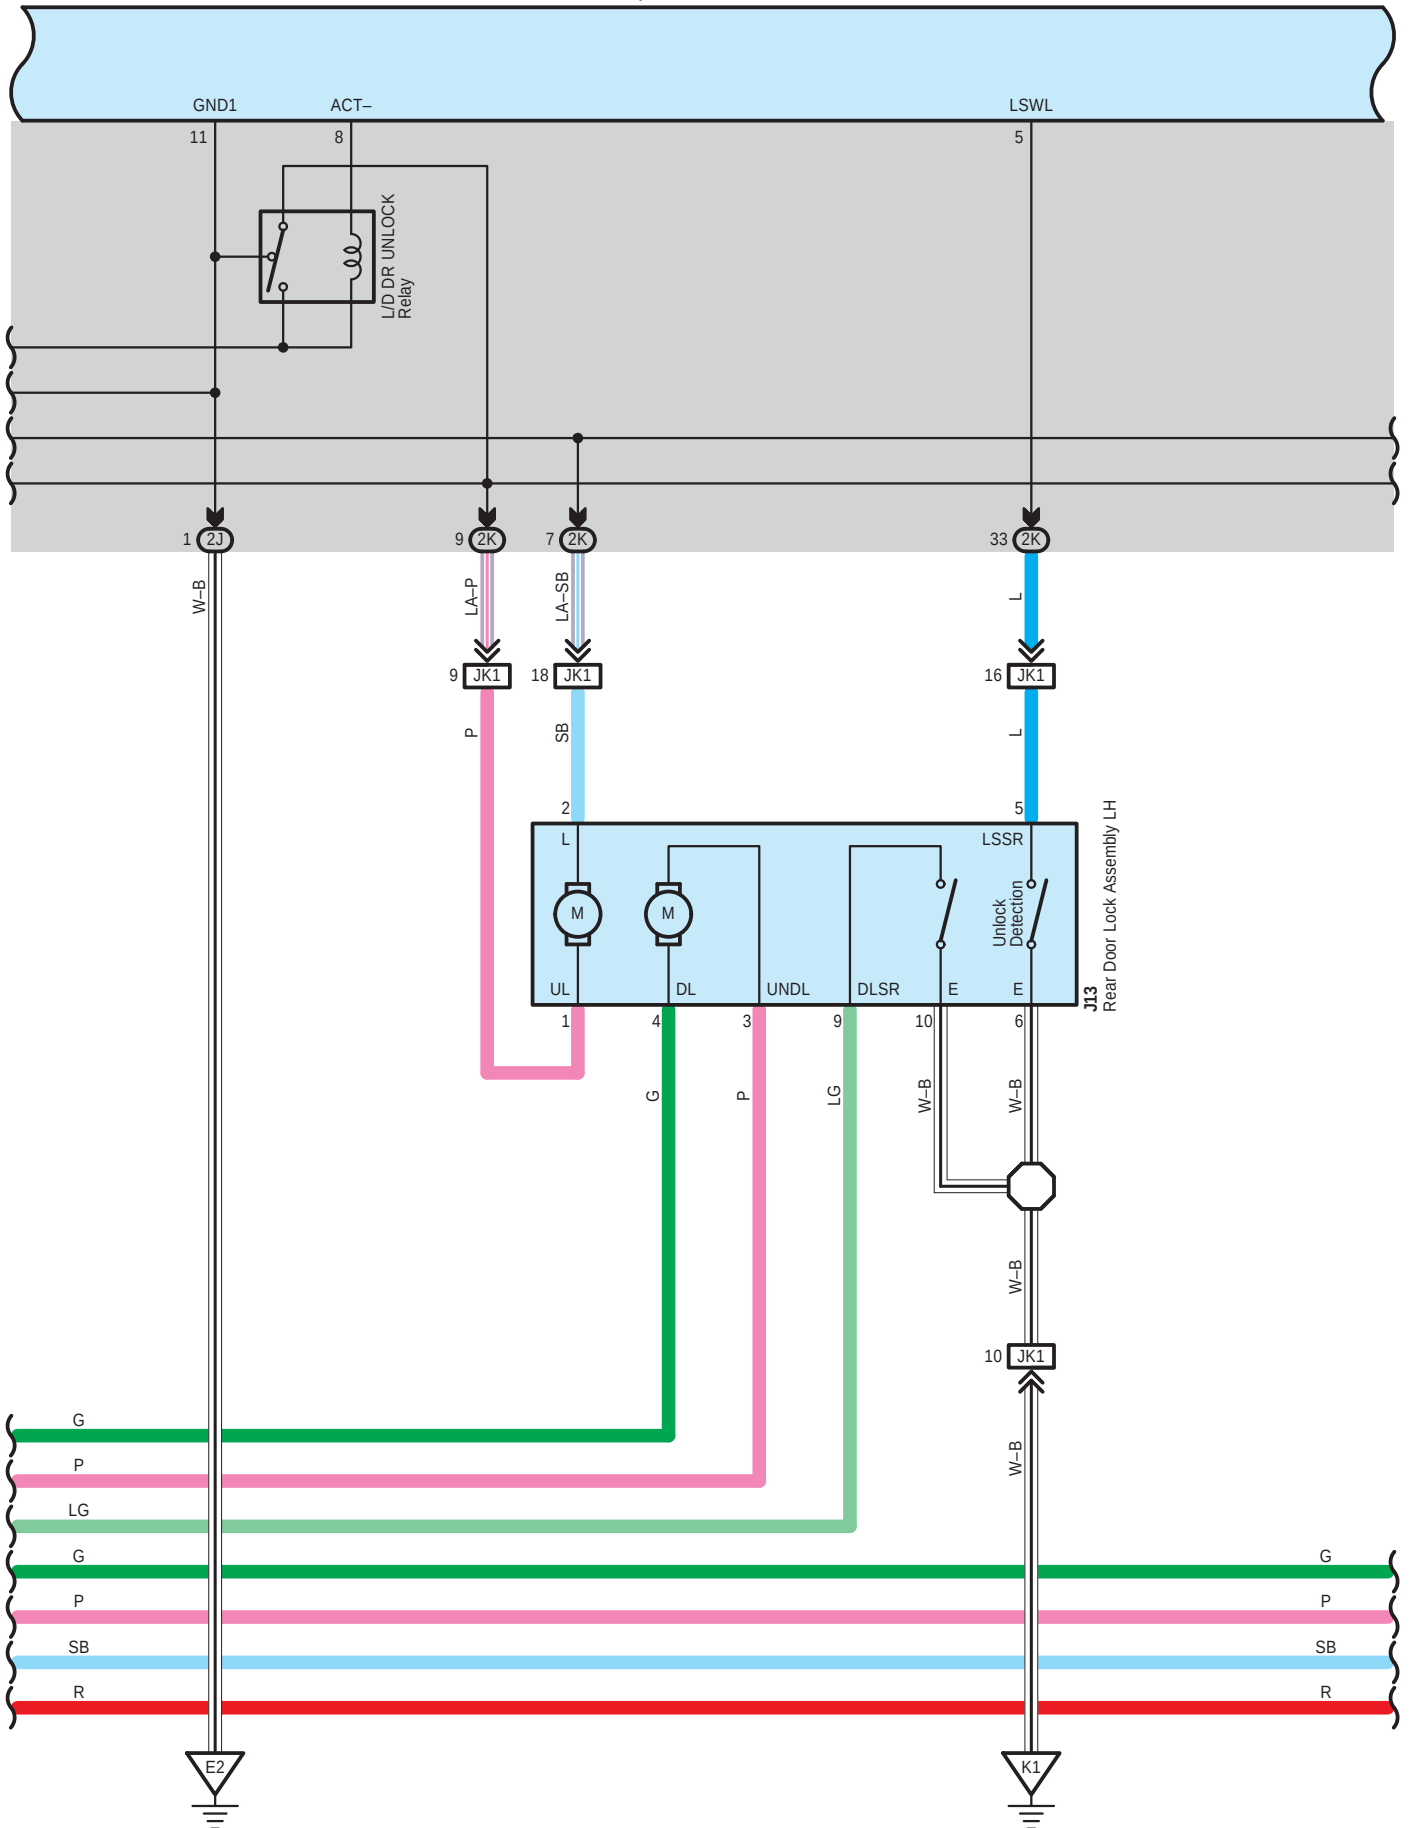


Double Locking

 E117(A), E118(B)
Main Body ECU

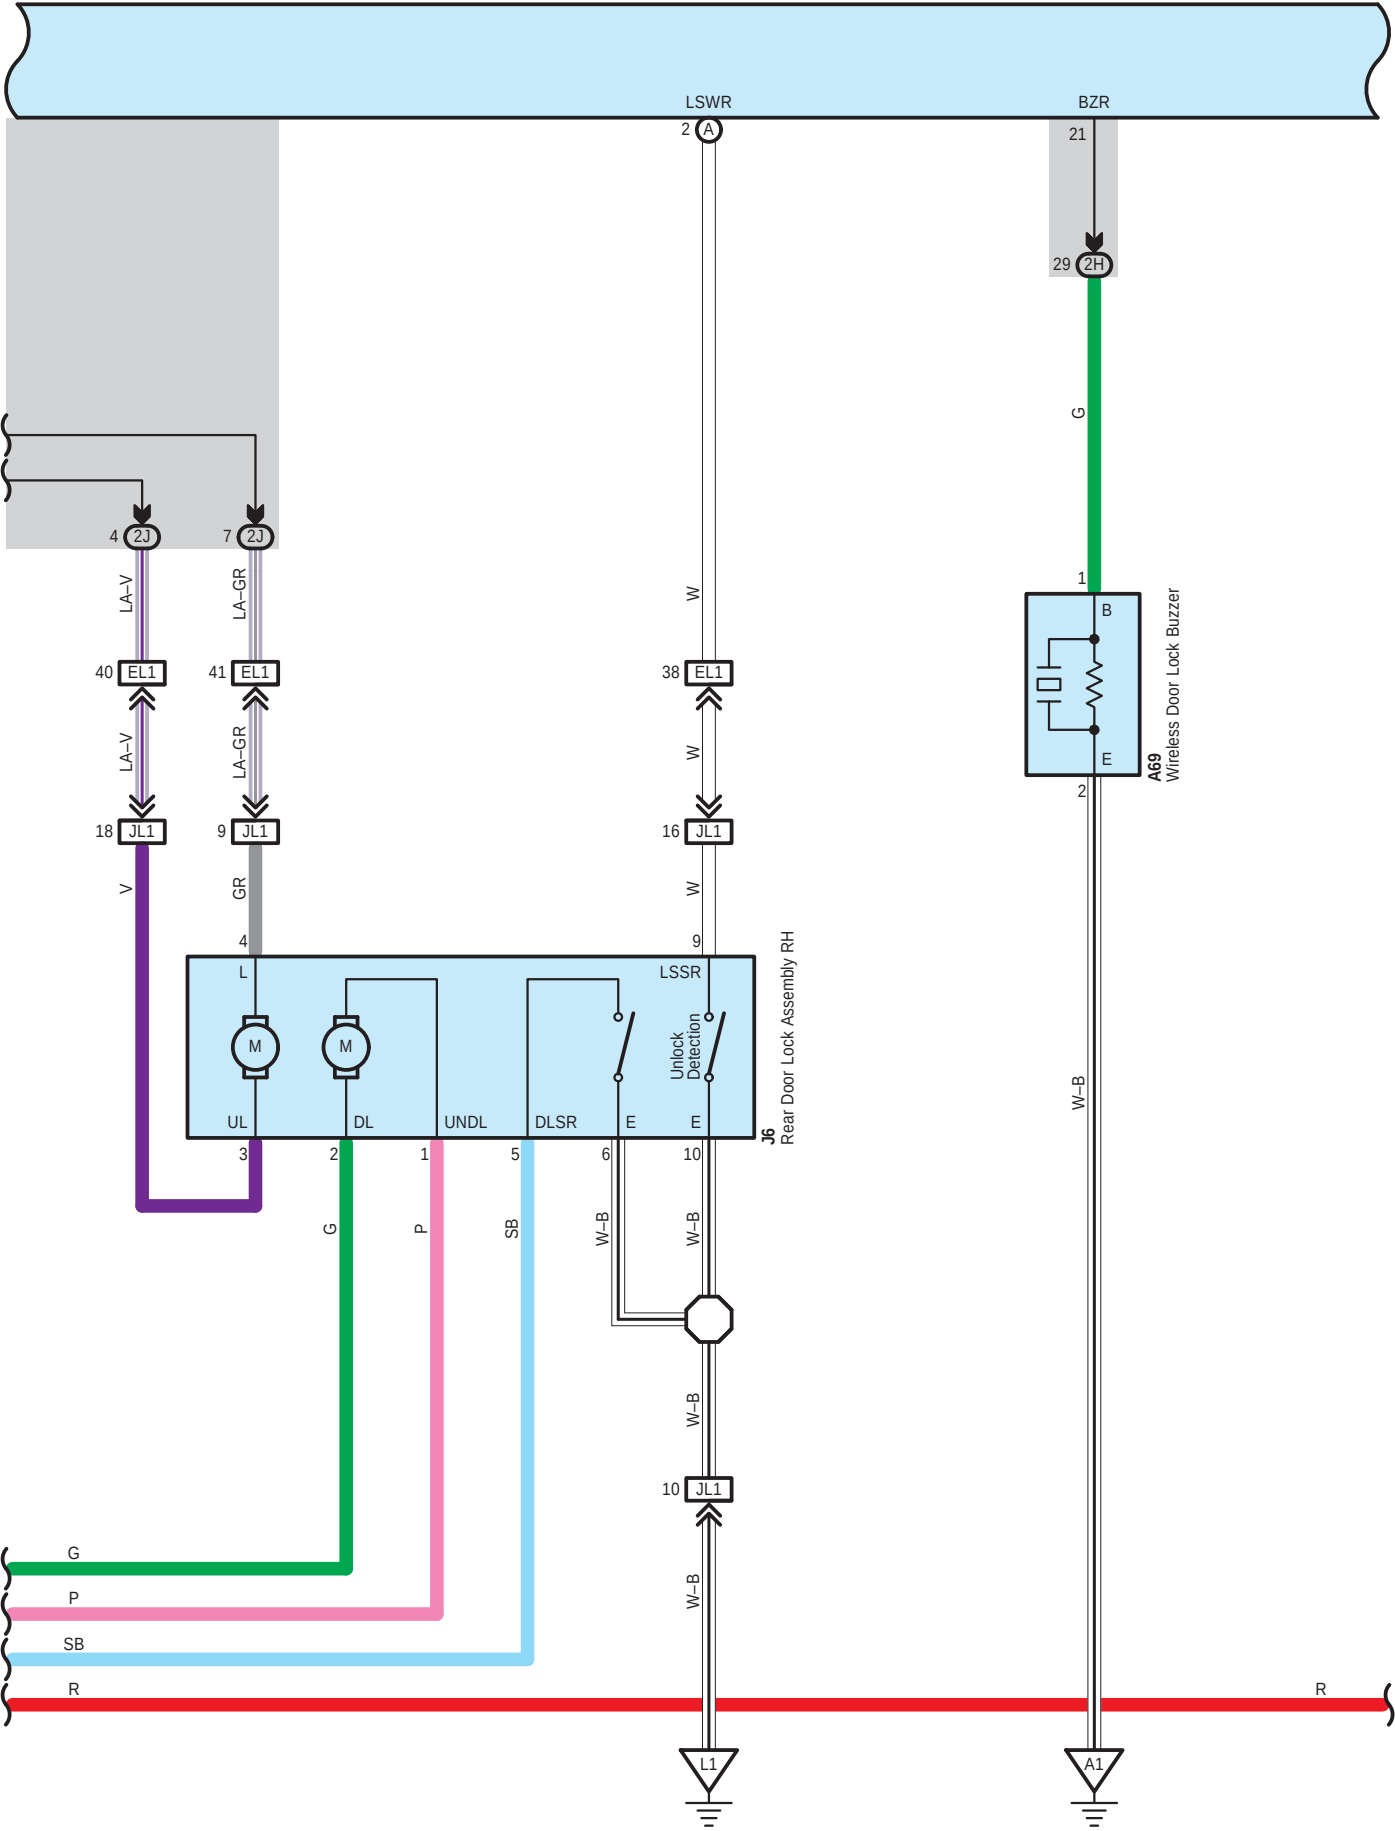


Double Locking

 
E117(A), E118(B)
Main Body ECU












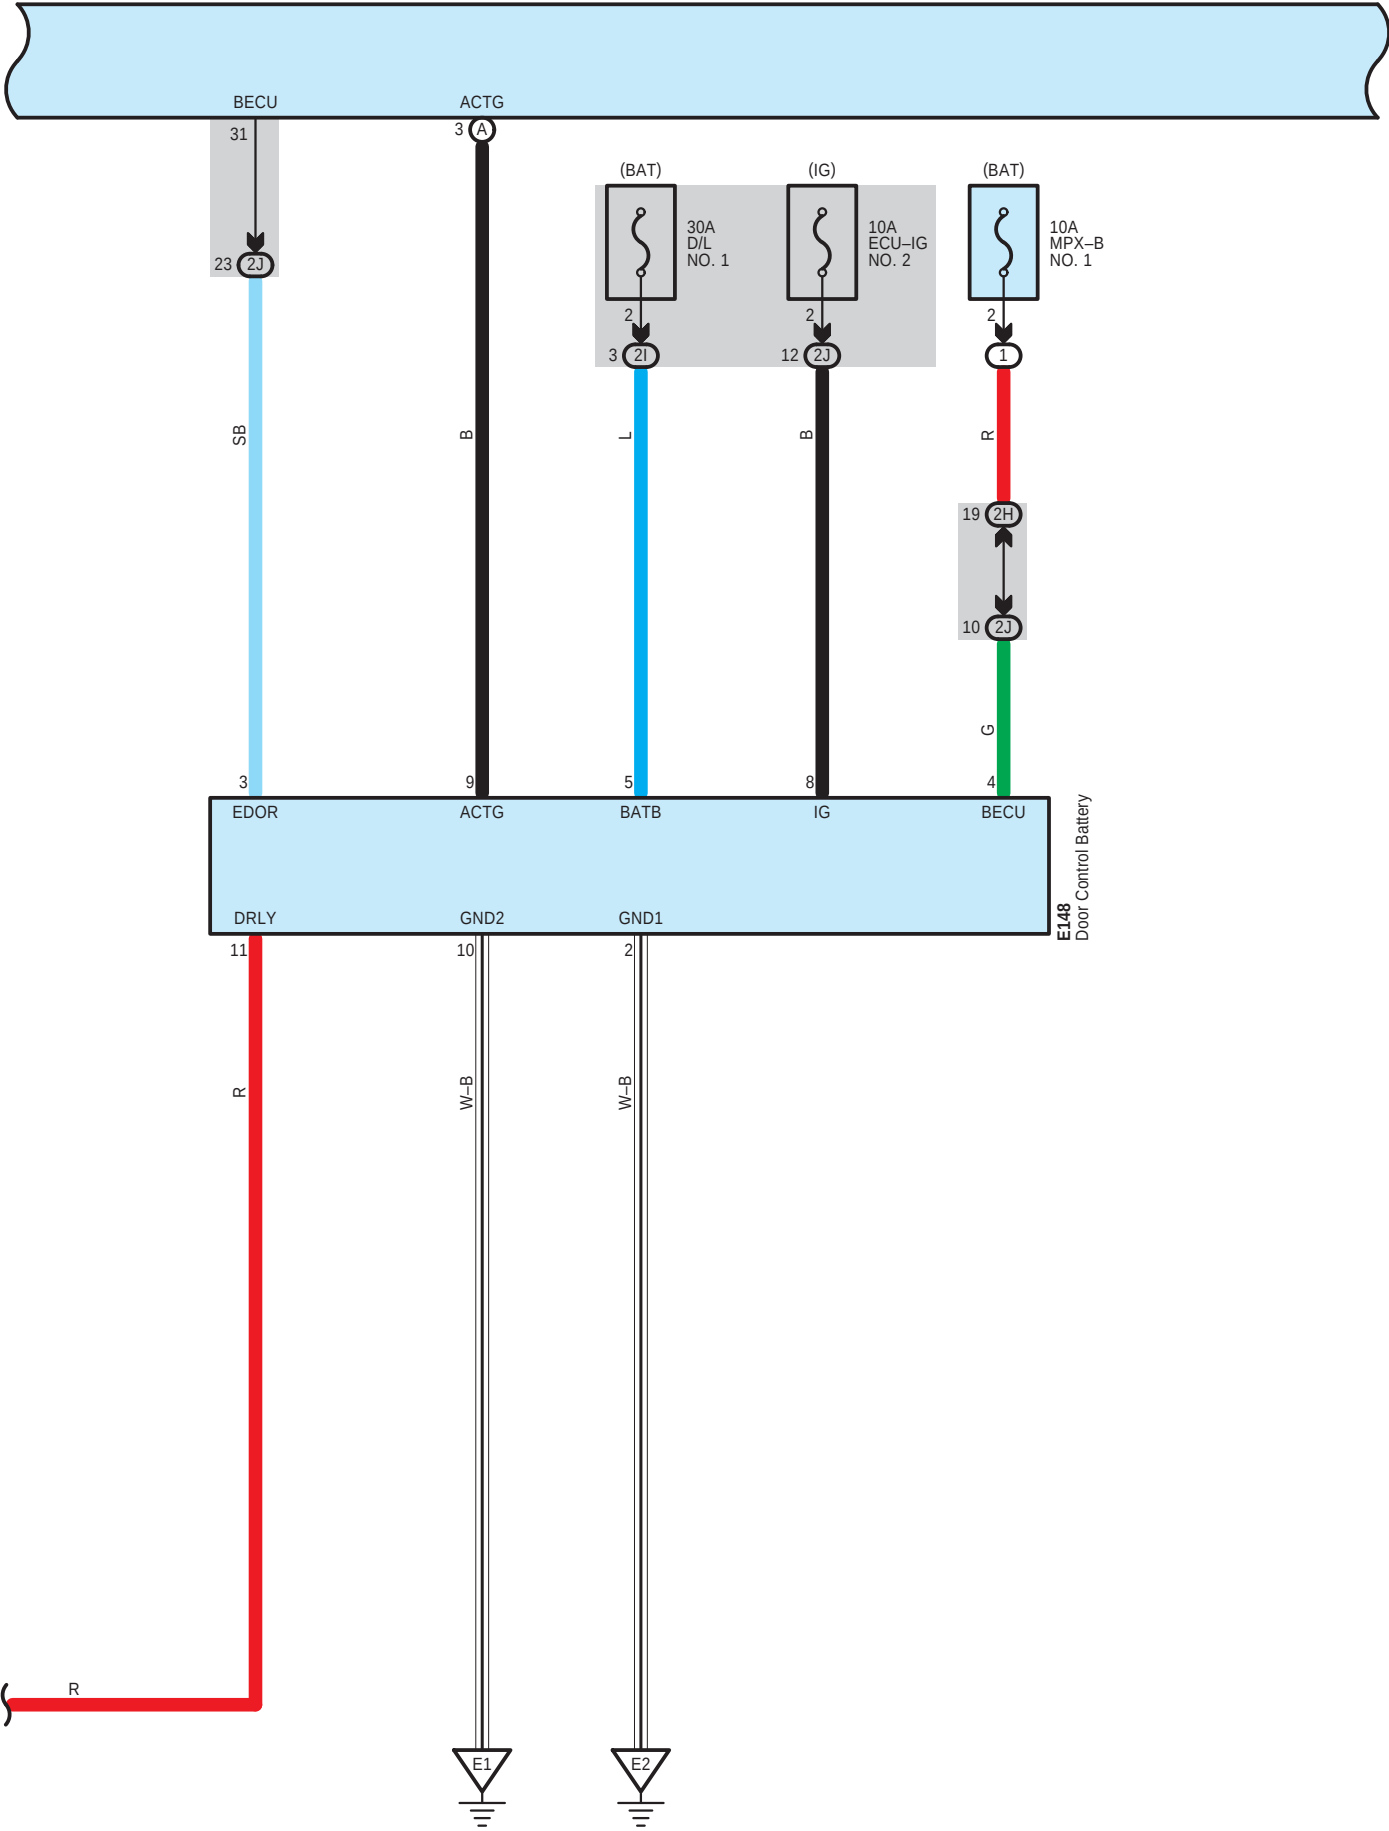


Double Locking

              
E117(A), E118(B)
Main Body ECU

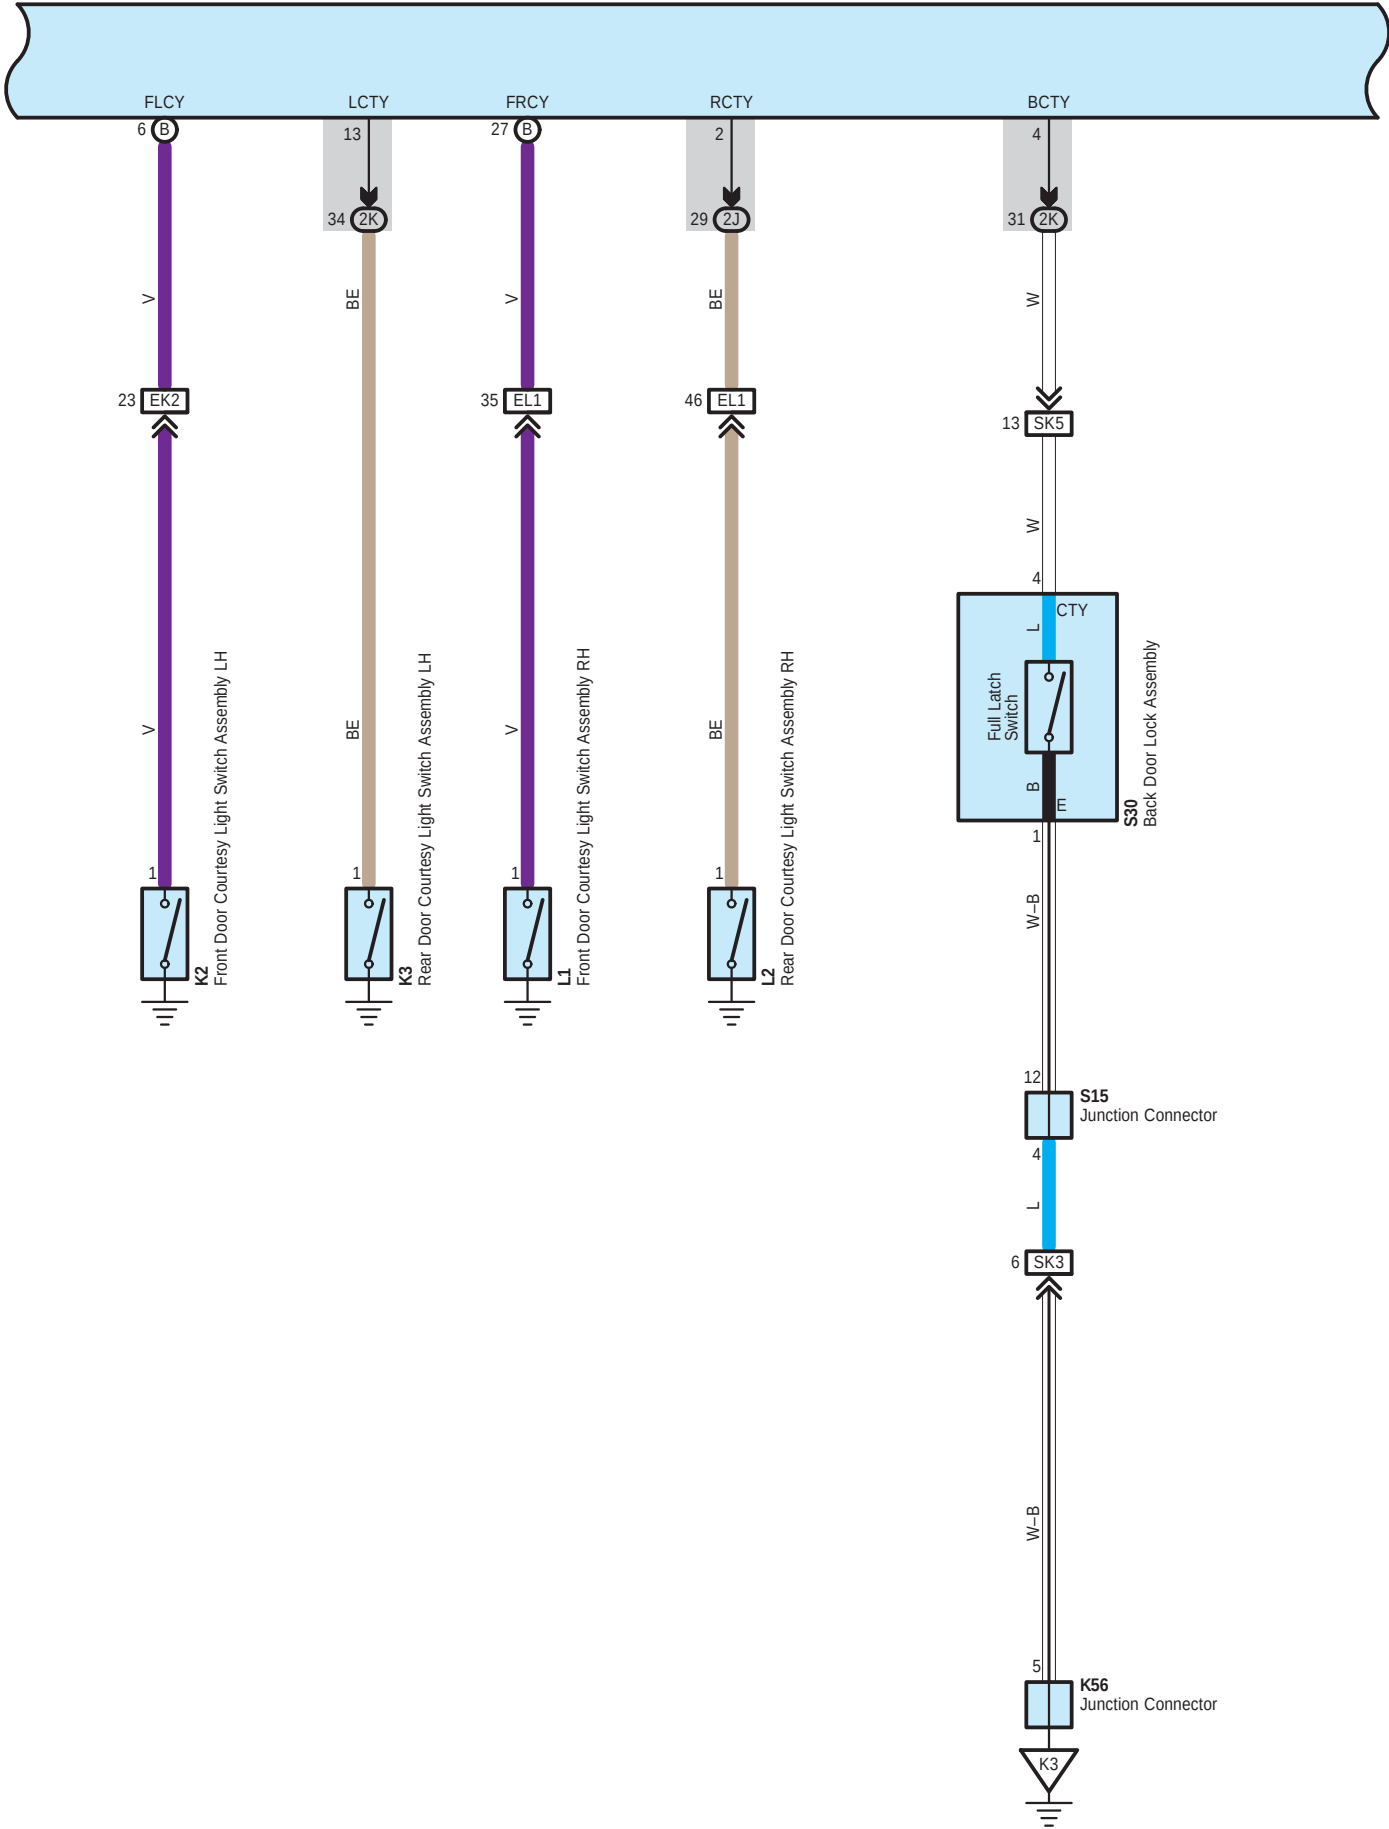

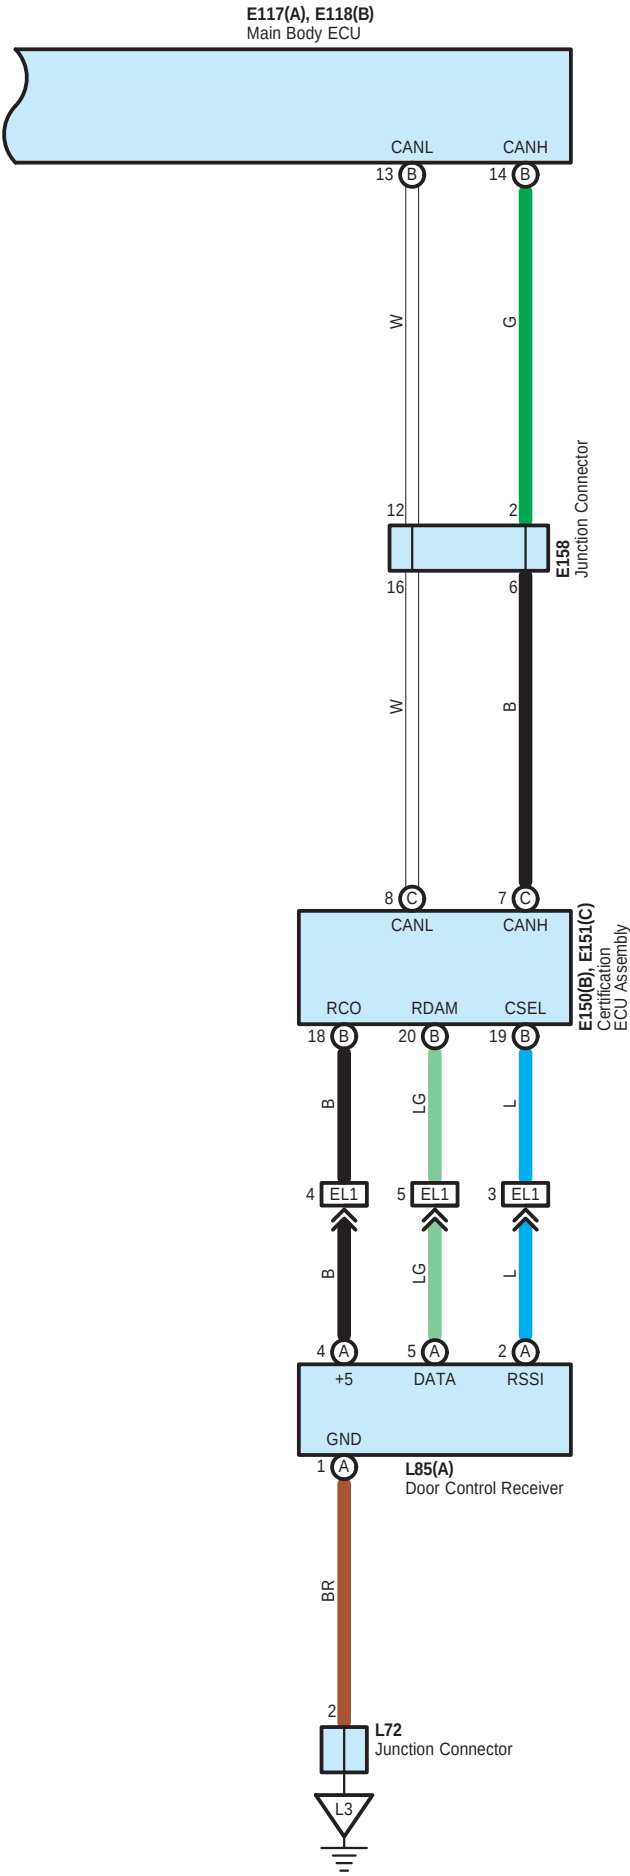

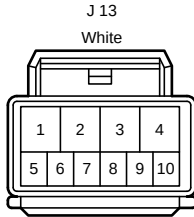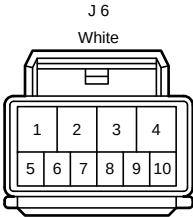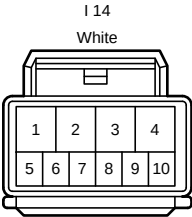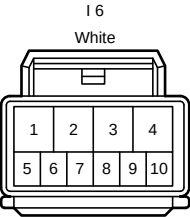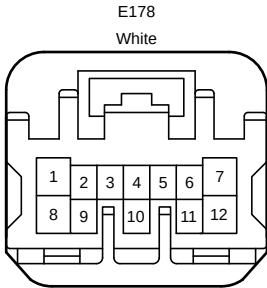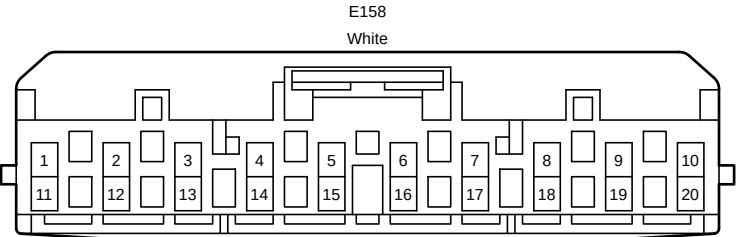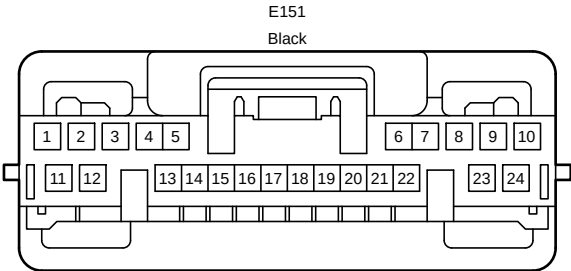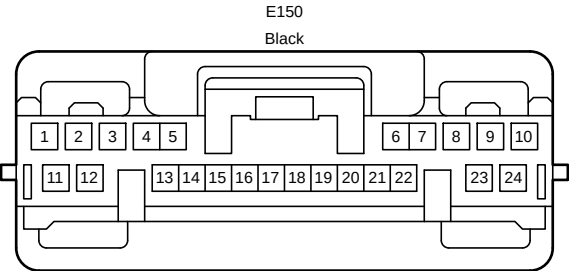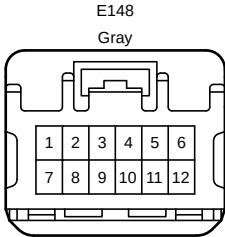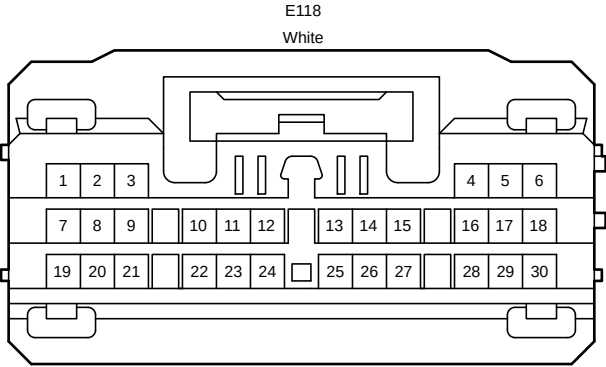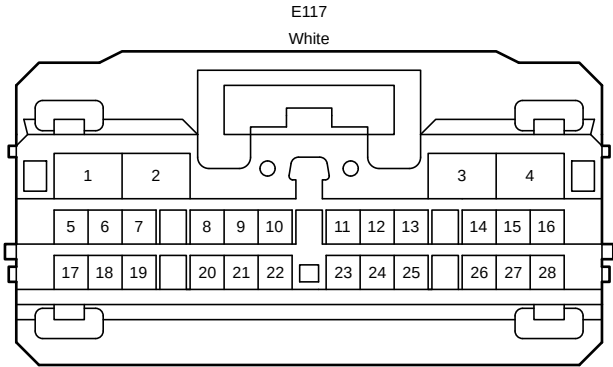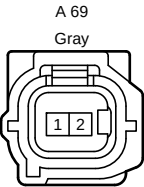

Double Locking


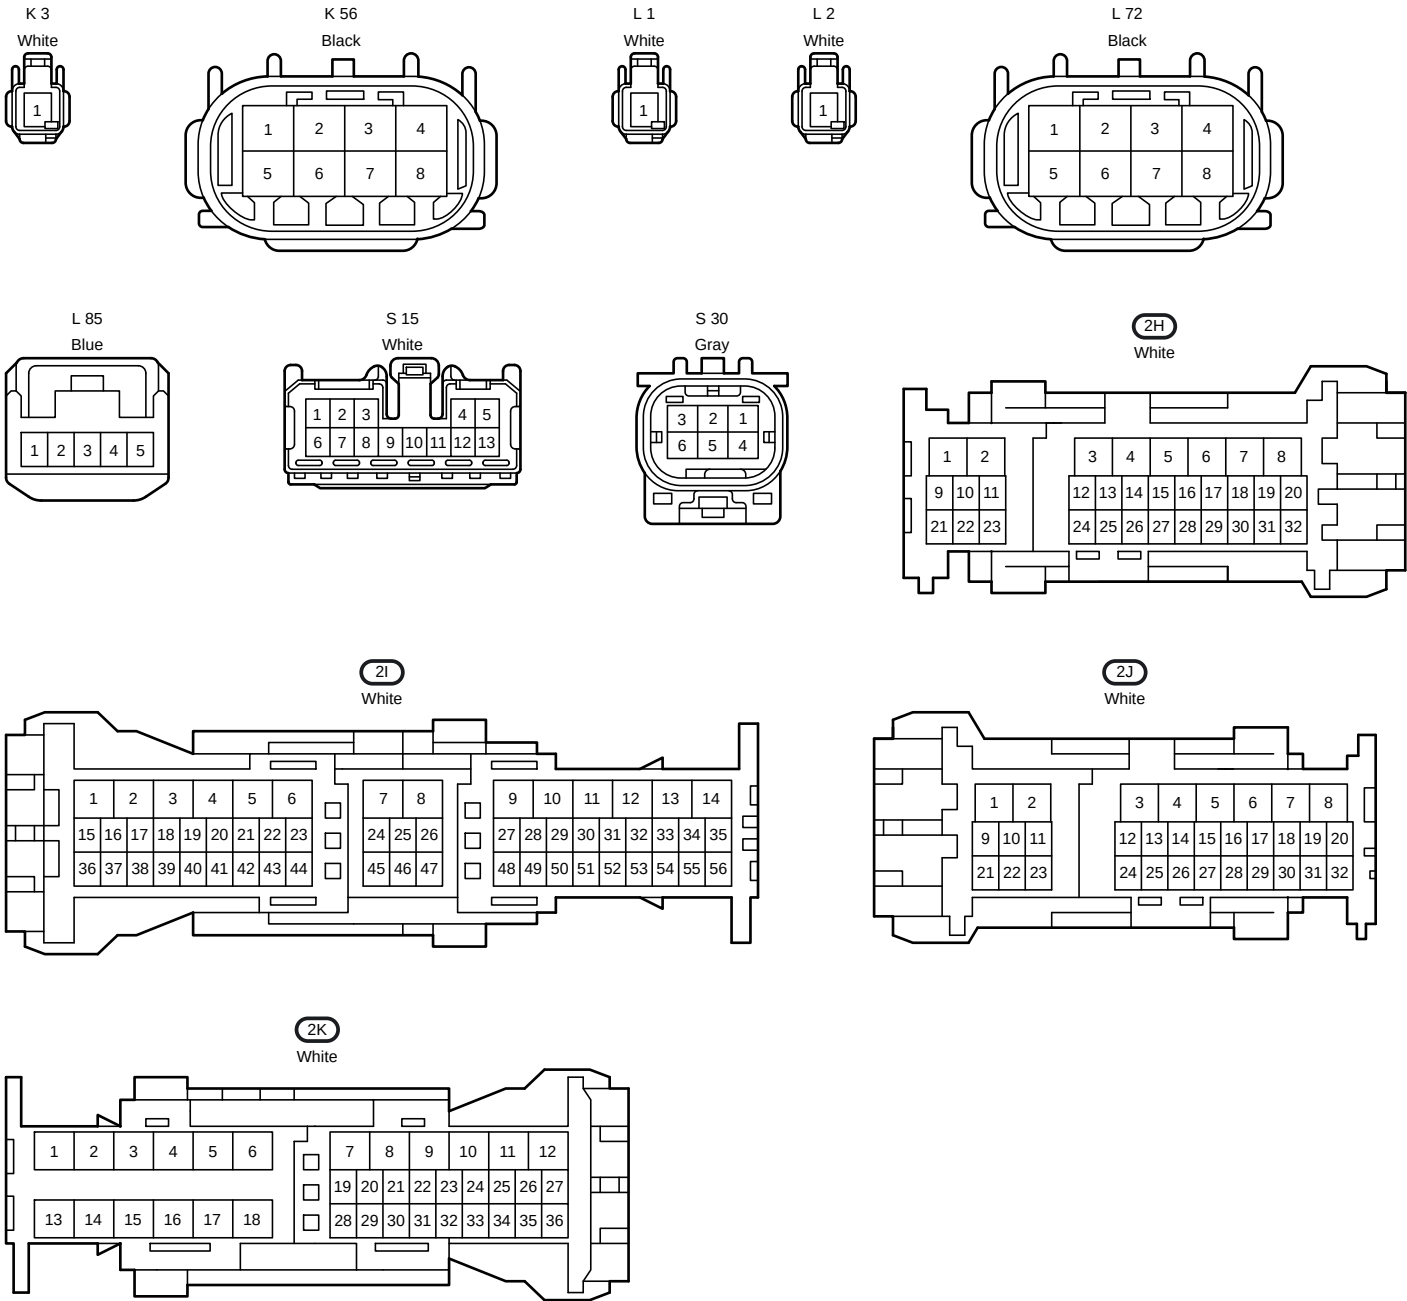 


Double Locking

EK1



White

  Blue

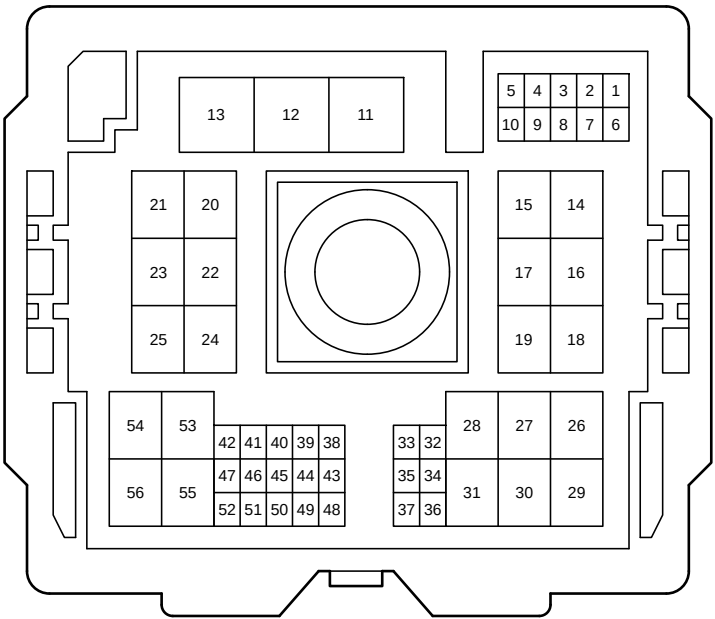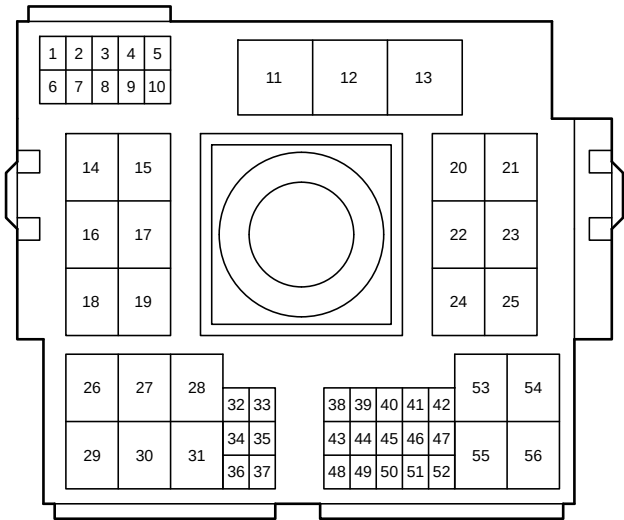


EK2

  White

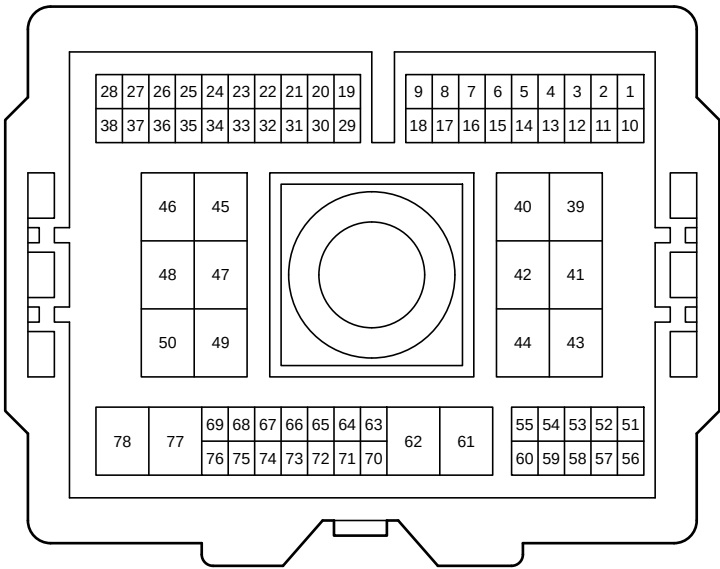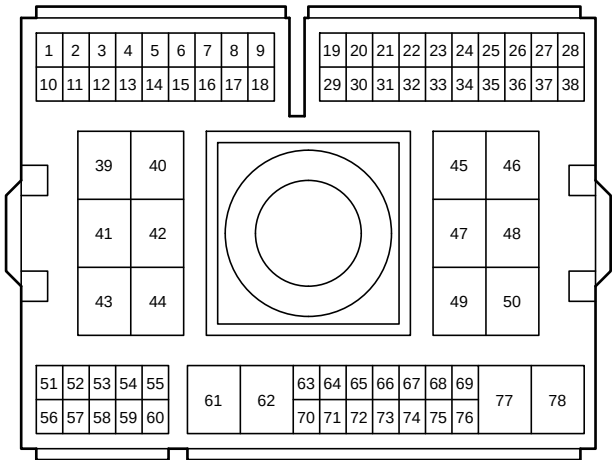


Double Locking

 
EL1
White

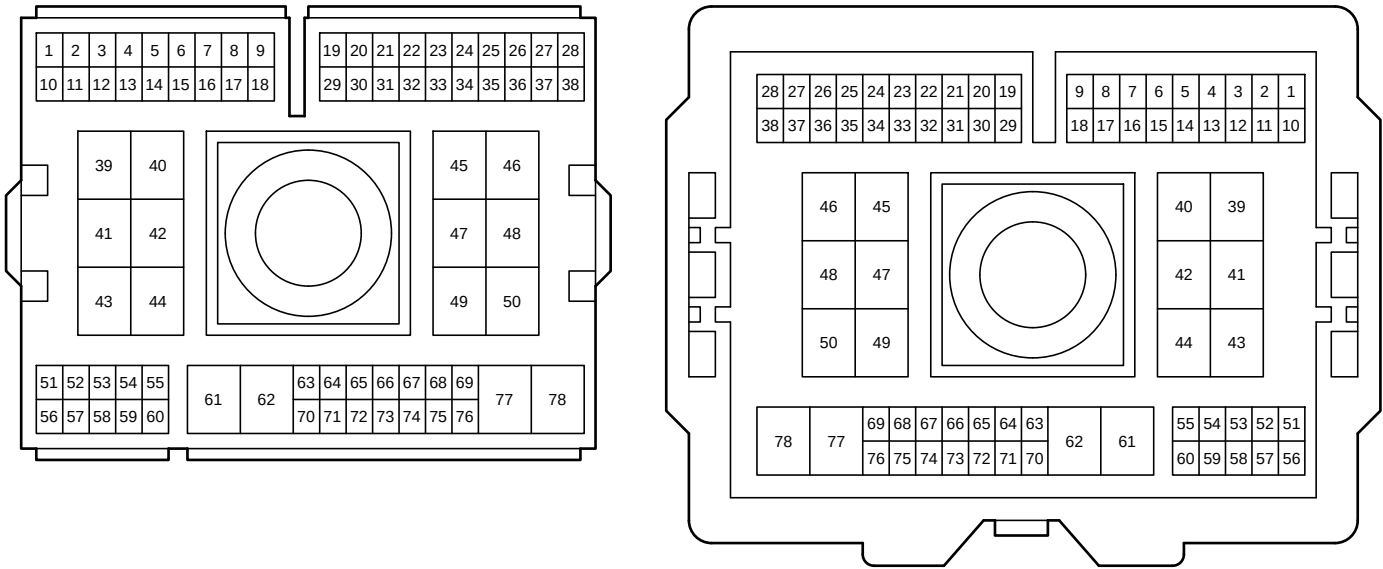

IE3
White

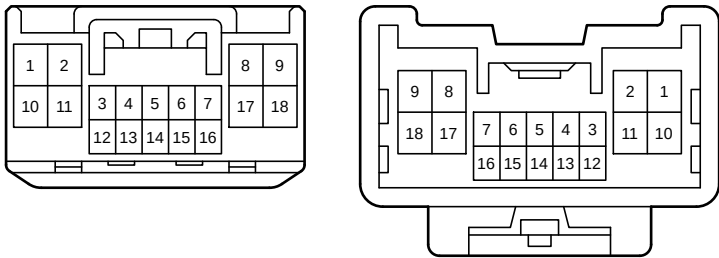 


IE6
White

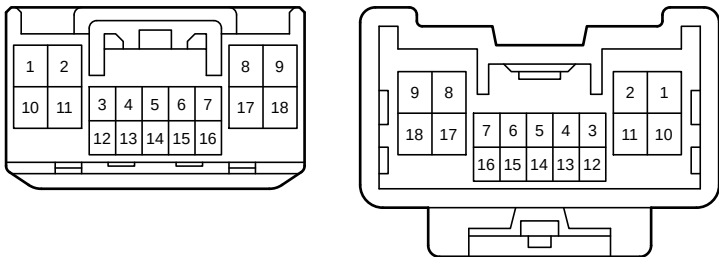 


Double Locking

 
JK1
White

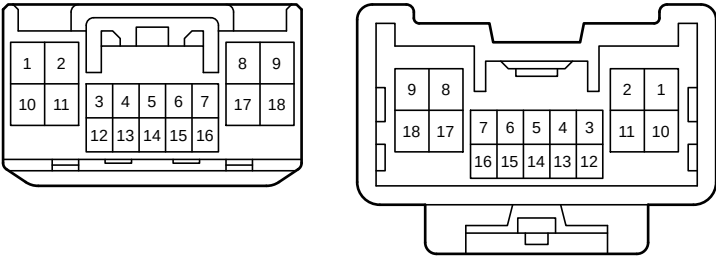


JK2
White

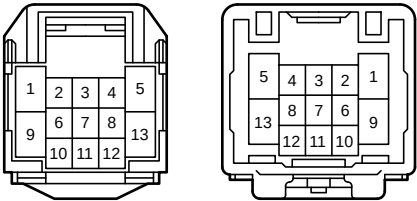 


JL1
White

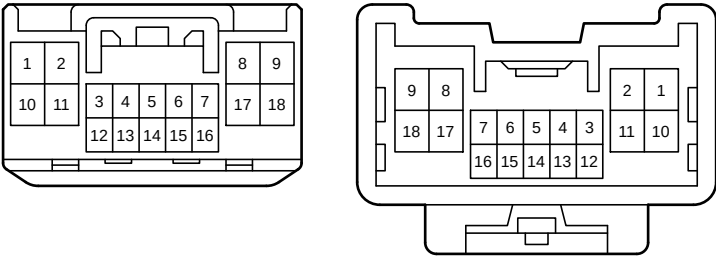 

JL2
White

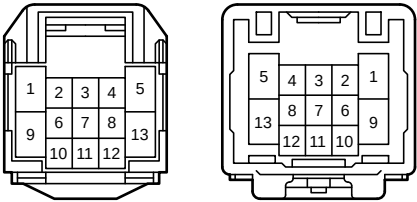 

SK3
Blue

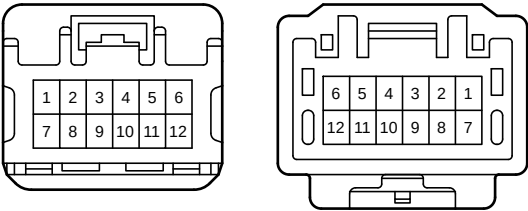 

SK5
White

