


AIR OUTLET SERVOMOTOR REMOVAL

AC2VW-01

1. REMOVE INSTRUMENT LOWER FINISH PANEL
(See page [BO-98](#))
2. REMOVE DUCT HEATER TO RESISTOR No.2
(See page [BO-98](#))

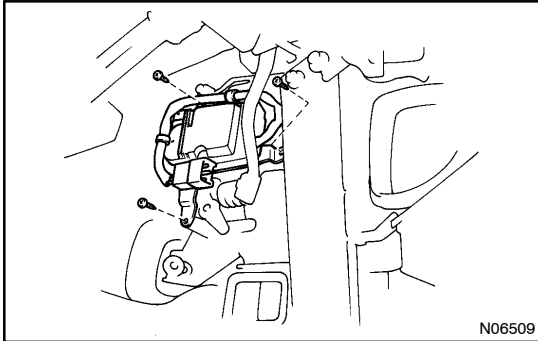

3. REMOVE AIR OUTLET SERVOMOTOR
 - (a) Disconnect the servomotor connector.
 - (b) Remove the 3 screws and the servomotor.