


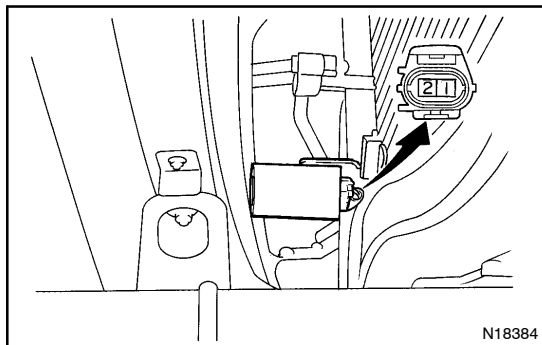

AMBIENT TEMPERATURE SENSOR

ON-VEHICLE INSPECTION

INSPECT SENSOR RESISTANCE

- (a) Disconnect the connector.
- (b) Measure resistance between terminals.

Standard resistance:

1,700 $\pm$ 85 Ω at 25°C (77°F)

If resistance is not as specified, replace the sensor.

AC2WS-01