


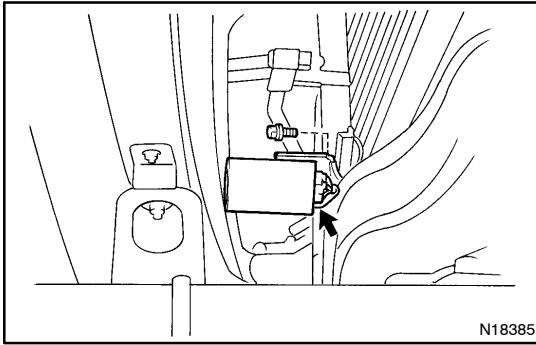

REMOVAL

REMOVE SENSOR

- (a) Disconnect the connector.
- (b) Remove the bolt and sensor.