



H-4-2

N09039

BLOWER RESISTOR INSPECTION

AC254-02

1. REMOVE BLOWER RESISTOR (See page [AC-25](#))
2. INSPECT BLOWER RESISTOR RESISTANCE

Measure the resistance between the terminal 1 and 4.

Standard resistance: 1.8 – 2.2 Ω

If the resistance is not as specified, replace the blower resistor.

3. REINSTALL BLOWER RESISTOR (See page [AC-25](#))