

REMOVAL

1. RUN ENGINE AT IDLE SPEED WITH A/C SWITCH ON FOR 10 MINUTES
2. STOP ENGINE
3. DISCONNECT NEGATIVE (–) TERMINAL CABLE FROM BATTERY
4. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM
5. DISCONNECT DISCHARGE AND SUCTION HOSES

Remove the 2 bolts and disconnect the both hoses.

NOTICE:

Cap the open fittings immediately to keep the moisture or dirt out of the system.

6. REMOVE ENGINE UNDER COVER
7. REMOVE DRIVE BELT (See page [AC-17](#))
8. REMOVE COMPRESSOR
 - (a) Disconnect the connector.
 - (b) Remove the 4 bolts and pull the compressor upward.
9. REMOVE COMPRESSOR BRACKET

Remove the 5 bolts and bracket.