


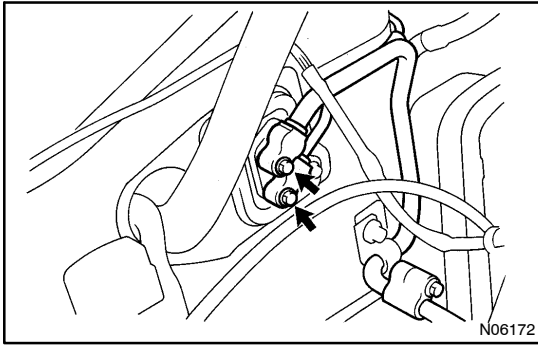

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount:

$850 \pm 50 \text{ g}$ ($29.98 \pm 1.76 \text{ oz.}$)

2. DISCONNECT SUCTION TUBE AND LIQUID TUBE FROM COOLING UNIT FITTING

Remove the 2 bolts and both tubes.


Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

NOTICE:

At time of installation, cap the open fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of installation, lubricate 2 new O-rings with compressor oil and install the tubes.

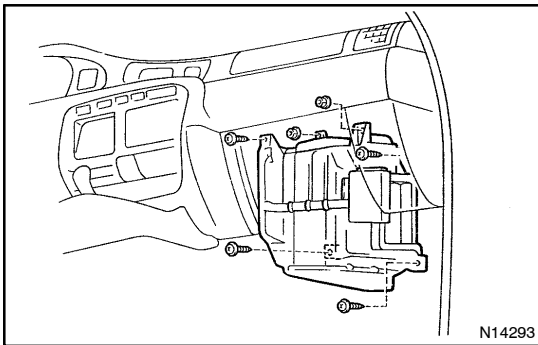

3. REMOVE THESE PARTS:

- (a) Glove compartment door (See page [BO-98](#))
- (b) Glove compartment door reinforcement (See page [BO-98](#))

4. REMOVE COOLING UNIT

- (a) Disconnect the connectors.
- (b) Remove the 4 screws, 2 nuts and cooling unit.