


ENGINE COOLANT TEMPERATURE (ECT) CUT RELAY INSPECTION

AC34L-01

1. REMOVE INSTRUMENT PANEL (See page [BO-98](#))

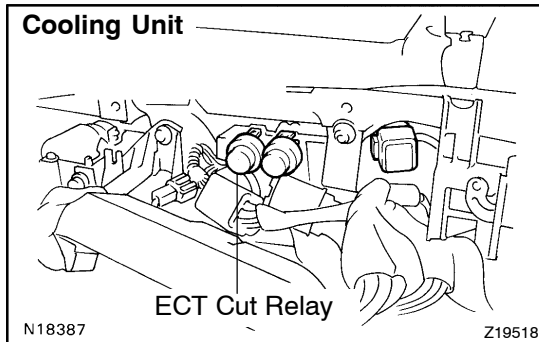

2. REMOVE ECT CUT RELAY FROM COOLING UNIT
3. INSPECT ECT CUT RELAY CONTINUITY
(See page [AC-109](#))
4. REINSTALL ECT CUT RELAY
5. REINSTALL INSTRUMENT PANEL