



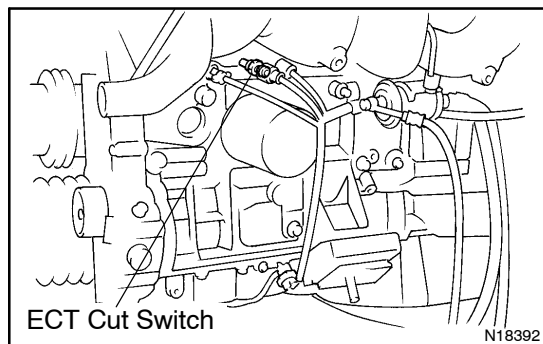

ENGINE COOLANT TEMPERATURE (ECT) CUT SWITCH INSPECTION

AC34P-01


1. REMOVE ECT CUT SWITCH

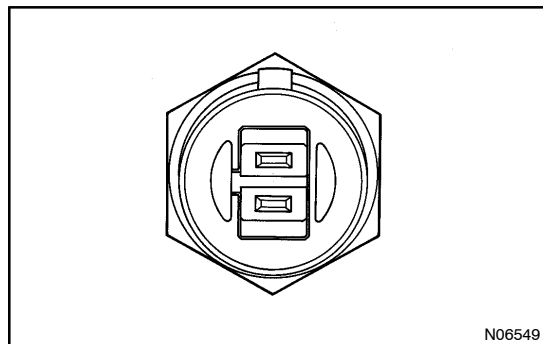

2. INSPECT SWITCH CONTINUITY

Check the continuity between terminals of the switch, as shown in the chart below.

If continuity is not as specified, replace the switch.

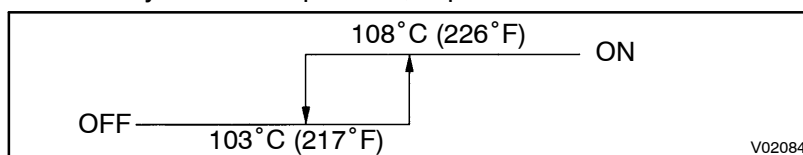

3. REINSTALL ECT CUT SWITCH