


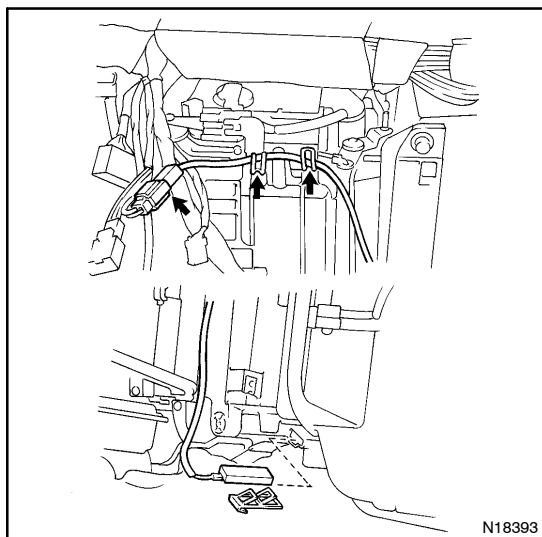

ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL

AC2VK-01

1. REMOVE INSTRUMENT PANEL SAFETY PAD
(See page [BO-98](#))
2. REMOVE SENSOR
 - (a) Disconnect the connector.
 - (b) After pulling off the clamp, pull out the sensor.