



# EXTRA-HI RELAY INSPECTION

AC34M-01

1. REMOVE INSTRUMENT PANEL (See page [BO-98](#))

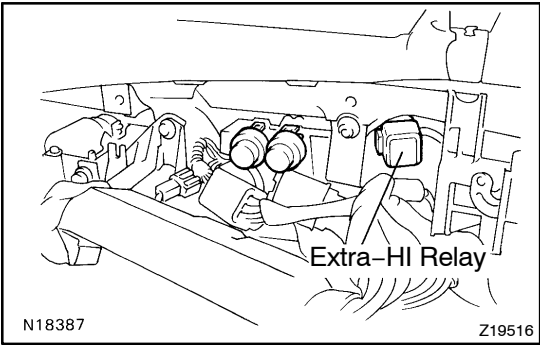

2. REMOVE EXTRA-HI RELAY FROM COOLING UNIT

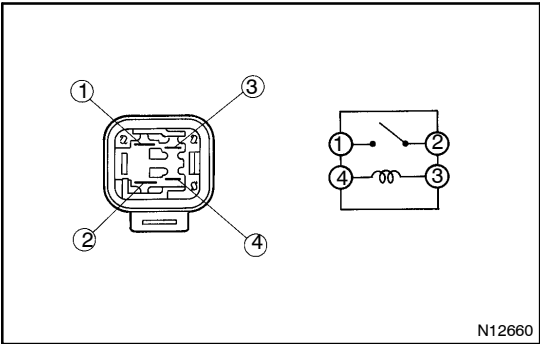

3. INSPECT EXTRA-HI RELAY CONTINUITY

| Condition                          | Tester connection | Specified condition |
|------------------------------------|-------------------|---------------------|
| Constant                           | 3 - 4             | Continuity          |
| Apply B+ between terminals 3 and 4 | 1 - 2             | Continuity          |

4. REINSTALL EXTRA-HI RELAY  
5. REINSTALL INSTRUMENT PANEL