

# EVAPORATOR

AC2RH-02

## ON-VEHICLE INSPECTION

1. REMOVE GLOVE COMPARTMENT PARTS (See page [BO-98](#))

2. REMOVE POWER TRANSISTOR

(a) Disconnect the connector.

(b) Remove the 2 screws and power transistor.

3. INSPECT EVAPORATOR AND FITTINGS FOR LEAKAGE

Using a gas leak detector, check for leakage.

If there is leakage, check the tightening torque at the joints or check the evaporator.