

HEATER RADIATOR

INSPECTION

AC2RM-02

1. REMOVE HEATER RADIATOR (See page [AC-30](#))
2. INSPECT FINS FOR BLOCKAGE

If the fins are clogged, clean them with compressed air.

3. INSPECT FITTINGS FOR CRACKS OR SCRATCHES

Repair as necessary.

4. REINSTALL HEATER RADIATOR (See page [AC-30](#))