

DISASSEMBLY

1. REMOVE AIR VENT DUCT

- (a) Disconnect the control link.
- (b) Remove the 4 screws and duct.

2. REMOVE AIR MIX SERVOMOTOR

- (a) Remove the engine coolant temp. sensor harness.
- (b) Disconnect the control link.
- (c) Remove the 3 screws and servomotor.

3. REMOVE HEATER RADIATOR

- (a) Remove the 3 screws and 3 clamps.
- (b) Pull out the heater radiator.
- (c) Disconnect the heater radiator pipe from the heater radiator.

4. REMOVE AIR OUTLET SERVOMOTOR

Remove 3 screws and servomotor.

5. REMOVE ASPIRATOR

Remove the screw and aspirator.

6. REMOVE FOOT AIR DUCT

Remove the 2 screws and duct.

7. REMOVE ENGINE COOLANT TEMPERATURE (ECT) SENSOR

- (a) Disconnect the connector.
- (b) After pulling off the clamp, pull out the sensor.