



HEATER MAIN RELAY INSPECTION

AC34I-01

1. REMOVE LH FRONT DOOR SCUFF PLATE

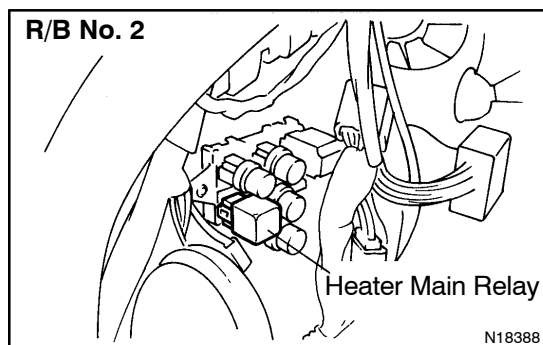

2. REMOVE HEATER MAIN RELAY

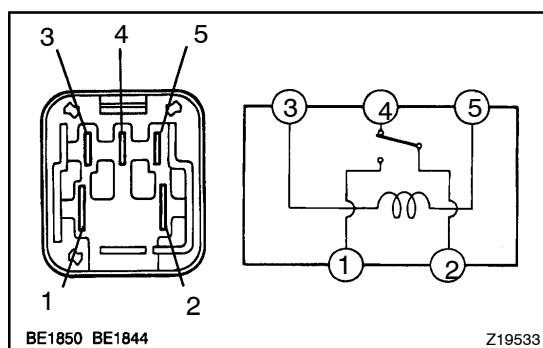

3. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 4 3 - 5	Continuity
Apply B+ between terminals 3 and 5.	1 - 2	Continuity

If continuity is not as specified, replace the relay.

4. REINSTALL HEATER MAIN RELAY

5. REINSTALL LH FRONT DOOR SCUFF PLATE