



MAGNETIC CLUTCH RELAY INSPECTION

AC34K-01

1. REMOVE INSTRUMENT PANEL (See page [BO-98](#))

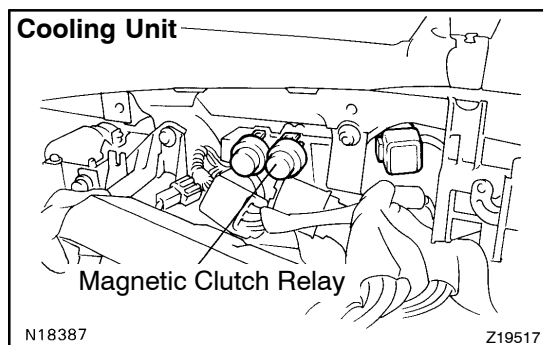

2. REMOVE MAGNETIC CLUTCH RELAY FROM COOLING UNIT

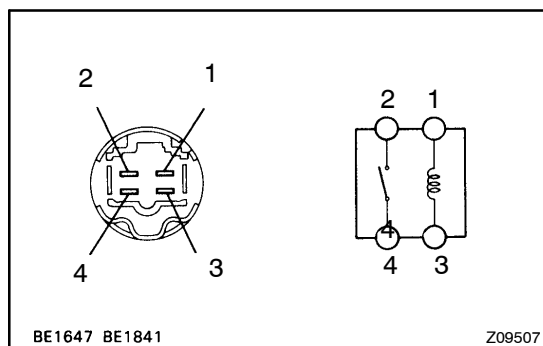

3. INSPECT MAGNETIC CLUTCH RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 3	Continuity
Apply B+ between terminals 1 and 3.	2 - 4	Continuity

If continuity is not as specified, replace the relay.

4. REINSTALL MAGNETIC CLUTCH RELAY
5. REINSTALL INSTRUMENT PANEL