



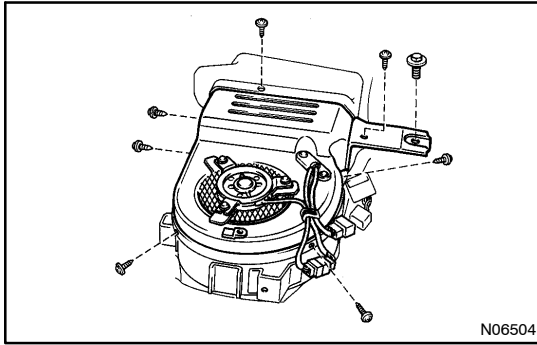


REAR BLOWER MOTOR REMOVAL

AC250-01

1. REMOVE FRONT RH SEAT
2. REMOVE AIR DUCT
3. REMOVE UPPER UNIT CASE
 - (a) Disconnect the connector.
 - (b) Remove the 4 screws and bolt then remove the upper case.

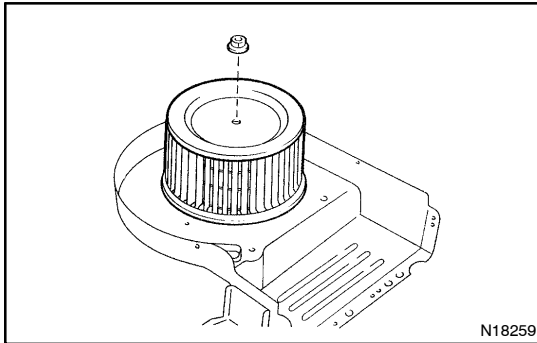

4. REMOVE BLOWER MOTOR
 - (a) Remove the nut and fan.

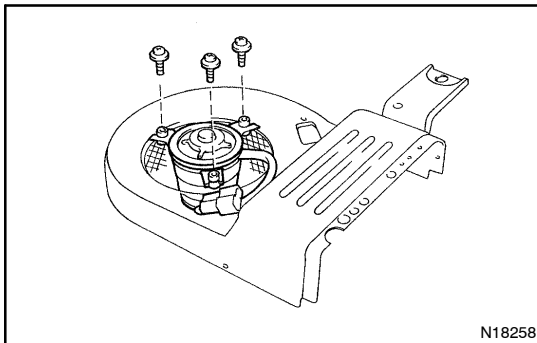

- (b) Remove the 3 screws and motor.