

REAR HEATER RADIATOR

AC2RP-02

INSPECTION

1. REMOVE REAR HEATER RADIATOR (See page [AC-36](#))

2. INSPECT FINS FOR BLOCKAGE

If the fins are clogged, clean them with compressed air.

3. INSPECT FITTINGS FOR CRACKS OR SCRATCHES

Repair as necessary.

4. REINSTALL REAR HEATER RADIATOR (See page [AC-36](#))