


REAR HEATER RELAY INSPECTION


AC34J-01

1. REMOVE LH FRONT SEAT

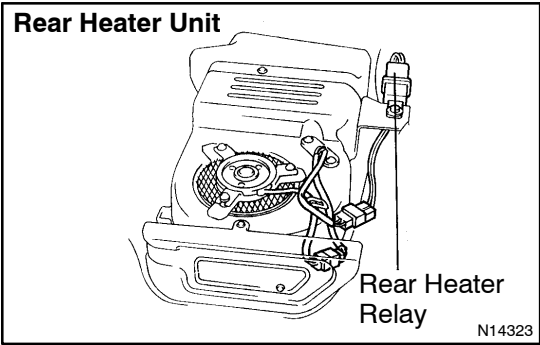

2. REMOVE REAR HEATER RELAY FROM REAR HEATER UNIT

- (a) Disconnect the relay.
- (b) Remove the screw and relay.

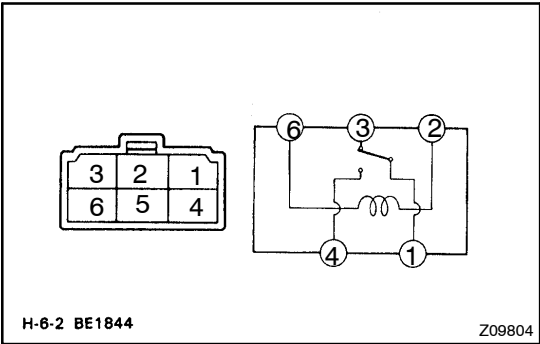

3. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 6 1 - 3	Continuity
Apply B+ between terminals 2 and 6.	1 - 4	Continuity

If continuity is not as specified, replace the relay.

4. REINSTALL REAR HEATER RELAY

5. REINSTALL LH FRONT SEAT