


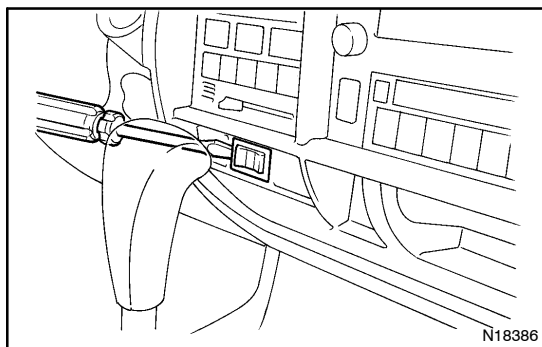

REAR HEATER SWITCH INSPECTION


AC340-01

1. REMOVE REAR HEATER SWITCH

Using a screw driver, pull out the switch then disconnect the connector.

HINT:


Tape the screwdriver tip before use.

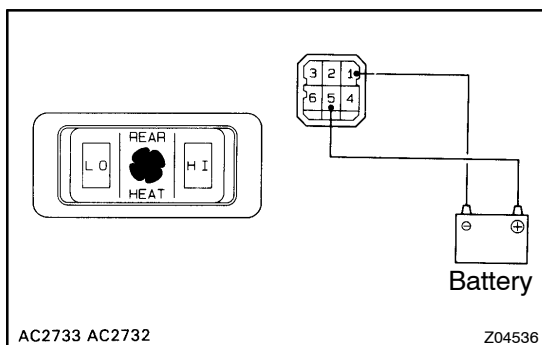

2. INSPECT INDICATOR OPERATION

- Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 1.
- Push each of the rear heater switch knob in and check that their indicators lights up.

If operation is not as specified, replace the switch.

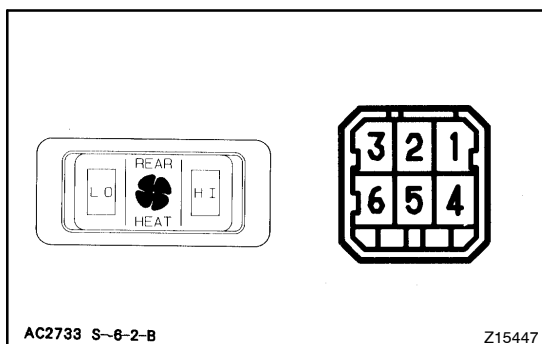

3. INSPECT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
HI	1 - 4	Continuity
OFF	-	No Continuity
LO	1 - 2	Continuity
Illumination circuit	3 - 6	Continuity

If continuity is not as specified, replace the switch.

4. REINSTALL REAR HEATER SWITCH

Reconnect the connector, and reinstall the switch.