



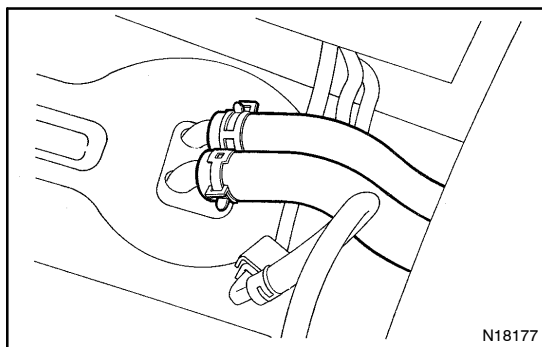


## REMOVAL

1. REMOVE FRONT SEAT RH
2. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

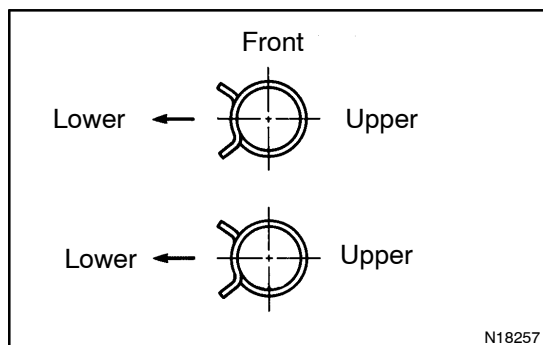


### HINT:


At the time of installation, install the hose clip in a position, as shown in the illustration

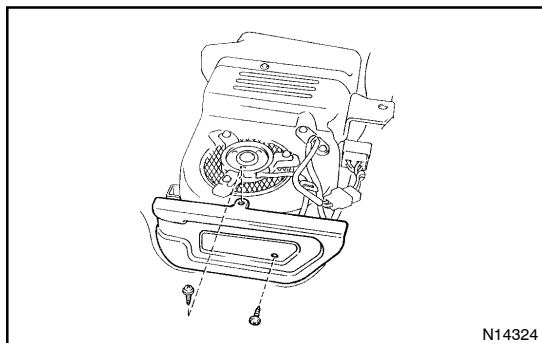

3. REMOVE REAR HEATER UNIT
  - (a) Remove the 2 screws and side cover.

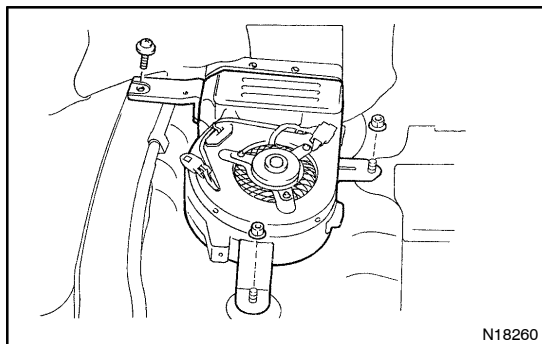

- (b) Disconnect the connector.
  - (c) Remove the nut and screw then remove the rear heater duct.
  - (d) Remove the bolt, 2 nuts and heater unit.

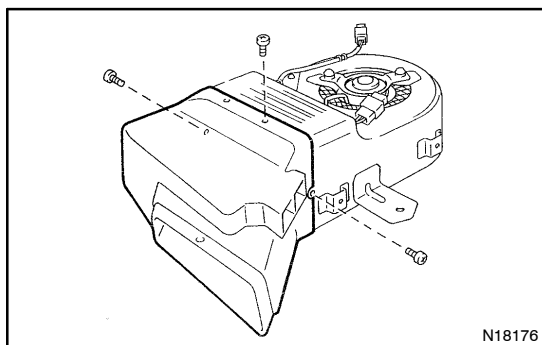

- (e) Remove the 3 screws and air duct.