


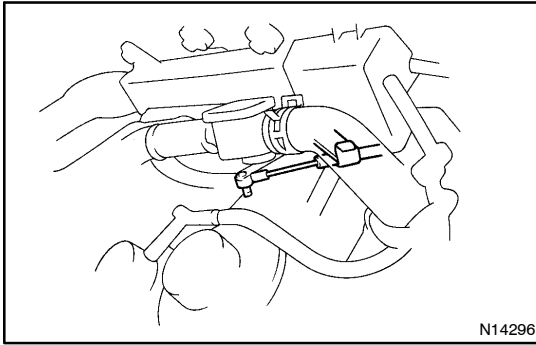

ADJUSTMENT

ADJUST WATER VALVE CONTROL CABLE

- (a) Set the vehicle in these conditions.
 - Ignition switch on.
 - Blower speed control switch on.
 - Temperature control switch to "COOL" position.
- (b) Set the water valve to "COOL" position, install the control cable and lock the clamp.