

WATER VALVE REMOVAL

AC2RU-02

1. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:

It is not necessary to drain out all the coolant.


2. DISCONNECT WATER VALVE CONTROL CABLE

HINT:

At time of installation, for installing control cable (See page [AC-66](#)).

3. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPE AND WATER VALVE

- Grip the claws of the hose clip with pliers and slide the clip along the hose to a place where it does not clamp the hose to the pipe.
- Disconnect the water hoses.

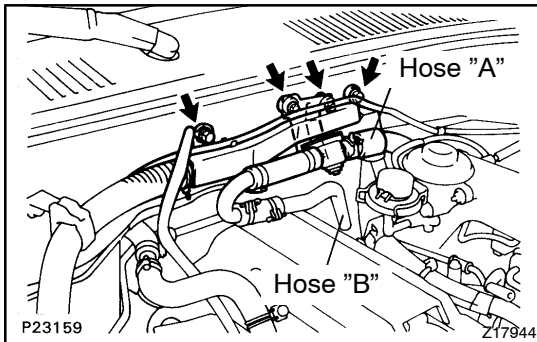

HINT:

- At the time of installation, push the water hose onto the heater radiator pipe as far as ridge on the pipe.
- At the time of installation, install the hose clip in a position, as shown in the illustration.

4. REMOVE WIRE HARNESS PROTECTOR

5. REMOVE WATER VALVE

Remove the 2 bolts and water valve.

