

THROTTLE CABLE ON-VEHICLE REPAIR

AT0T6-03



1. DISCONNECT THROTTLE CABLE

- Loosen the adjusting nut and disconnect the throttle cable from the bracket.
- Disconnect the throttle cable from the throttle linkage.
- Remove the bolt and disconnect the cable clamp from the torque converter clutch housing.

2. REMOVE VALVE BODY (See page [AT-8](#))

3. REMOVE THROTTLE CABLE

Remove the retaining bolt and pull out the throttle cable.

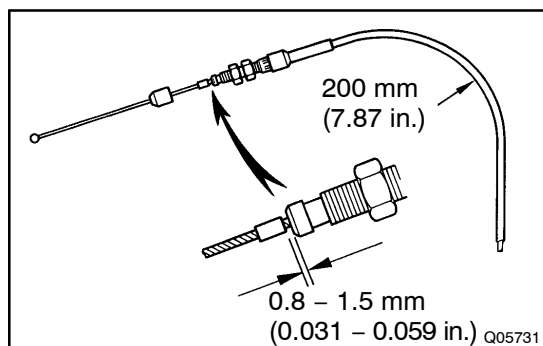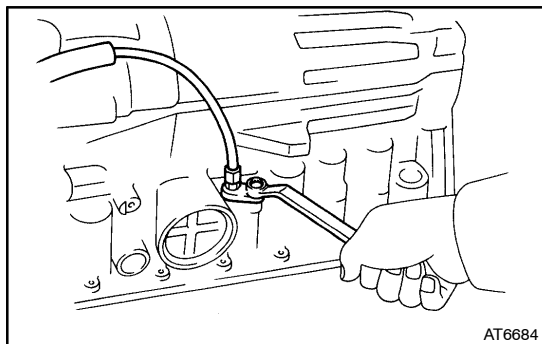

4. REINSTALL THROTTLE CABLE

- To install, follow the removal procedure in reverse.

HINT:

- After installation, fill ATF and check the fluid level (See page [DI-122](#)).
- Adjust the throttle cable (See page [DI-122](#)).

If throttle cable is new, stake the stopper on the inner cable.

- Bend the cable so there is a radius of about 200 mm (7.87 in.).
- Pull the inner cable lightly until slight resistance is felt, and hold it there.
- Stake the stopper, 0.8–1.5 mm (0.031–0.059 in.) from the end of outer cable.