


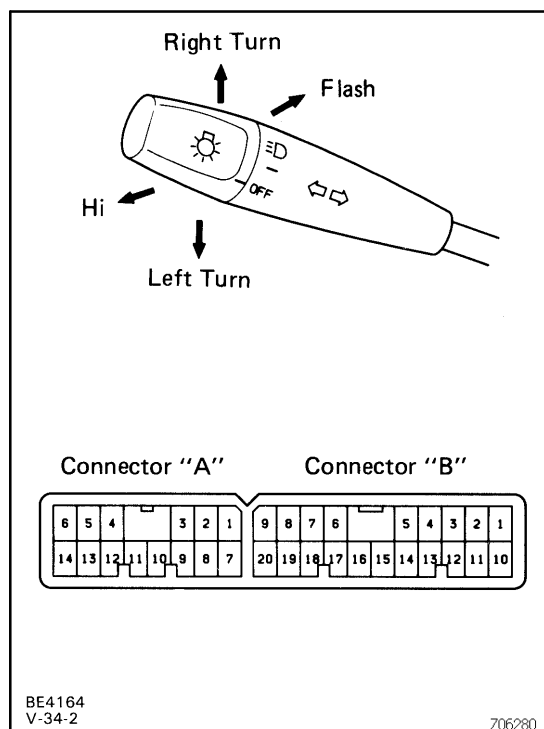

INSPECTION


1. INSPECT LIGHT CONTROL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
TAIL	A2 - A11	Continuity
HEAD	A2 - A11 - A13	Continuity

2. INSPECT HEADLIGHT DIMMER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Flash	A9 - A12 - A14	Continuity
Low beam	A3 - A9	Continuity
High beam	A9 - A12	Continuity

If continuity is not as specified, replace the switch.

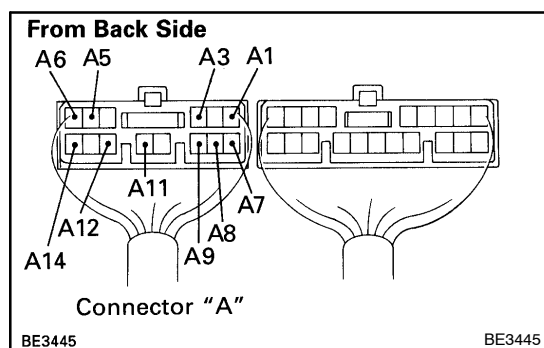

3. INSPECT COMBINATION SWITCH CIRCUIT

Connect the wire harness side connector to the combination switch and inspect wire harness side connector from the back side, as shown.


Light Control Switch Circuit:

Tester connection	Condition	Specified condition
A11 - Ground	Constant	Continuity

Headlight Dimmer Switch Circuit:

Tester connection	Condition	Specified condition
A9 - Ground	Constant	Continuity
A3 - Ground	Light control switch HEAD and fog light switch position ON	Battery positive voltage
A3 - Ground	Light control switch HEAD and fog light switch position OFF	No voltage
A12 - Ground	Light control switch HEAD and Headlight dimmer switch position High beam or flash	Battery positive voltage
A12 - Ground	Light control switch HEAD and Headlight dimmer switch position Low beam	No voltage
A14 - Ground	Constant	Battery positive voltage

If the circuit is not as specified, inspect the circuit connected to other parts.

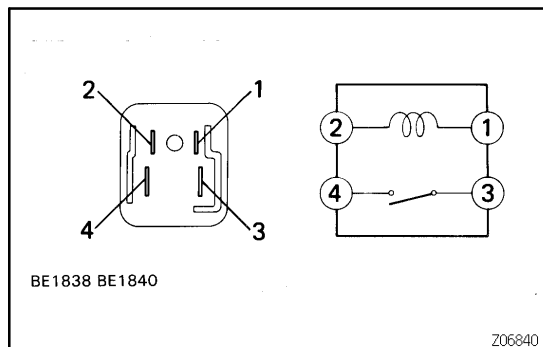


4. INSPECT HEADLIGHT CONTROL RELAY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 4	Continuity

If continuity is not as specified, replace the relay.

5. INSPECT HEADLIGHT CONTROL RELAY CIRCUIT (See page BE-11)

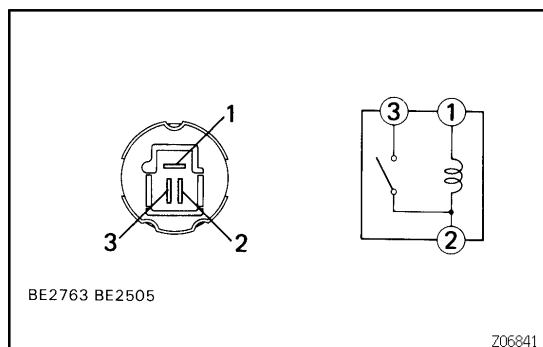


6. INSPECT TAILLIGHT CONTROL RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	2 - 3	Continuity

If continuity is not as specified, replace the relay.

7. INSPECT TAILLIGHT CONTROL RELAY CIRCUIT (See page BE-11)

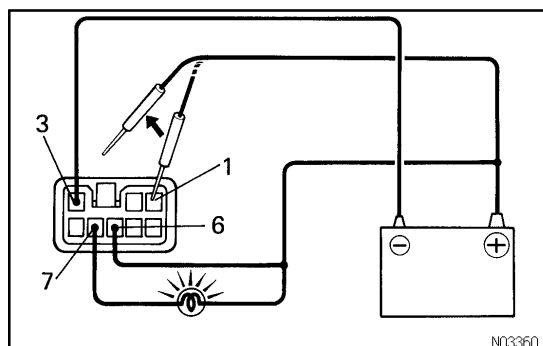


8. INSPECT HEADLIGHT RETAINER CIRCUIT

- Connect the positive (+) leads from the battery to terminals 1 and 6, and the negative (-) lead to terminal 3.
- Connect the 3.4 W test bulb between terminal 7 and the positive (+) lead from the battery.
- Disconnect the positive (+) lead from terminal 1, and check that the test bulb is lighting.


- Connect the negative (-) lead to terminal 5, and check that the test bulb goes out.


If operation is not as specified, replace the relay.

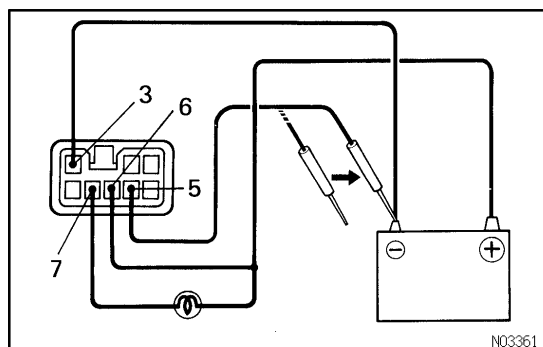

9. INSPECT TAILLIGHT CIRCUIT

- Connect the positive (+) leads from the battery to terminals 1 and 6, and the negative (-) lead to terminal 2.
- Connect the 3.4 W test bulb between terminal 8 and the positive (+) lead from the battery.
- Disconnect the positive (+) lead from terminal 1, and check that the test bulb is lighting.

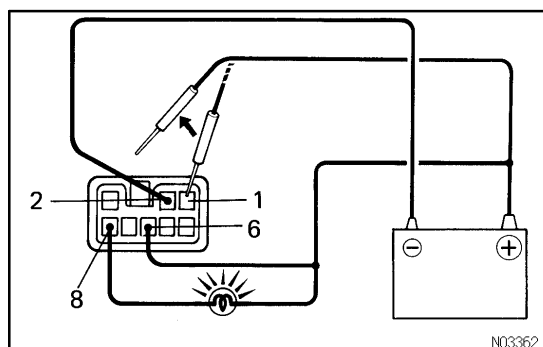

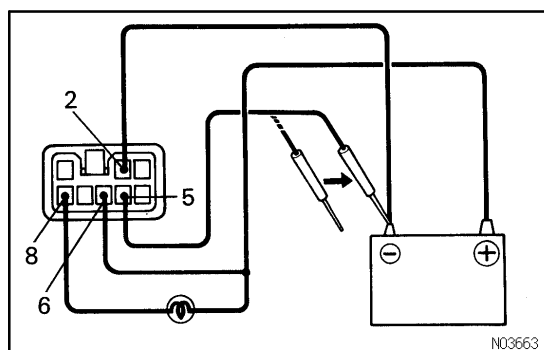

- (d) Connect the negative (-) lead to terminal 5, and check that the test bulb goes out.
If operation is not as specified, replace the relay.