


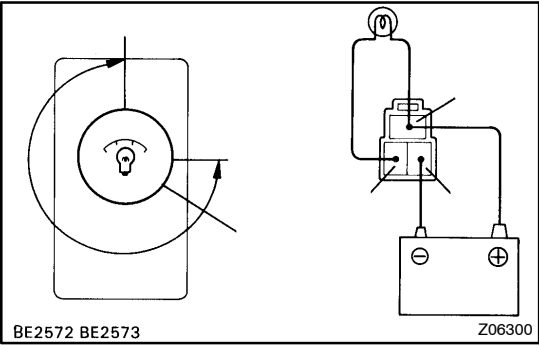

INSPECTION


1. **INSPECT LIGHT CONTROL RHEOSTAT**
- (a) Connect terminals 1 and 3 through a 3.4 W test bulb.
 - (b) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2.
 - (c) Turn the rheostat knob to fully counterclockwise, and check that the test bulb goes out.
 - (d) Gradually turn the rheostat knob to clockwise, and check that the test bulb brightness changes from dark to bright.

If operation is not as specified, replace the rheostat.

HINT:

Adjust the brightness of illumination lights by rheostat.

 
- A/C Control Assembly
- Antenna Switch
- Audio
- Center Diff. Lock Switch
- Cigarette Lighter
- Combination Meter
- Defogger Switch
- ECT Switch
- Hazard Warning Switch
- Rear Heater Switch
- Shift Lever

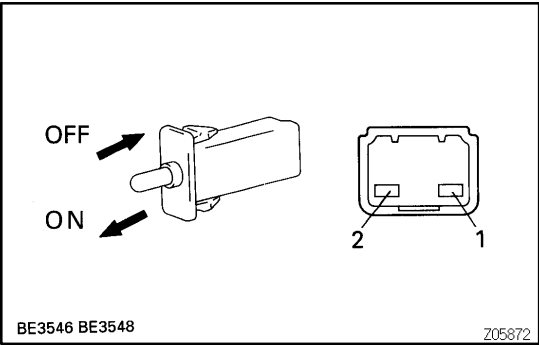

2. **INSPECT GLOVE BOX LIGHT SWITCH CONTINUITY**

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	1 - 2	Continuity

If continuity is not as specified, replace the switch.

Wire Harness Side

BE5710

Z05937

3. INSPECT GLOVE BOX LIGHT SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the harness side, as shown.

Tester connection	Condition	Specified condition
2 – Ground	Constant	Continuity
1 – Ground	Light control switch position OFF	No voltage
1 – Ground	Light control switch position TAIL or HEAD	Battery positive voltage

If the circuit is not as specified, inspect the circuits connected to other parts.

- 4. INSPECT TAILLIGHT CONTROL RELAY CONTINUITY (See page [BE-11](#))**
- 5. INSPECT TAILLIGHT CONTROL RELAY CIRCUIT (See page [BE-11](#))**