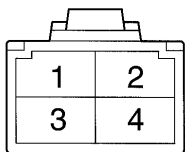


Wire Harness Side


Y N17762

INSPECTION**1. INSPECT IGNITION KEY CYLINDER RELAY CIRCUIT**

Remove the relay and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
3 - Ground	Constant	Continuity
4 - Ground	Door courtesy switch FRONT LH ON	Continuity
1 - Ground	Constant	Battery positive voltage

If the circuit is not as specified, inspect the circuits connected to other parts.

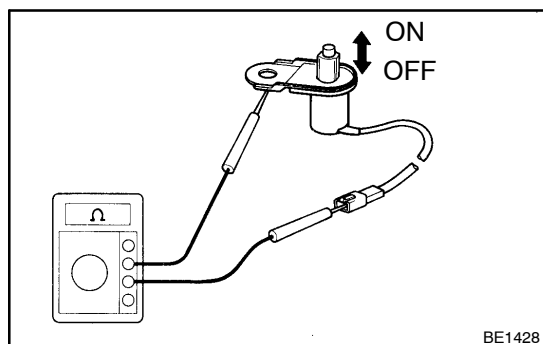


BE1428

2. INSPECT DOOR COURTESY SWITCH CONTINUITY

- Check that there is continuity between terminal and the switch body with the switch ON (switch pin released: opened door).
- Check that there is no continuity between terminal and the switch body with the switch OFF (switch pin pushed in: closed door).

If operation is not as specified, replace the switch.

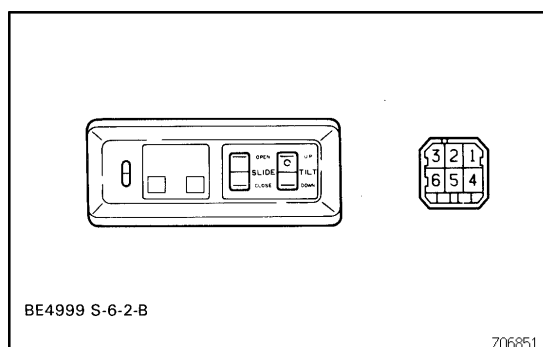


BE4999 S-6-2-B

Z06851

**3. w/ Sliding Roof:
INSPECT FRONT PERSONAL LIGHT SWITCH CONTINUITY**

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	1 - 4	Continuity

If continuity is not as specified, replace the personal light.

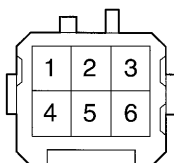Wire Harness Side


Y N17347

4. INSPECT FRONT PERSONAL LIGHT SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
4 – Ground	Constant	Continuity
1 – Ground	Constant	Battery positive voltage


If the circuit is not as specified, inspect power source or wire harness.

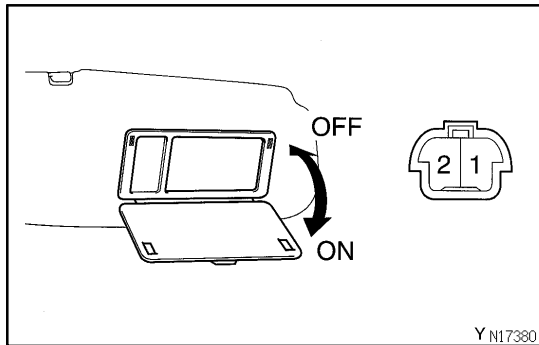

5. INSPECT VANITY LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	1 – 2	Continuity

If continuity is not as specified, replace bulb or vanity light.

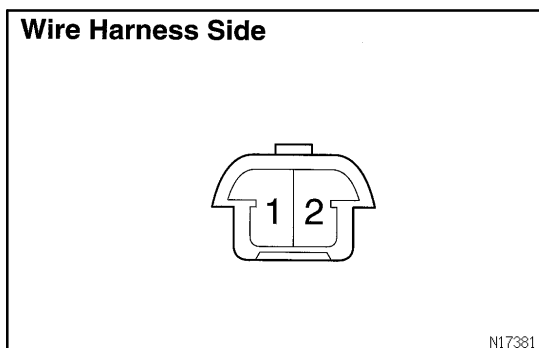


6. INSPECT VANITY LIGHT SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.


Tester connection	Condition	Specified condition
2 – Ground	Constant	Continuity
1 – Ground	Constant	Battery positive voltage

If the circuit is not as specified, inspect power source or wire harness.

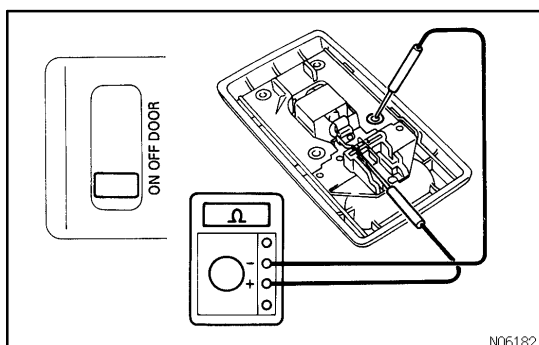

7. INSPECT ROOM LIGHT ASSEMBLY

- Disconnect the connector from room light assembly.
- Turn the room light switch ON, and check that there is continuity between terminal 2 and body ground.

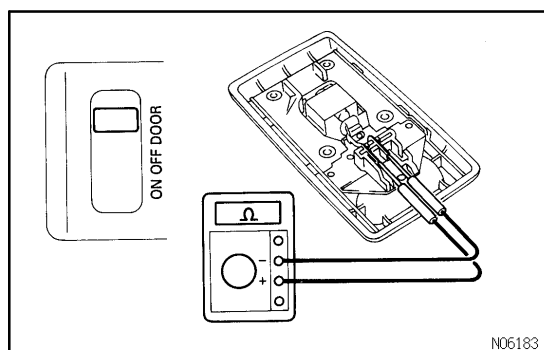

- (c) Turn the room light switch DOOR, and check that there is continuity between terminal 1 and 2.
If operation is not as specified, replace the switch.