


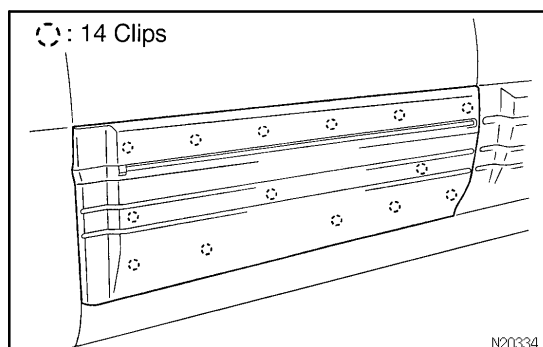

## REMOVAL

### 1. REMOVE FRONT DOOR OUTSIDE MOULDING

- (a) Using a heat light, heat the moulding to 40 – 60°C (104 – 140°F).


#### NOTICE:

**Do not heat moulding excessively.**

- (b) Cut the adhesive tape with a knife.


#### NOTICE:

- If reusing the moulding, take care not damage the moulding.
  - Do not damage the body.
- (c) Remove the moulding.

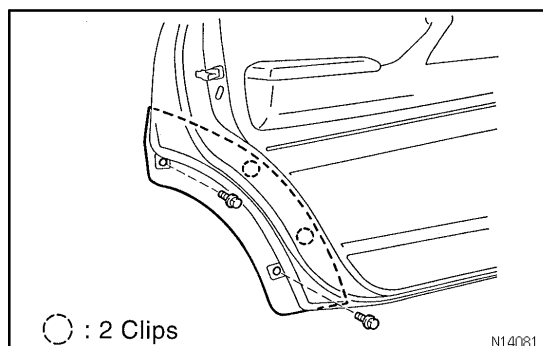

### 2. REMOVE REAR DOOR OUTSIDE MOULDING

- (a) Remove the 2 screws.

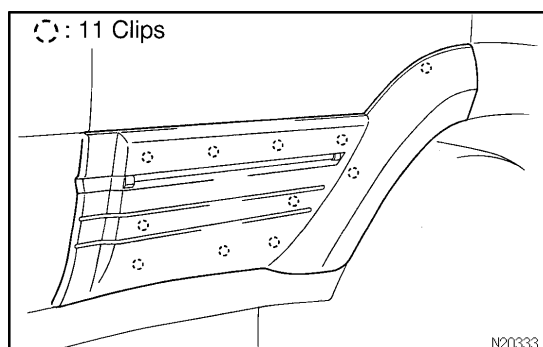

- (b) Remove the rear door outside moulding.

#### HINT:

Remove the rear door outside moulding in the same way as the front door outside moulding.