


REMOVAL

1. REMOVE THESE PARTS:

- (a) Charcoal canister
- (b) Air cleaner case assembly
- (c) Cool air intake duct
- (d) Front wheel
- (e) Front bumper extension


2. REMOVE FRONT MUDGUARD

Remove the 3 screws and front mudguard.

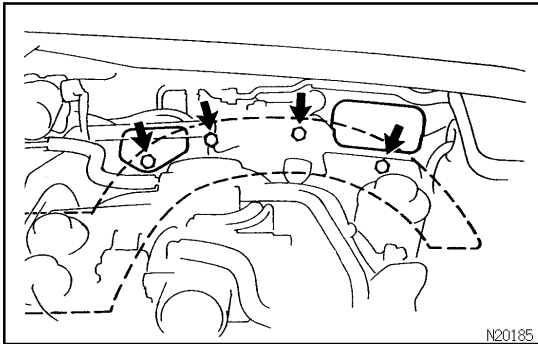

3. REMOVE FRONT FENDER WHEEL OPENING MOULDING

- (a) Remove the 4 nuts from engine room inside service hole.

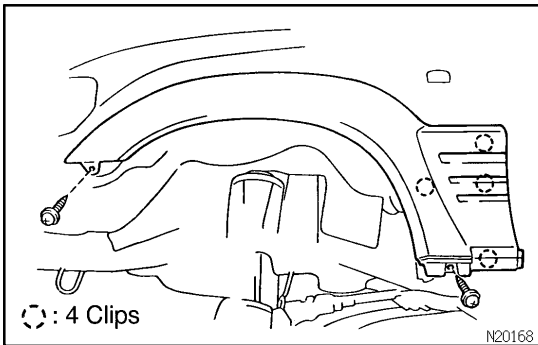

- (b) Remove the 2 screws.

- (c) Remove the front fender wheel opening moulding.

HINT:

Remove the front fender wheel opening moulding in the same way as the front door outside moulding.