


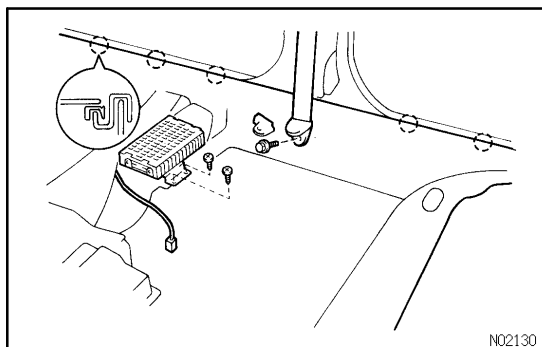

REMOVAL

1. REMOVE THESE PARTS:

- (a) Front seats (See page [BO-114](#))
Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)
- (b) No.1 and No.2 rear seats (See page [BO-120](#) [BO-121](#))
- (c) Cowl side trims
- (d) Rear door scuff plates
- (e) Footrest
- (f) Step plates
- (g) Front seat belt lower anchor bolts
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
- (h) Center pillar lower garnishes
- (i) Rear seat side garnishes
- (j) Quarter trims
- (k) Back door scuff plate
- (l) No.1 rear seat belt lower anchor belts
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
- (m) No.2 rear seat belt floor anchor belts
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
- (n) Rear Console box garnish
- (o) Rear Console box

2. REMOVE FLOOR CARPET

- (a) Remove the rear floor carpet.
- (b) Remove the quarter wheel house covers.
- (c) Remove the front floor carpet.