



FRONT BUMPER COMPONENTS

B03E7-01

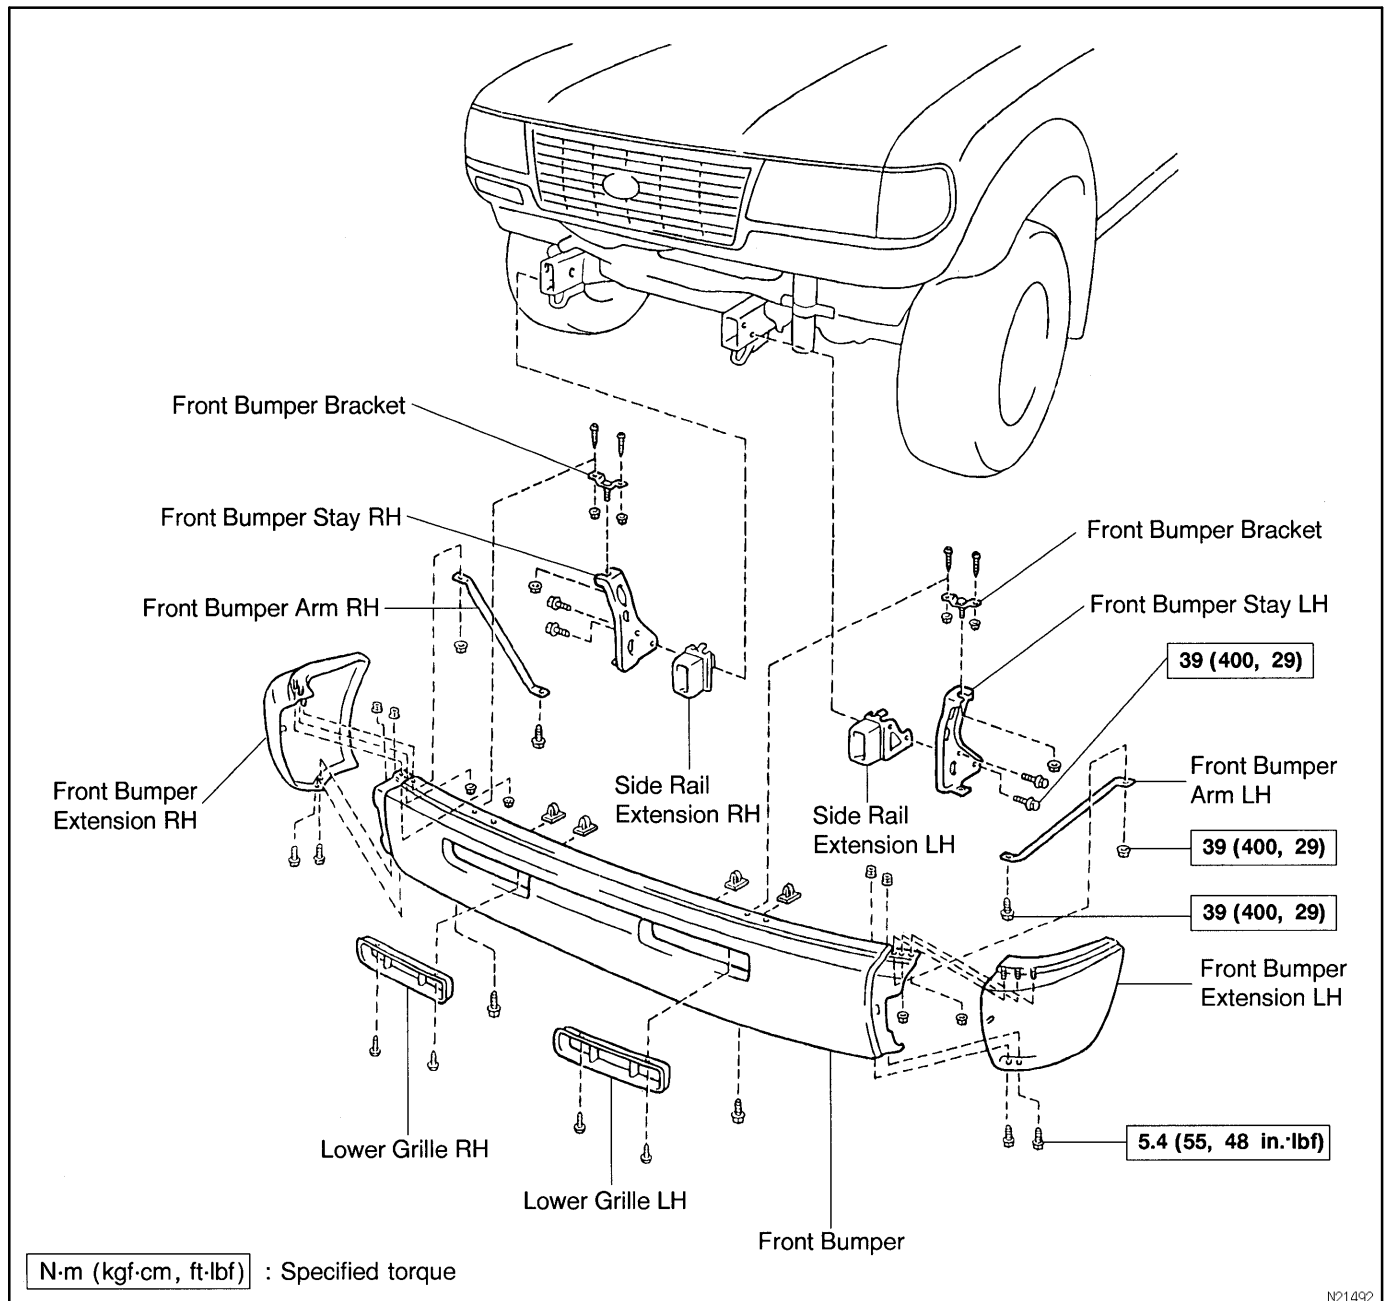

N21492

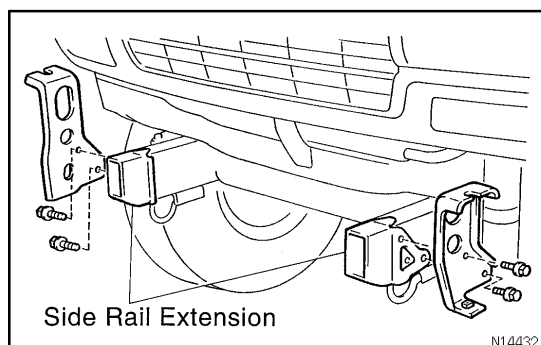

N14432

CAUTION:

- The side rail extensions are necessary for normal functioning of the SRS airbag, so make sure that they are correctly installed.
- When replacing the bumper, always inspect the side rail extensions. If they are deformed or cracked, replace them.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)