


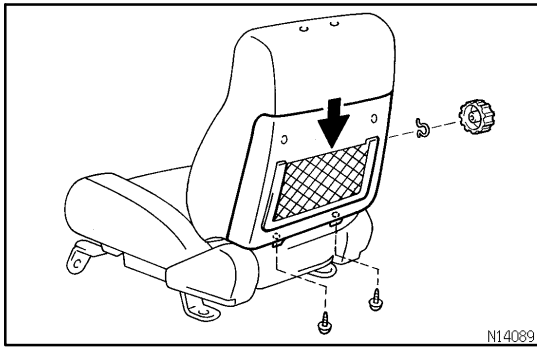


REMOVAL

1. **REMOVE FRONT SEAT HEADREST**
2. **REMOVE SIDE SUPPORT ADJUSTER KNOB**

Using a screwdriver, remove the snap ring and side support adjuster knob.

3. **REMOVE SEATBACK BOARD**

- (a) Remove the 2 screws.
- (b) Slide the board downward to remove it.

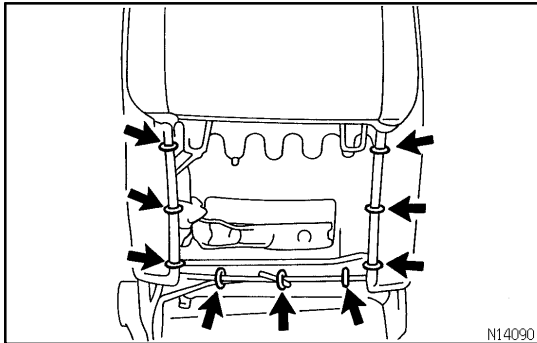

4. **REMOVE FRONT SEATBACK ASSEMBLY**


- (a) Using a hog ring pliers, remove the hog ring backward of seatback.
- (b) Remove the 4 bolts and front seatback assembly.

Torque: 30 N·m (300 kgf·cm, 22 ft·lbf)

5. **REMOVE FRONT SEAT CUSHION INNER SHIELD**

6. **REMOVE FRONT SEAT INNER BELT**

7. **REMOVE FRONT SEAT CUSHION SHIELD**

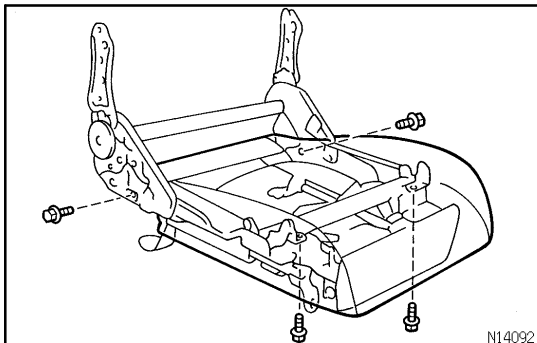

8. **REMOVE FRONT SEAT CUSHION**

- (a) Remove the 4 bolts.

Torque: 30 N·m (300 kgf·cm, 22 ft·lbf)

- (b) Disconnect the connector, then remove the front seat cushion.

9. **REMOVE SEAT CUSHION REAR PROTECTOR**

10. **REMOVE RECLINING ADJUSTER INSIDE COVER**

Remove the 4 screws and reclining adjuster inside cover LH and RH.