


INSTALLATION

1. INSTALL THESE PARTS:

- (a) Wiper link
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)
- (b) Wiper motor
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)
- (c) Cowl louver

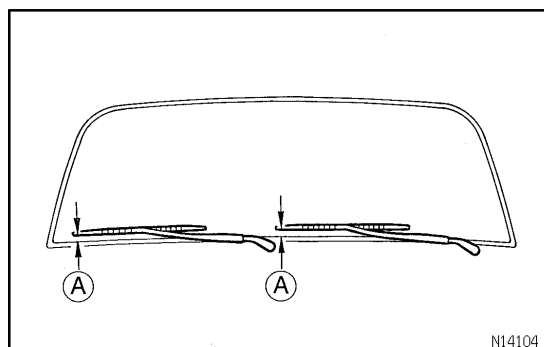

2. INSTALL FRONT WIPER ARMS

- (a) Install the wiper arms and operate the wipers once and turn the wiper switch OFF.
- (b) Adjust the installation positions of the wiper arms to the positions as shown in the illustration.
"A" Approx. 25 mm (0.98 in.)
- (c) Torque the nut.
Torque: 20 N·m (210 kgf·cm, 15 ft·lbf)