



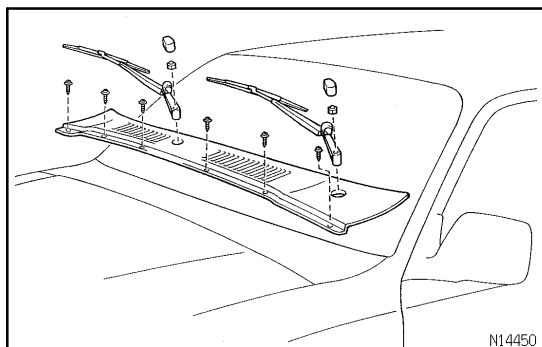

REMOVAL

1. REMOVE THESE PARTS:

- (a) Wiper arms
- (b) Cowl louver

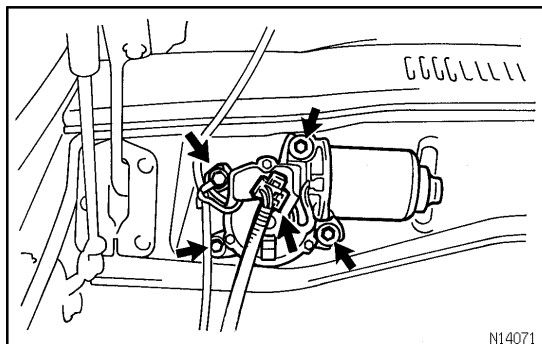

2. REMOVE WIPER MOTOR AND WIPER LINK

- (a) Disconnect the connector, then unfasten the 4 bolts and wiper motor.
- (b) Remove the wiper link.