


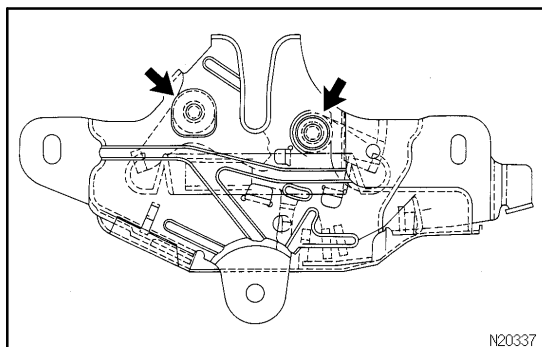

INSTALLATION

1. BEFORE INSTALLING PARTS, COAT LOCK WITH MP GREASE

Apply MP grease to the sliding surface of the lock.

2. INSTALL HOOD LOCK CONTROL CABLE

- (a) Pass the front side cable through the upper radiator support.

NOTICE:

When installing the cable, be careful not to bend it too sharp.

- (b) Tie the cable with the wire harness.

3. INSTALL HOOD LOCK RELEASE LEVER

- (a) Connect the cable to the lever.
- (b) Install the 2 screws and lever.

4. CHECK HOOD LOCK CONTROL FOR PROPER OPERATION

After checking for proper operation, torque the 3 bolts to install the lock.

Torque: 7.8 N·m (80 kgf·cm, 69 in.·lbf)

5. INSTALL RADIATOR GRILLE

Install the 5 screws and radiator grille.